




www.vintageair.com

Packing List: 1969-72 Chevrolet Nova Modified Hose Kit (526675)

No.	Qty.	Part No.	Description
1.	1	086072	Hose, #6 A/C, Drier/Evaporator, Modified
2.	1	090164	Hose, #8 A/C, Condenser/Compressor, Modified
3.	1	096074	Hose, #10 A/C, Compressor/Evaporator, Modified
4.	2	33857-VUF	O-ring, #6
5.	2	33858-VUF	O-ring, #8
6.	2	33859-VUF	O-ring, #10
7.	1	41117-VUP	Refrigerant Oil
8.	5	21300-VUP	Tie Wrap, 11"
9.	1	35831-VUG	Fitting, #6, 90°
10.	1	35532-VUG	Fitting, #8, 90° with Service Port
11.	1	35543-VUG	Fitting, #10, 135° with Service Port
12.	1	18250-VUB	Screw, 10-32 x 1/2"
13.	1	18251-VUB	Nut with Star Washer, 10-32
14.	1	31601-VUD	Adel Clamp, #10
15.	1	900002	Instruction, Modified Hose Kit

Checked By: _____
Packed By: _____
Date: _____

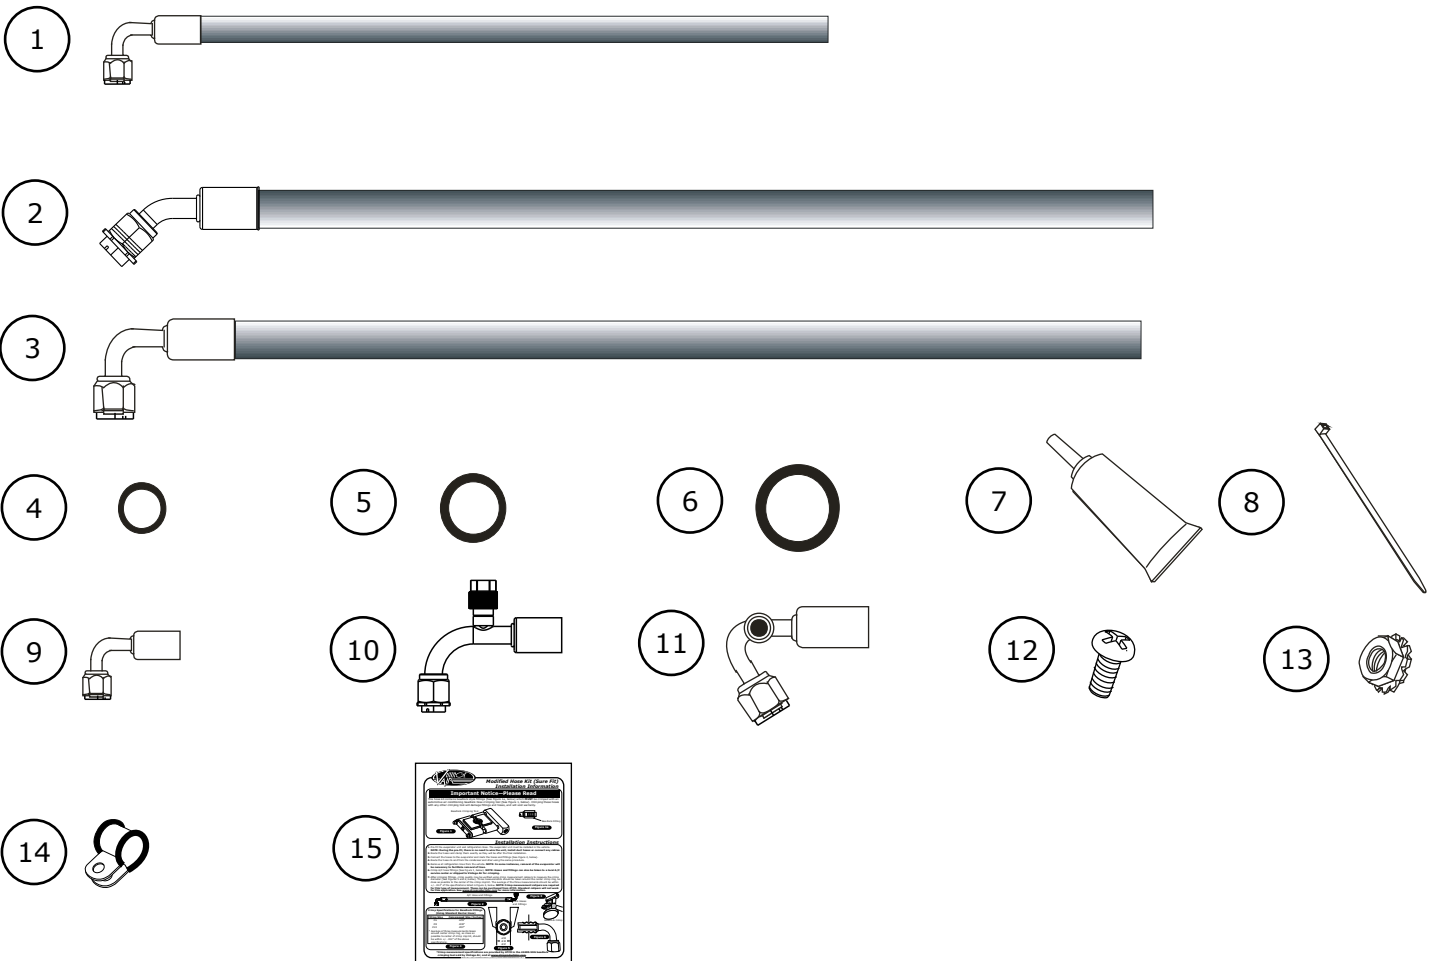

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**