


INSTALLATION INSTRUCTIONS


OVAL DROP STEP

STEELE CERRAFT


No.	Name	Qty	Remarks	No.	Name	Qty	Remarks
1	Oval tube with step pad	1		7	Hex bolt	2	3/8 " -16-1 "
2	Drop step bracket left side	1		8	Flat washer	4	10mm
3	Drop step bracket right side	1		9	Spring washer	2	10mm
4	Hex bolt	4	5/16 " -18-5/4 "	10	Hex nut	2	3/8 " -16
5	Flat washer	8	8mm	11	Hex bolt	4	5/16 " -18-1 "
6	Spring washer	8	8mm				

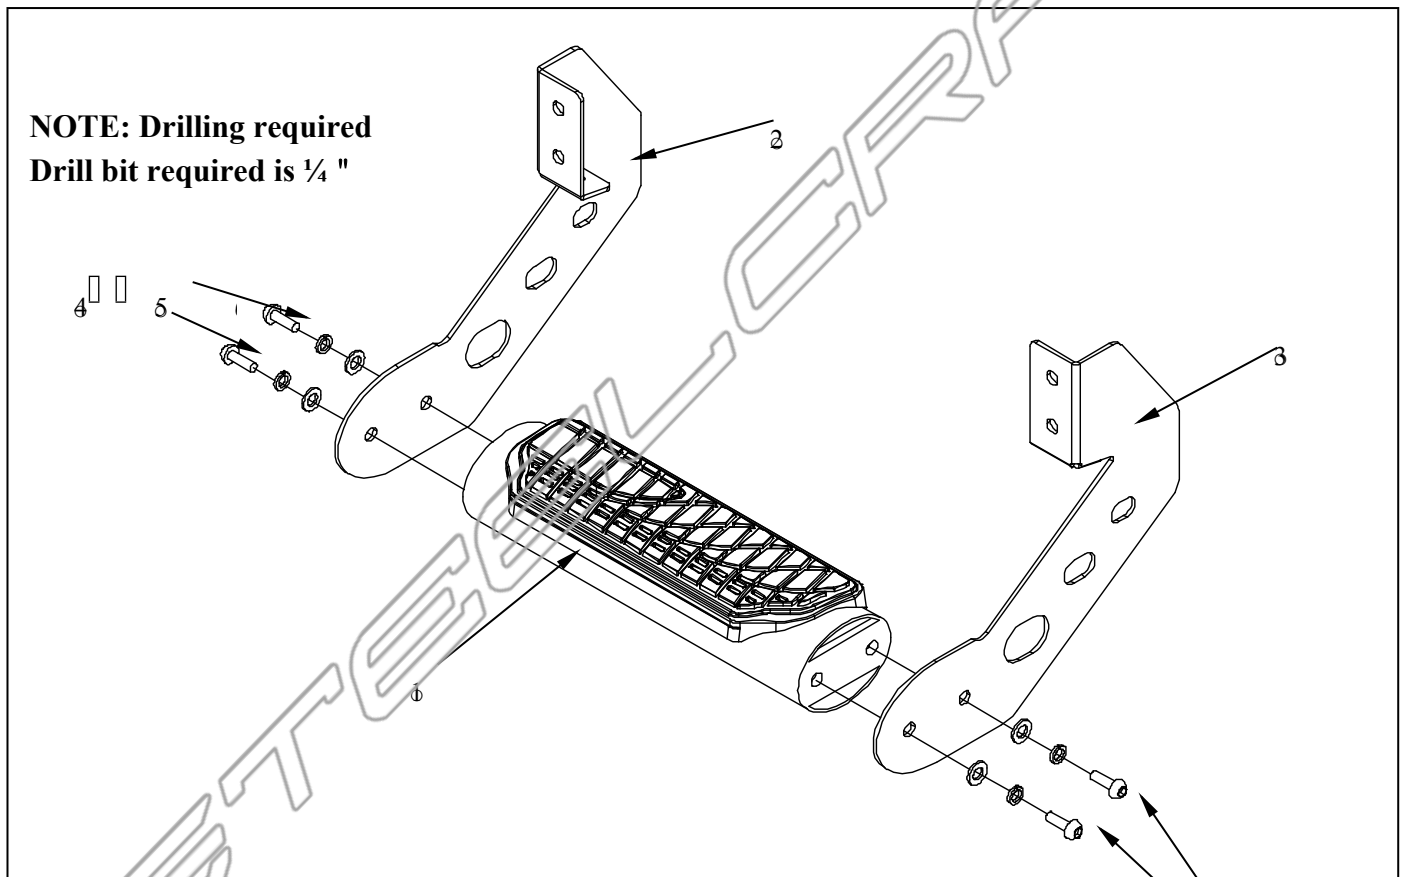

**INSTALLATION DIAGRAM FOR:
LATE MODEL DODGE
EARLY MODEL CHEVY**

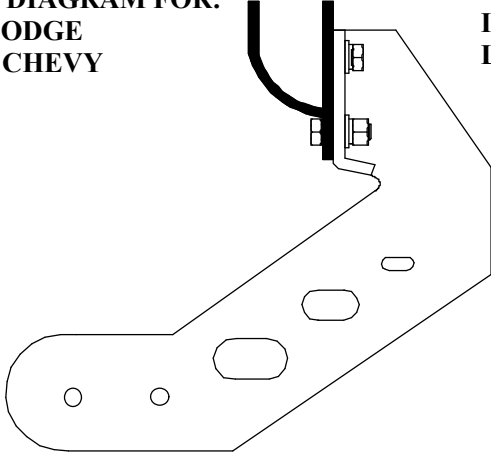

**INSTALLATION DIAGRAM FOR:
LATE MODEL CHEVY AND FORD**

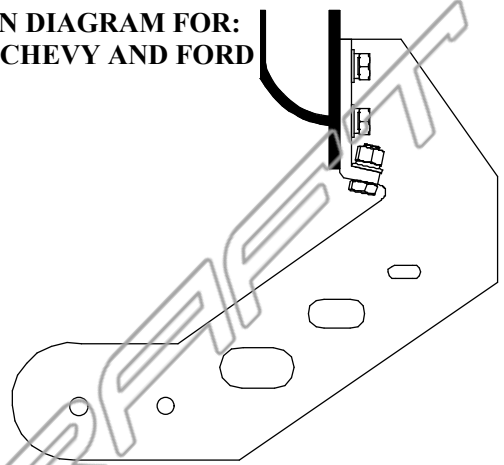

STEEELCRAFT