



AUTOMOTIVE PRODUCTS,

INSTALLATION INSTRUCTIONS

SNYPER TRIPLE TUBE ROCK RAIL

APPLICATION:

2007-2016 Jeep Wrangler 2 Door

2007-2016 Jeep Wrangler Unlimited 4 Door



PART NUMBER:

42-6005, 42-6015

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	DRIVER ROCK RAIL	15MM SOCKET
2	1	PASSENGER ROCK RAIL	15MM WRENCH
3	12	M10 FLAT WASHERS (YELLOW ZINC)	RATCHET
			TORQUE WRENCH

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

Driver/Passenger Side Items Opposites

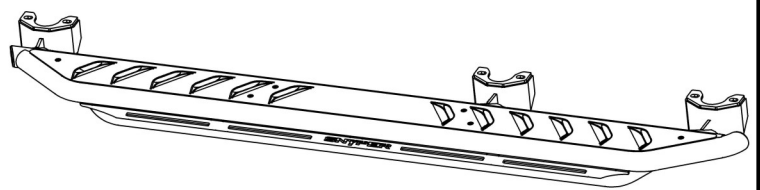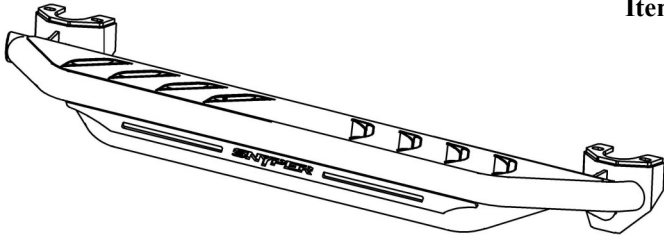

ITEM 1

2 DOOR

ITEM 1

4 DOOR

PROCEDURE

- Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
- Locate mounting location on the vehicle frame. **See Figure 1. Note:** The 2 door Jeep model will have 2 mounting locations each side and the 4 door model will have 3 mounting locations each side.
- Remove (2) factory M10 nuts on each mounting location. Align the Sidearm Rock Slider (Item 1/2) with the mounting locations and loosely secure using the provided M10 flat washers (Item 3) and the factory M10 nuts. **See Figure 2. Note:** There will be extra M10 flat washers for the 2 door Jeep model that will not be used.
- Align and adjust the Rock Rail as necessary and then tighten M10 hardware to 30-35 ft-lbs.

Align Snyder Rock Rail onto factory bolts after removing the factory M10 nuts.

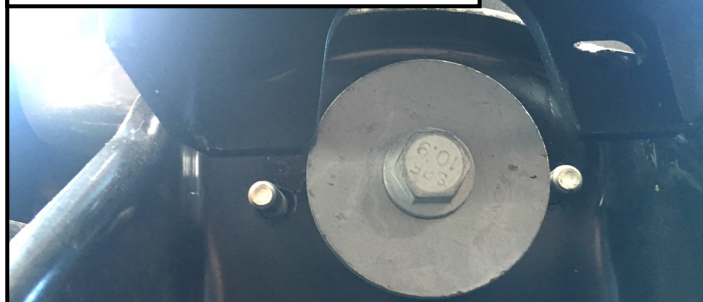



Figure 1

Mounting Location



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products for additional installation assistance please call Customer Service (800) 793-7846

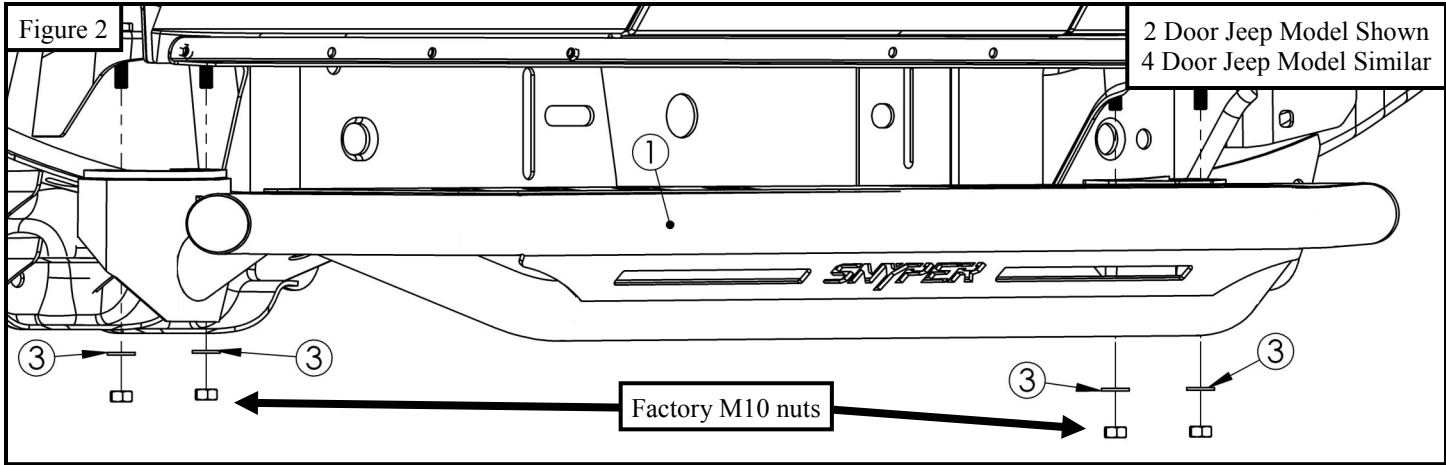

INSTALLATION COMPLETE



CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846

www.westinautomotive.com

Westin

SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY:

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

Westin
SIGNATURE OF QUALITY

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773