

FLOWMASTER™

AMERICAN THUNDER™ SYSTEM #17228

**1989-92 CHEVROLET CAMARO/PONTIAC FIREBIRD
V8 ENGINES WITH DUAL CATALYTIC CONVERTERS.**

October 21, 2002

Removal:



- 1) Raise the rear of the vehicle and support with jack stands.
- 2) Support the stock muffler with a stand. Then using a hacksaw or sawsall, cut the over-axle pipe where it enters the muffler case. Also unbolt the left side tailpipe hanger from the rubber mount and remove the muffler/tailpipe assembly from underneath the vehicle.
- 3) Cut the exhaust pipe in front of the axle. (See figure A.) Then remove the two bolts that secure the over-axle pipe hanger to the frame. Save these two bolts and the rubber hanger for reuse with the Flowmaster system. Remove the over-axle pipe from the vehicle.
- 4) Disconnect the remaining section of the system by cutting the stock Y-pipe behind the catalytic converter outlets. Remove this section from under the vehicle. (See figure B.)

Installation:

- 1) Slip the Flowmaster Y-collector #Y-16078 onto the catalytic converter outlets.
- 2) Slip intermediate pipe #26103 onto the rear of collector pipe #Y-16078 and support with a stand. Clamp lightly with one of the clamps provided.
- 3) Place the stock hanger removed in step three above onto the hanger welded to the over axle pipe #26088. Slide the pipe over the axle from the rear and onto pipe #26103, reconnect the hanger to the frame using the stock bolts.
- 4) Place the inlet of muffler 530831 onto the end of pipe #26088. Then install the left tailpipe # 26102 by sliding the tailpipe into the muffler outlet, then attach the tailpipe to the stock rubber hanger using the 5/16" bolt, nut and washers. Install a 3" clamp, tighten enough to hold in place but still allow for adjustment.
- 5) Install the right tailpipe # 26097 by sliding the pipe into the muffler outlet. Install a 3" clamp, tighten enough to hold in place but still allow for adjustment.
- 6) Adjust the position of the pipes and the muffler to provide a satisfactory fit. Now all the connections can be tightened down securely. Try to keep at least 3/4" clearance around all parts of the system to avoid any rattles. Also keep suspension travel in mind.

NOTE: FLOWMASTER RECOMMENDS WELDING ALL SLIP FIT CONNECTIONS.

*FLOWMASTER AMERICAN THUNDER SYSTEM #17228
 1989-92 CHEVROLET CAMARO/PONTIAC FIREBIRD
 (V8 ENGINES WITH DUAL CATALYTIC CONVERTERS)*

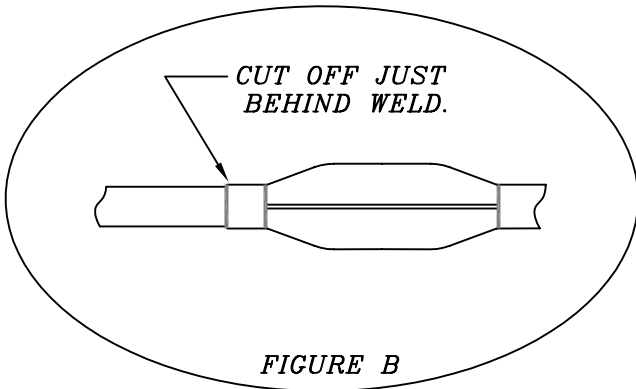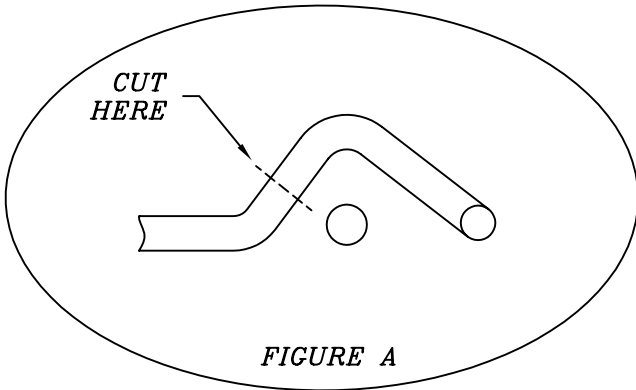

PACKING LIST

QTY.	PART#	DESCRIPTION
1	Y-16078	Y-PIPE ASSEMBLY
1	26103	INTERMEDIATE PIPE
1	26088	OVER-AXLE PIPE
1	530831	MUFFLER
1	26102	RIGHT TAILPIPE
1	26097	LEFT TAILPIPE
1	PK402	PARTS KIT
2	MC250S	2-1/2" CLAMP
5	MC300G	3" CLAMP
1	5/16" X 1-1/4" HEX BOLT	
1	5/16" HEX NUT	
1	5/16" LOCK WASHER	
1	5/16" FENDER WASHER	

