




Ford Fender Flares Front Pair

Part #20137-02

Component List:

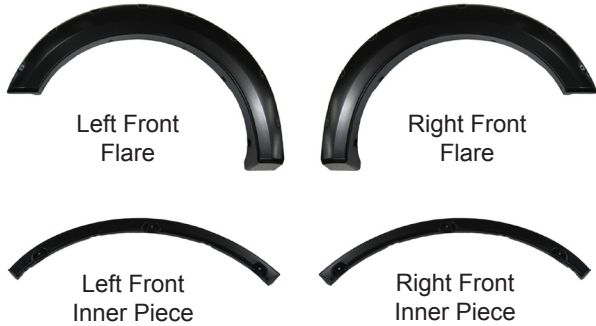

Included in Hardware Kit:

- 

SW1-0067,
5/16 x 18 x 3/8"
SS Torx Screw,
(Pocket Style Only)
16 pcs
- 

WA1-0012,
.320 x .700 x .03
SS Washer,
(Pocket Style Only)
16 pcs
- 

NU1-0019,
5/16-18 Jam Fin.
Nylock Nut,
(Pocket Style Only)
16 pcs
- 

SW1-0052,
T-45 Torx Bit,
(Pocket Style Only)
1 pc
- 

SW1-0058,
#10 x 5/8" Phillips
SS Truss Screw,
8 pcs
- 

CL1-0009,
Long "U" Clip,
Magni 565
2 pcs
- 

MT1-0034,
1" x 1.5" x .06"
Blk 3M Foam Tab,
2 pcs
- 

ET1-0002,
Edge Trim Tool,
1 pc
- 

GP1-0025
Edge Trim
10.