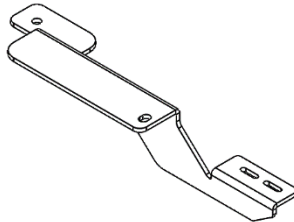
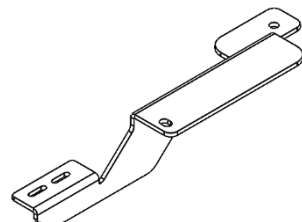
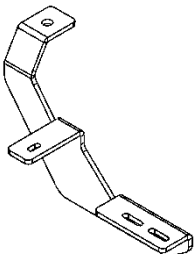
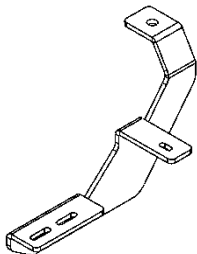
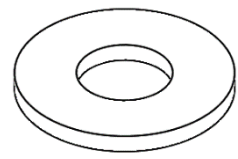
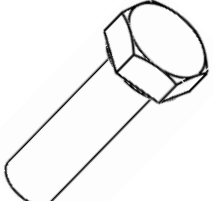
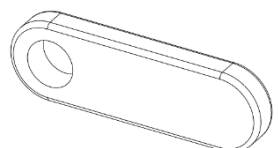
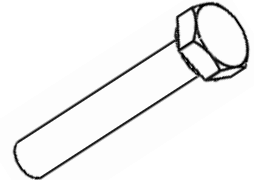

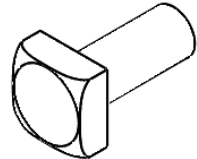
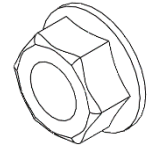


DZ 16275 Installation Instructions

Kia Telluride

	<p>B Driver Front Bracket</p>  <p>B 2804LP X1</p>	<p>C Passenger Front Bracket</p>  <p>B 2804RP X1</p>
<p>D Driver Rear Bracket</p>  <p>B 2805LP X1</p>	<p>E Passenger Rear Bracket</p>  <p>B 2805RP X1</p>	<p>F M10 Flat Washer</p>  <p>PN 113B X6</p>
<p>G M10-1.5 X 35mm Hex Bolt</p>  <p>PN 744B X6</p>	<p>H M10 Thread Plate</p>  <p>PN 742 X6</p>	<p>I M6-1 X 35mm Hex Bolt</p>  <p>PN 743 X2</p>
<p>J M6 Washer</p>  <p>PN 785B X4</p>	<p>K M8 Square Head Bolt</p>  <p>PN 524 X8</p>	<p>L M8-1.25 Hex Nut</p>  <p>PN 526 X8</p>

