


Installation Instructions for 50610
SB-Chevy Mid-Mount Alternator Kit
For Alternators: 555-10172 & 358-2002

| Description | QTY | 10172 | 2002 |
|--|-----|-------|------|
| Bracket - Alt Mount - BBC Mid - LH Lrg | 1 | X | X |
| Bracket - Alt Mount - BBC Mid - LH Sml | 1 | X | X |
| Spacer - 1.250" | 2 | | A |
| Spacer - 0.875" | 2 | | B |
| Spacer - 2.000" | 2 | C | |
| Spacer - 0.125" | 2 | D | |
| 7/16"-14 x 3-3/4" Bolt | 2 | X | X |
| 3/8"-16 x 2-1/2" Bolt | 1 | X | X |
| M8 x 35 Bolt | 1 | X | X |
| 7/16" Flat Washers | 2 | X | X |
| 7/16" Lock Washers | 2 | X | X |
| 5/16" Flat Washers | 2 | X | X |
| M8 Nut | 1 | X | X |
| 3/8" Nylock Nut | 1 | X | X |
| 3/8" Flat Washers | 2 | X | X |

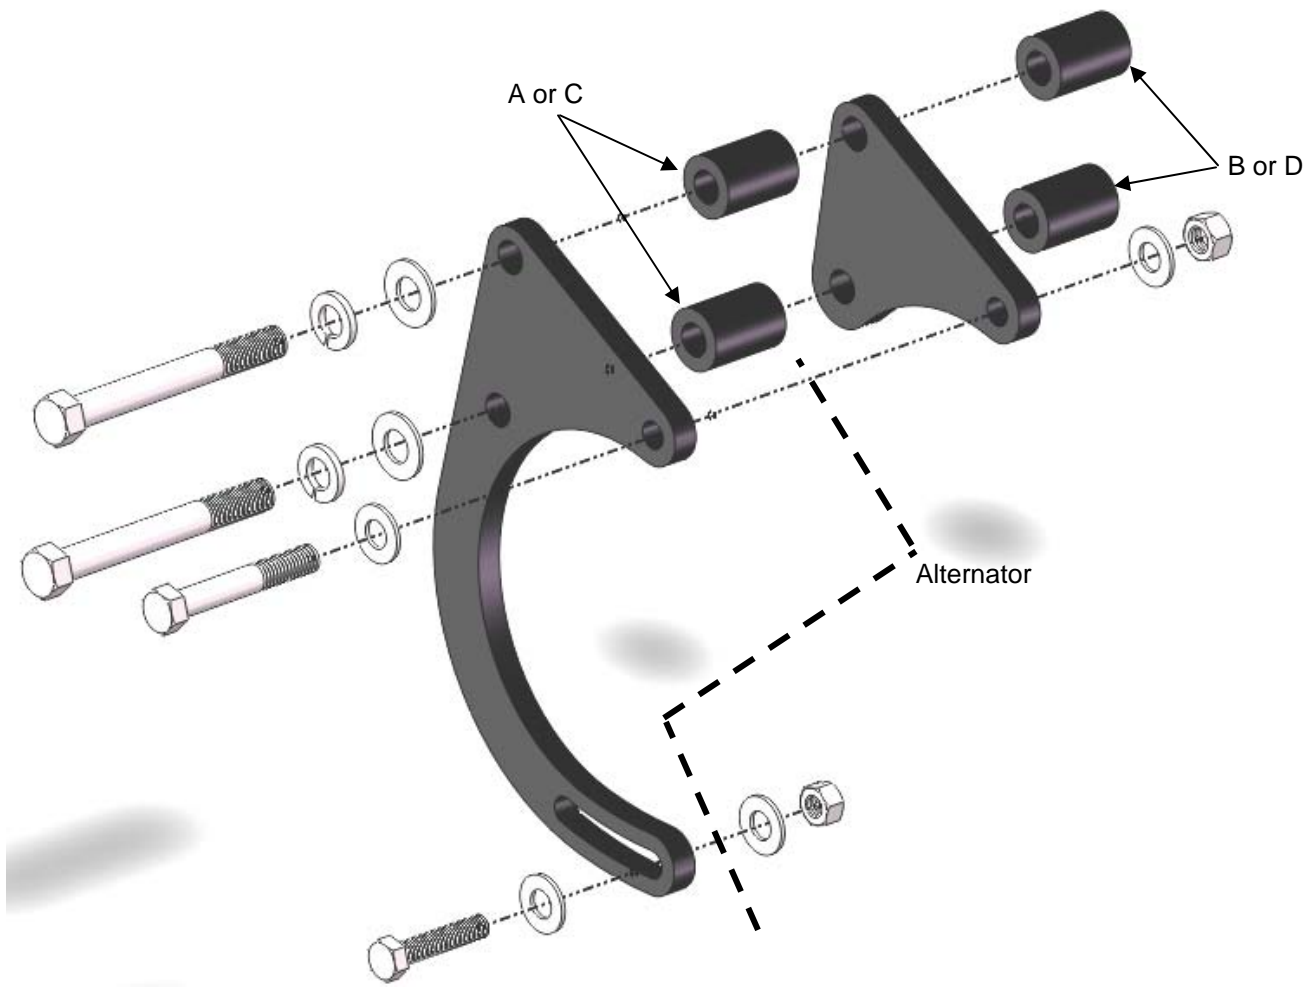

1-800-345-4545 jegs.com