




## INSTALLATION INSTRUCTIONS #201-783 AIRAID JR. KIT '03-'09 HUMMER H2, '05-'09 HUMMER SUT

Thank you for purchasing the Airaid Modular Intake Tube. Please read this instruction manual carefully before proceeding with the installation. Contact Airaid @ 800-498-6951 8:00 AM – 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Modular Intake Tube was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact Airaid.

***THANK YOU FOR SELECTING AIRAID.***

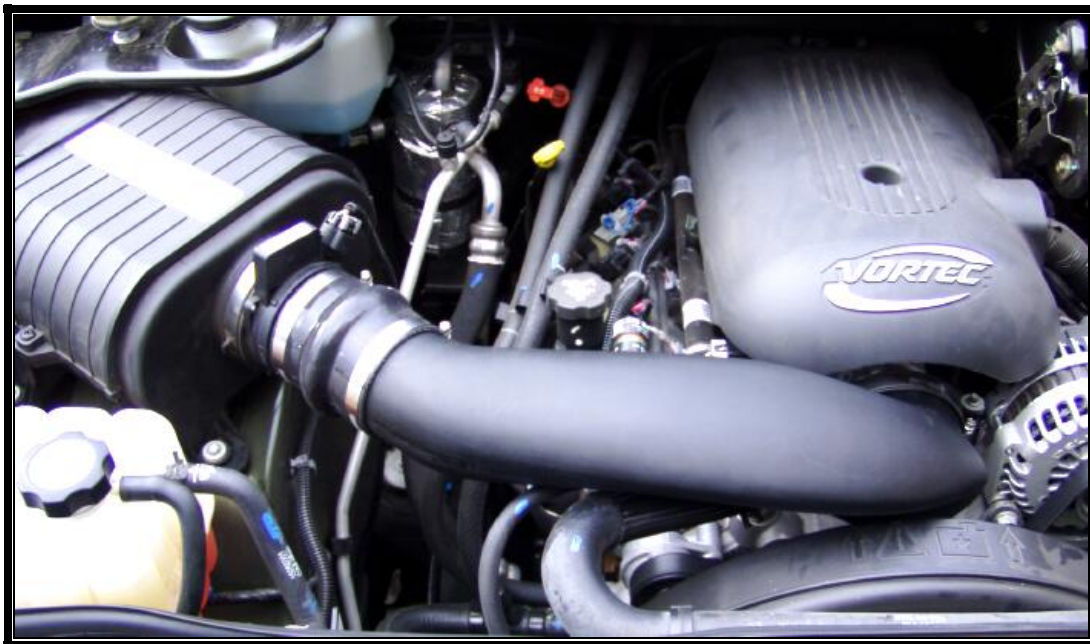

### **Packing List:**

KIT983T	Modular Intake Tube	1
721-182	Airaid Premium Filter	1
KITHUMPHS02	Urethane Hump Hose	1
KITCOUPLER02	Coupler W/#68 Clamp	1
KITHS60	#60 Hose Clamp	2

### **Tools Required for this Installation:**

Flat Head Screwdriver



# Installation Instructions. Read Me!

## I DISCONNECT NEGATIVE (-) BATTERY CABLE

### II Remove Factory Intake Assembly

- Remove factory filter minder and rubber grommet and retain for re-installation. See Fig #1
- Loosen the factory hose clamps on each end of the factory intake tube assembly. See Fig #2
- Remove the factory intake tube assembly from vehicle. See Fig #2

### III Airaid Modular Intake Tube Installation

- Install the provided coupler with clamp onto the Airaid Modular Intake Tube (MIT). See Fig #3
- Install the urethane hump hose provided onto the Airaid Modular Intake Tube (MIT) with the supplied hose clamps. (Hint: slide the hump hose all the way onto the end of the MIT. See Fig #4
- Install the Airaid MIT in place of the factory intake tube assembly. See Fig #5
- Re-install factory filter minder and rubber grommet into rear of Airaid MIT. See Fig #6
- Check for interference and adjust the MIT accordingly, then tighten the hose clamps.

### IV Airaid Jr. P/N 201-783 Replacement Filter

- If you purchased the Airaid Jr. kit P/N 201-783, replace the factory air filter with the Airaid Premium Filter included in the Airaid Jr. kit.

### V Finishing Up

- Make sure that the intake path is clear of debris.
- Double check work to ensure proper fit and that all clamps are securely fastened.
- Re-connect negative battery cable.

Figure #1



Figure #2

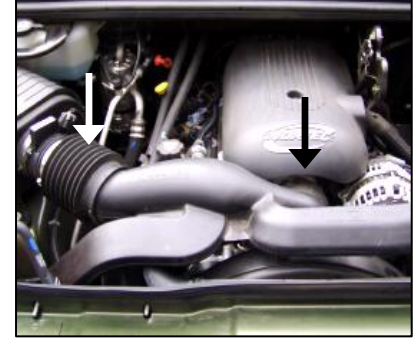


Figure #3

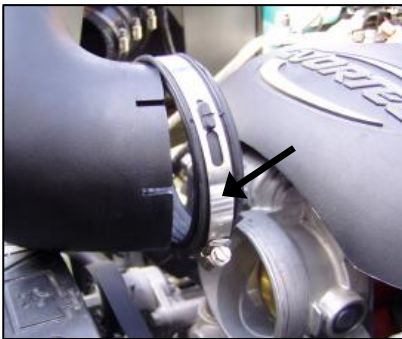



Figure #4



Figure #5



Figure #6

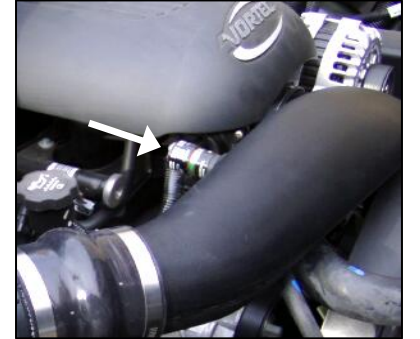

**Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.**

**SynthaMax**

**Do Not Oil**

Rev.10/26/10