



## Installation Instructions

For Part Number: 350-993

6.1L Hood Scoop Option for Airaid intake systems:

350-193 350-199

351-193 351-199

352-193 352-199

353-193 353-199


2006-10 Dodge Charger SRT-8/Super Bee

2008 Dodge Magnum SRT-8

6.1L V8 With Hood Scoop

### Component Identification

1.	Hood Scoop Tube	1
2.	8-32 x 3/8" Button Head Screw	3
3.	#8 Flat Washer	3
4.	1/4 - 20 Button Head Bolt	1
5.	1/4" Flat Washer	1
6.	L-Bracket	1

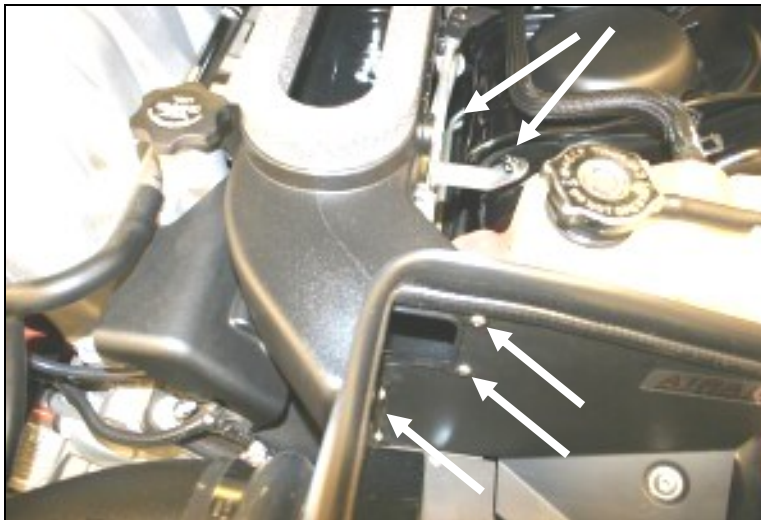

Install the hood scoop into the CAD using three 8-32 x 3/8" button head screws (#2), and three #8 flat washers (#3), leave loose. Install the L-bracket (#6) over the stud on the fender, and bolt it to the hood scoop using the 1/4-20 button head bolt (#4), and 1/4" flat washer (#5). Replace the factory nut on the stud, adjust for fit, and tighten all bolts, nuts, and screws.