



**Installation Instructions**  
**Part Number 450-610**  
**Poweraid Spacer For**  
**2005-09 Ford Mustang GT**  
**4.6L V-8**



**Parts List**

#1	Poweraid Spacer	x1
#2	6mmx50mm Bolts	x4
#3	6mm Flat Washers	x4
#4	Fiber Gasket	x1

**Tools Required For Installation**

5/16" Deep , 10mm, Sockets  
Ratchet and Extension  
10mm Wrench


Thank you for purchasing the Poweraid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your Poweraid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

Included with your Poweraid Spacer is a sticker with a **California Air Resources Board (C.A.R.B.) Executive Order (EO) number**. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.


*Thank you for selecting AIRAID.*




1. **Disconnect the negative battery cable!**  
Using a 5/16" socket, loosen two hose clamps that hold the intake tube between the throttle body, and the air cleaner lid.  
Turn the green tab, and disconnect the breather hose from the air intake tube. Remove the tube from the vehicle.

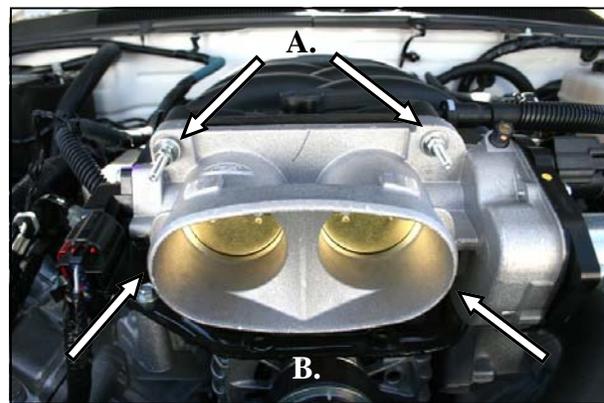

2. Remove beauty cover on top of intake manifold if equipped. (2008-09)  
A). Using a 5/16" deep socket, remove two studs from the top of the throttle body.  
B). Using a 10mm socket, remove two nuts from the studs on the bottom of the throttle body.  
Flip the throttle body out of the way.

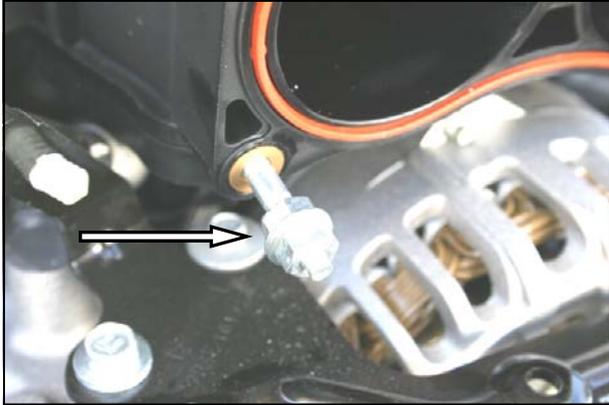


3. Using the two nuts removed in step #2, install them as shown, on one of the studs, snug them together, and then turn the nut closest to the manifold, and remove the stud. Repeat the procedure on the second stud.

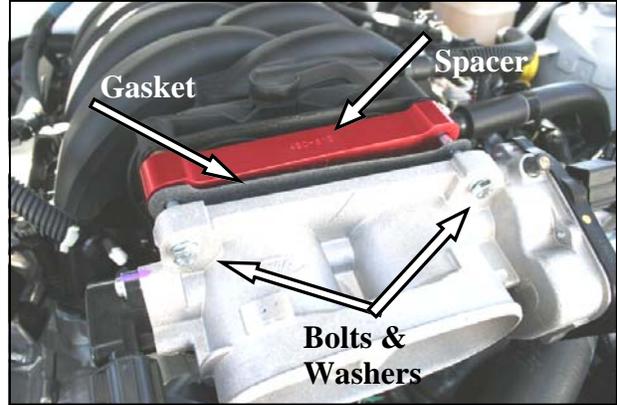

4. Install two bolts (#2), and washers (#3) thru the throttle body, thru the gasket (#4), thru the Poweraid Spacer (#1), and into the intake manifold as shown. **Use caution to retain the factory o-ring gasket on the plastic intake manifold.**

Next install the remaining bolts in the bottom holes of the throttle body, and tighten evenly to the manufacturer's specifications. **Do Not Over Tighten The Bolts!**

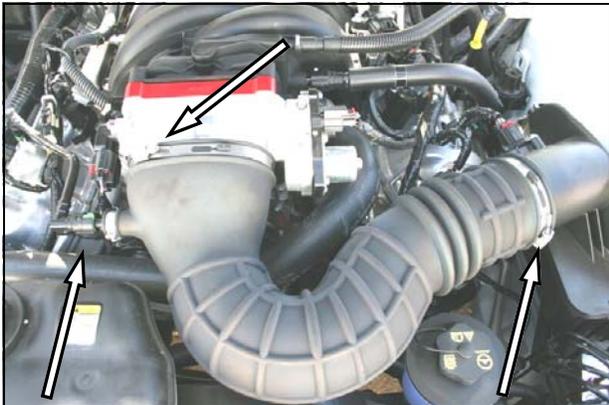

5. Reinstall the intake tube, and tighten the hose clamps. Reconnect the breather hose to the intake tube.

6. Inspect & test the throttle linkage for full open and closed travel before driving. Some cruise and kickdown cables may require adjustment. Please refer to vehicles service manual for proper adjustment.

7. Re-connect the negative battery cable!



*The sound of power...The "whistle" means its working!*

Contact your nearest Airaid dealer for an Airaid Intake System for your car, truck or SUV.



Instructions Revision  
07/15/08

AIRAID Filter Co. 2688 E Rose Garden Ln. Phoenix AZ 85050 (800) 498-6951 Airaidinfo@airaid.com www.airaid.com