



P.O. Box 1719  
 Corona, CA 92878  
 Support: 951-493-7100  
 www.aFeFilters.com

# Intake Kit Installation Instructions: '01-'04 Ford Escape / Mazda Tribute V6-3.0L


<b>Kit Part #</b> 51/54-10031	<b>Tools Required:</b> 8mm socket 10mm socket or wrench 5/16" nut driver Flathead screwdriver Ratchet and extension	<b>Part List:</b> 1 Air filter part # 24-90007 or Pro Dry S™ # 21-90007 1 Billet air filter adaptor 1 Air filter support bracket 5 M6 x 1 x 20 Screws 1 M6 nut 5 M6 Wavy washers	
<b>Make:</b> Ford			
<b>Model</b> Year Engine			
Escape '01-'04 V6-3.0L			
<b>Make:</b> Mazda			
<b>Model</b> Year Engine			
Tribute '01-'04 V6-3.0L			



**Step 1**  
 Complete kit with parts. Please confirm Parts List and read all instructions steps before proceeding with actual installation.



**Step 2**  
 Complete stock intake.

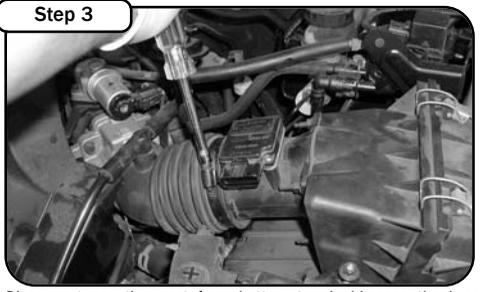

**Step 3**  
 Disconnect negative post from battery terminal. Loosen the hose clamp on the intake duct. Disconnect the MAF sensor by pushing down on the clip and pulling out.




**Step 4**  
 Unclip the two mounting clips located on the side of the airbox. Lift the top half of the airbox out and remove..



**Step 5**  
 Remove the 10mm bolt that supports the other half of the airbox and remove the rest of the airbox.



**Step 6**  
 Detach the MAF sensor from the housing by removing the four 10mm screws.

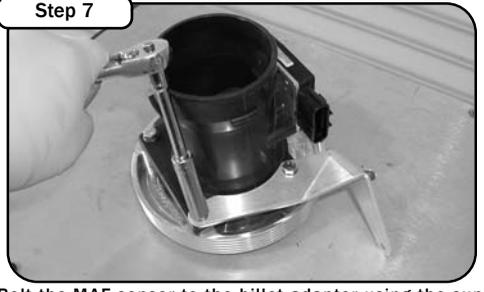

**Step 7**  
 Bolt the MAF sensor to the billet adaptor using the supplied M6 screws and washers. On the right side of the sensor place the aluminum bracket and fasten to assembly as shown in photo.



**Step 8**  
 Remove the 10mm bolt supporting the battery strap. Position the intake assembly into the engine bay. Line up the hole on the bracket with the battery bracket as shown, reinstall bolt and tighten bolt to secure assembly.



**Step 9**  
 Reconnect the Maf sensor and tighten down the hose clamp on the intake pipe



**Step 10**  
 Install the pre-oiled filter in the housing and tighten down clamp. DO-NOT use any oil or grease.



**Step 11**  
 Make sure all clamps are tight and that all electrical components are secure. Re-check and after a few hours of operation. Place the included CARB EO Sticker on or near the intake system on a smooth, clean surface. E.O. identification label is required in passing the Smog Check Inspection.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe "Restore Kit" aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil on Filter Replacement: PN: 24-90007 (black w/blue media). Pro Dry S™ P/N: 21-90007 (black w/white media) Pro Dry S™ cleaning: see cleaning instruction sheet 06-00074.