



## REAR END STATION BRACKETS


### ASSEMBLY

#### Kit Contents:

- (2) Main Support Brackets
- (2) Clamp Jaws
- (4) 1/2"-13 x 3" (Partial Threaded Bolts)
- (2) 1/2"-13 x 4" (Fully Threaded Bolts)
- (8) Hex Nuts
- (4) Washers



- 1.) Attach main support brackets to engine stand with (4) 3" bolts, washers and hex nuts
- 2.) Attach clamp jaws to main support brackets with (2) 4" bolts and hex nuts.
- 3.) Place rear end assembly onto station brackets, tighten clamp jaws to hold in place.

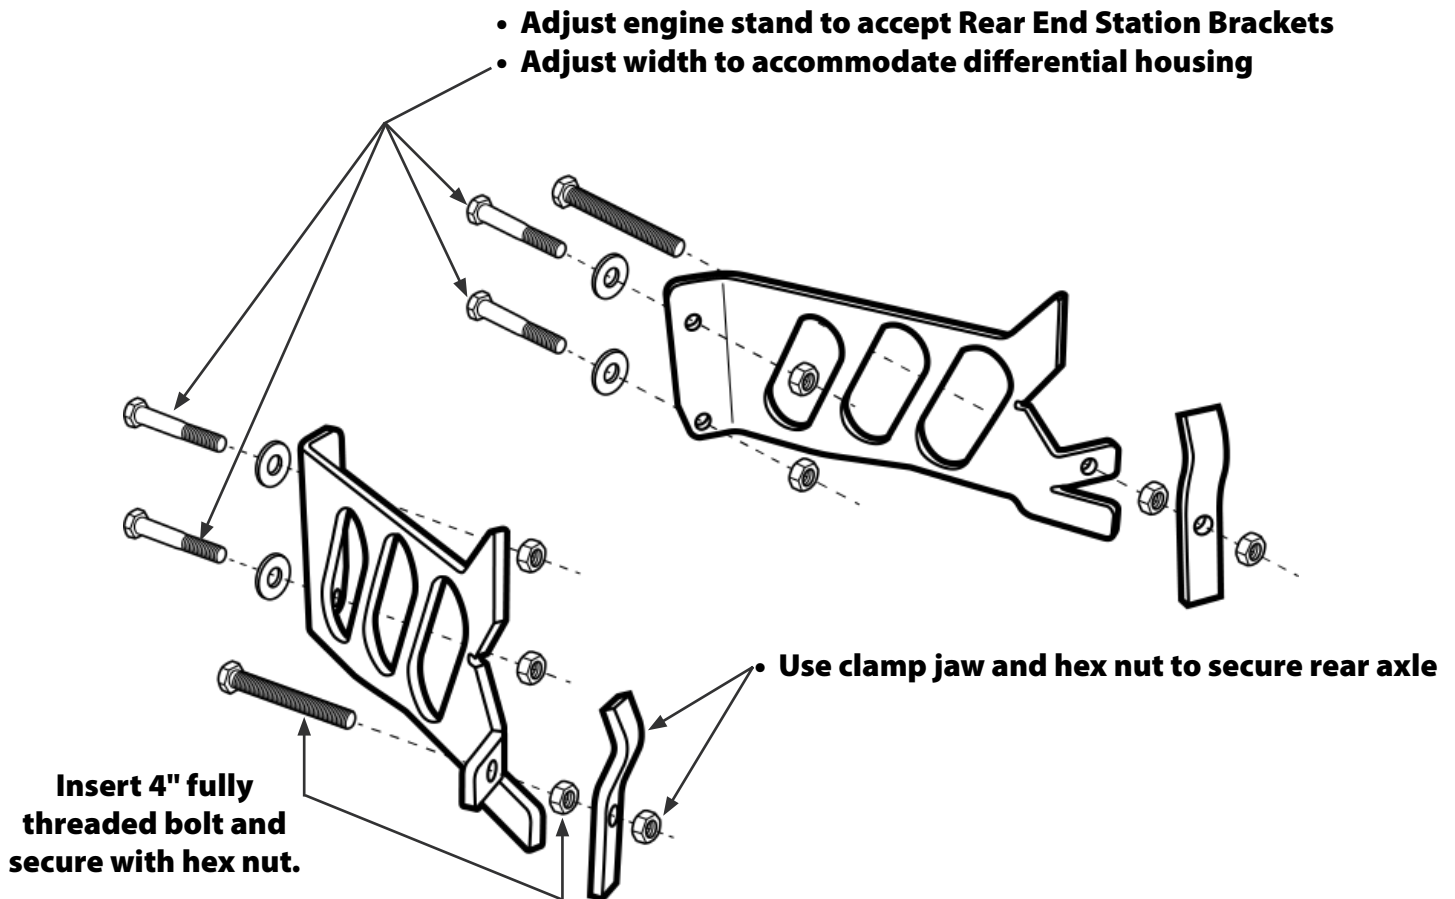

Allstar Performance 8300 Lane Dr., Watervliet, MI 49098  
Phone: (269) 463-8000 Fax: (800) 772-2618 [www.allstarperformance.com](http://www.allstarperformance.com)