






www.americanautowire.com 856-933-0801

the **optional** wires must be plugged into the bulkhead connector in order to utilize their features

NOTE: only the LH and RH pigtails are included in this optional kit. All other lettered items can be found in the 510711 main rear body harness loose piece kit. See page 11 of the 510706 main instruction set for further details

THIS OPTIONAL INSTRUCTION SET IS FOR USE WITH ALL 1983-1987 SUBURBAN MODELS AND IS INTENDED TO BE USED WITH THE AAW 510706 COMPLETE 1983-87 CHEVY AND GMC TRUCK KIT

wire entry view shown

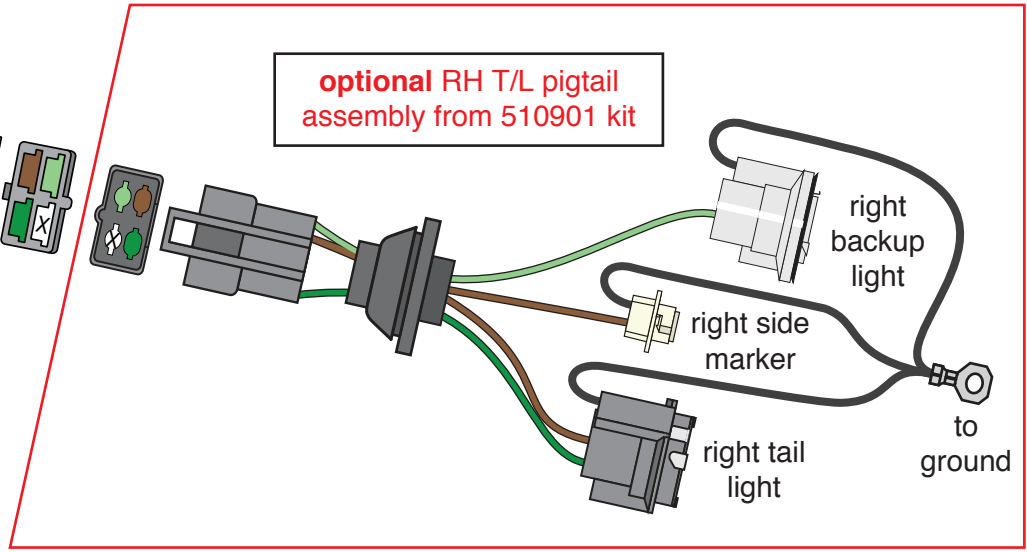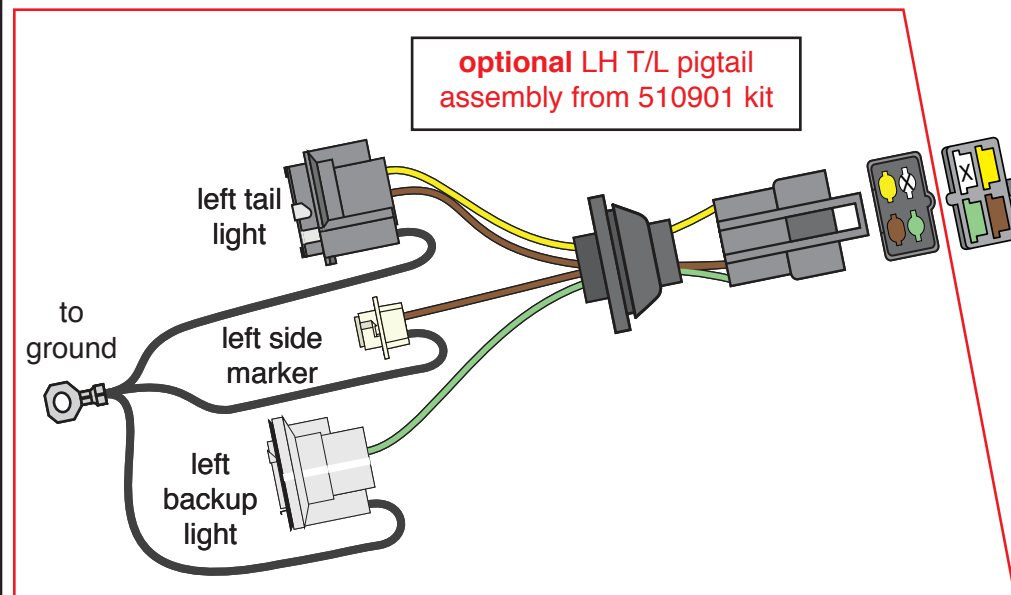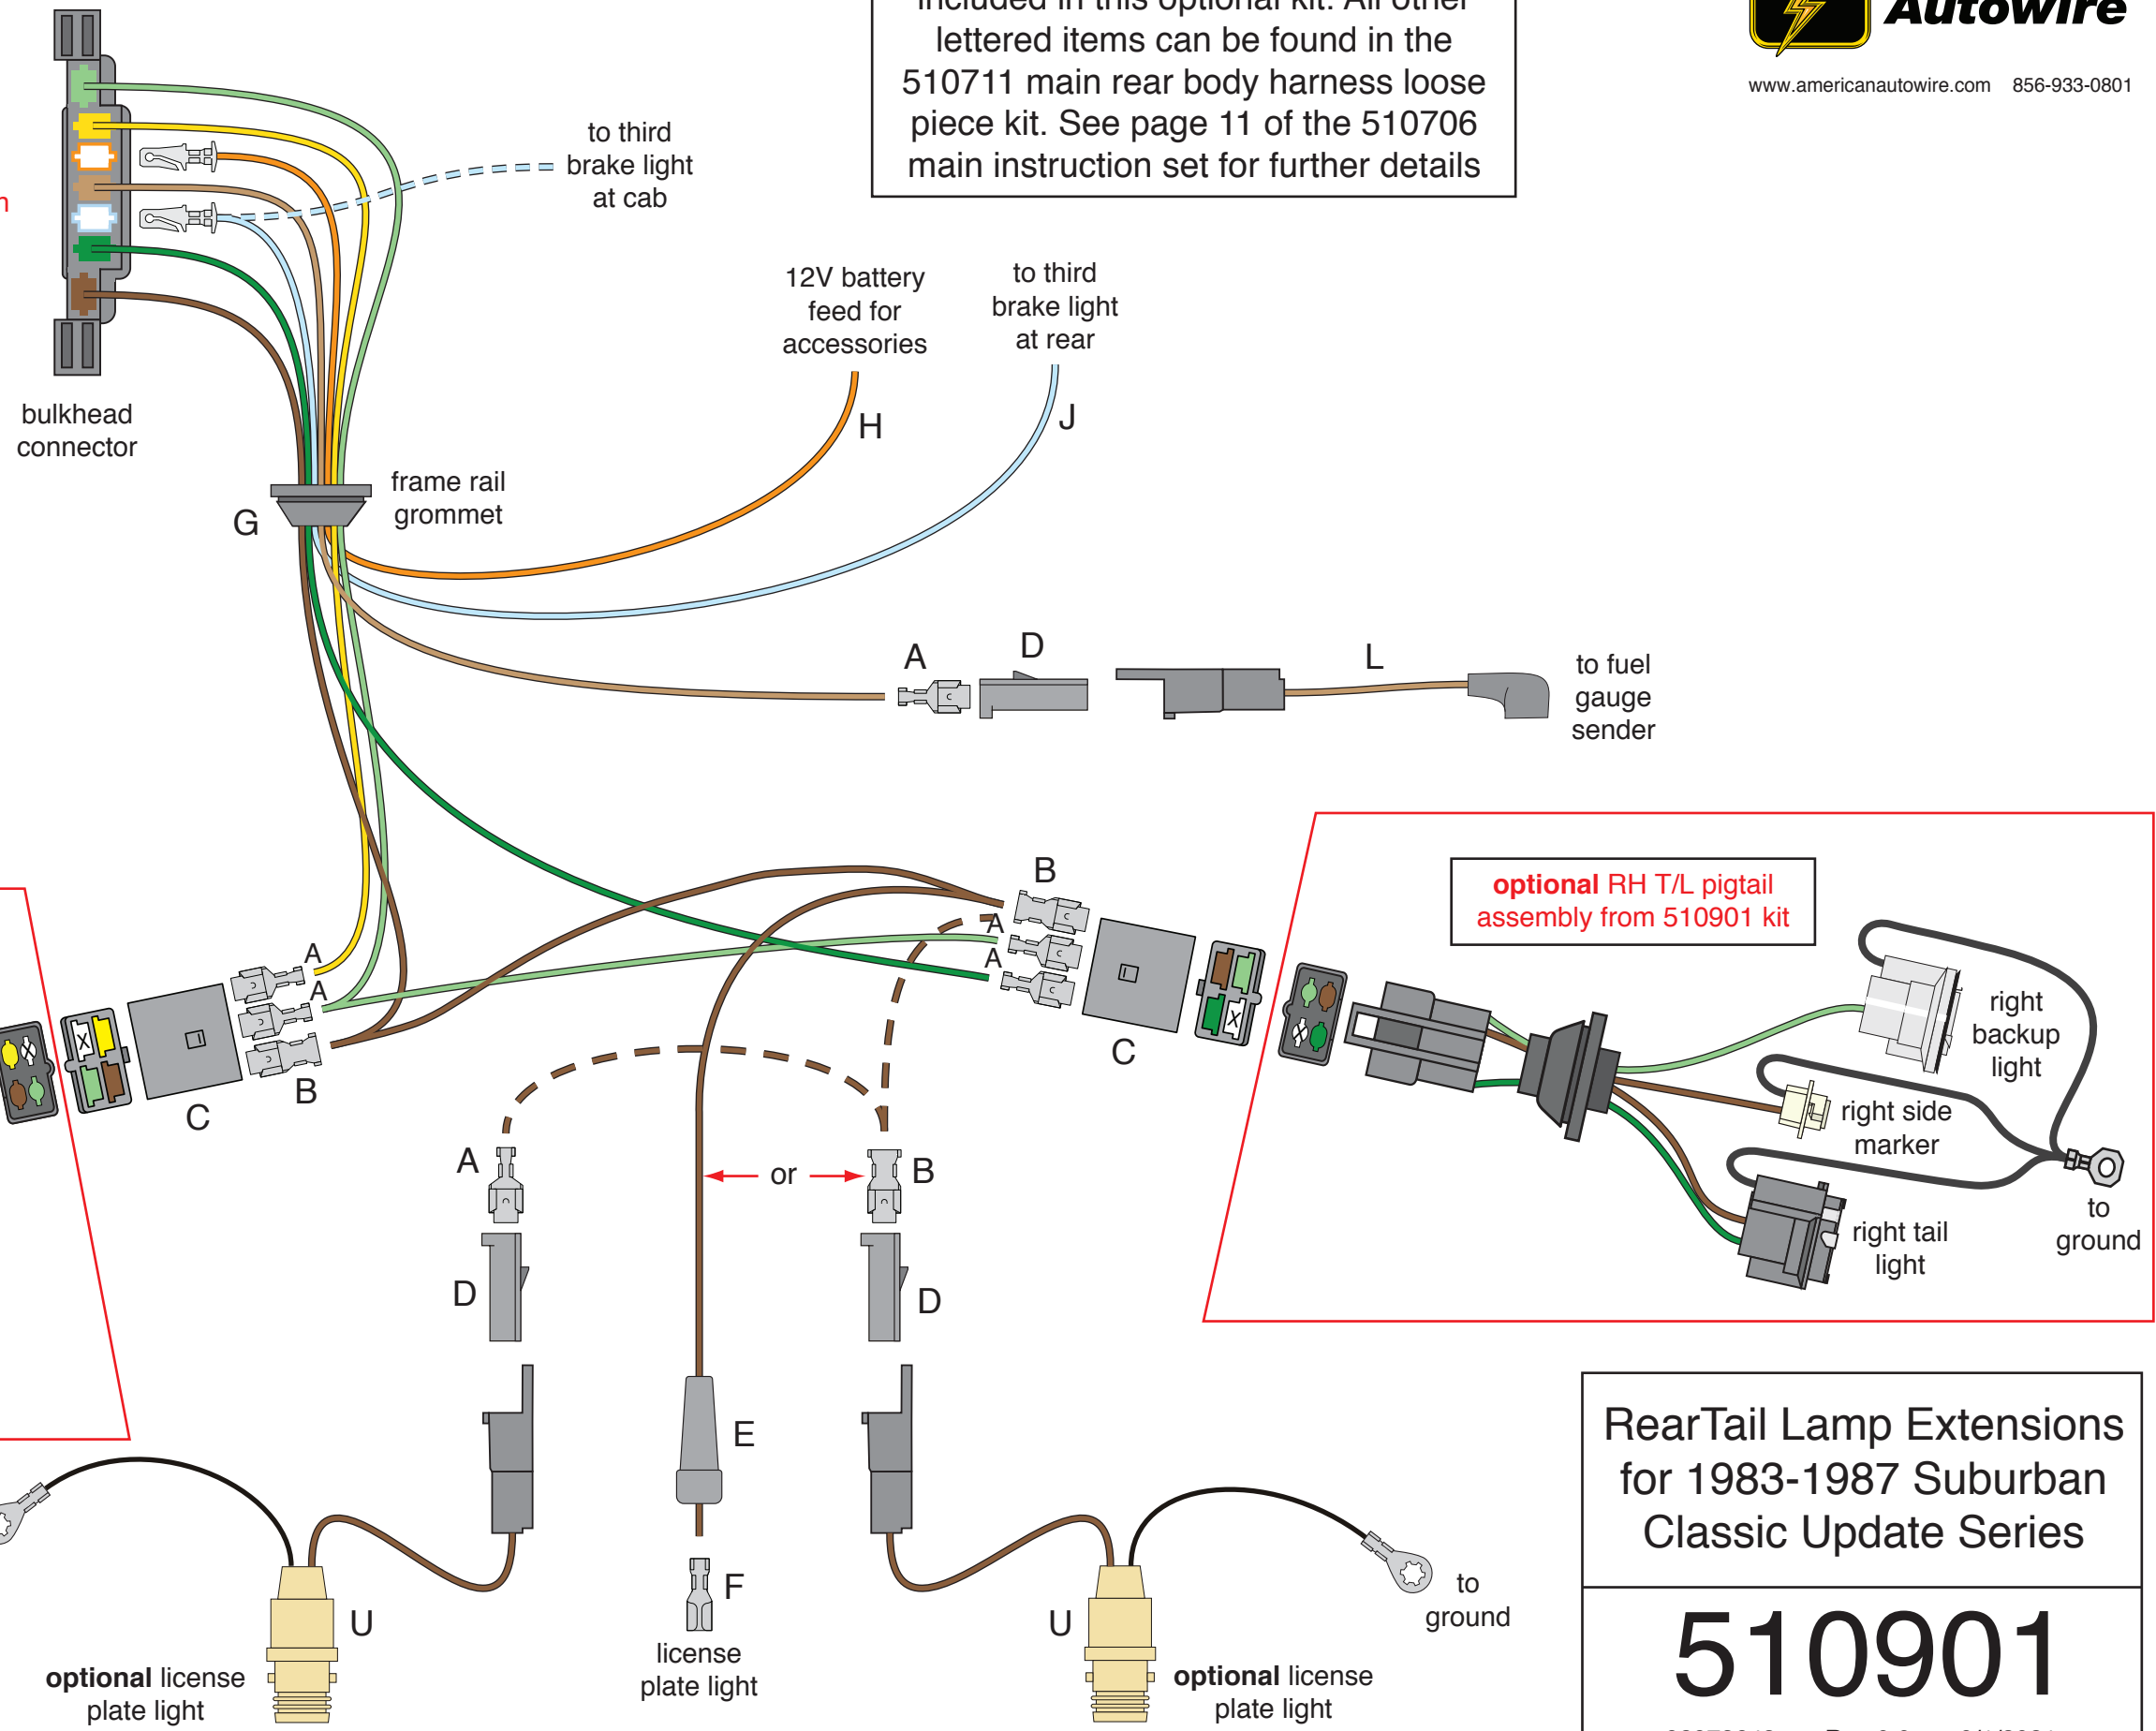

RearTail Lamp Extensions for 1983-1987 Suburban Classic Update Series
510901
92973643 Rev 0.0 9/1/2021