


# DOOR PANEL INSTALLATION GUIDE

## CLIP INSTALLATION INSTRUCTIONS

1) Place door panel vinyl side down on a hard surface or cutting pad.

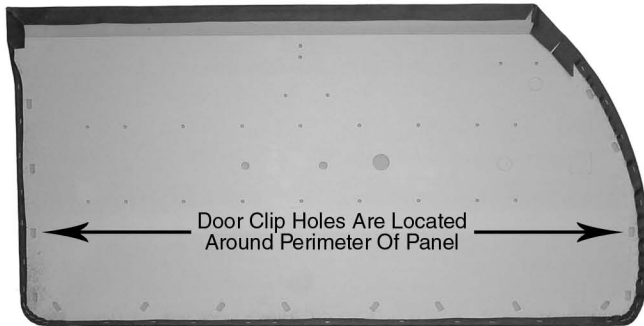


1965 Plymouth Satellite Door Panel Shown




Door Panel Clip Installation Tool

On some models due to the geometry of the heat sealed pattern, our two board laminated construction makes the door panels stronger and more durable than the originals and extends the life expectancy of your new Legendary panels.


2) Using the door panel installation tool provided, gently and slowly separate the two layers of board using a side to side motion (Figure A). **CAUTION:** Do not gouge or tear the board surface between the layers because loosened material wedged between the layers could create a noticeable bulge on the front side of the door panel (Figure B). The separated area should be fan shaped (this allows for clip adjusting when aligning to the door), approximately 1/2" deep and 1" wide (Figure C). The two layers of board will form a pocket where the clip is to be inserted (Figure D). **CAUTION:** Do not separate the boards within 1/4" of the edge of the panel or separation of panel edge may result.

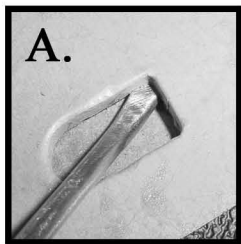


Correct

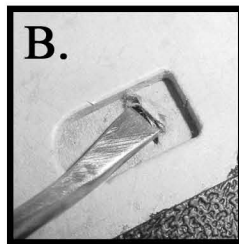

Incorrect

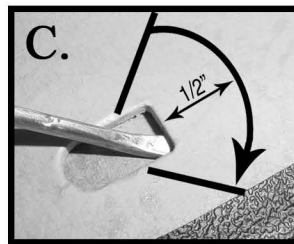


Separated area should be fan shaped for clip adjusting

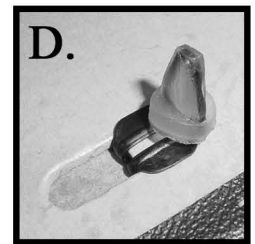


Clips are always inserted toward the flat edge of clip hole

## POWER WINDOWS & REMOTE MIRROR KNOCKOUT REMOVAL INSTRUCTIONS

1) ALL door panels have prescored areas for power windows and/or a remote mirror on the backside of the board (Figure E). If a door panel featuring power windows or a remote mirror is required, cut through the prescored area with a razor blade (Figure F) and remove. Use some type of cutting pad underneath to avoid damage of personal property. After removal of the prescored areas the panels are ready for the installation of your remote mirror and/or power window switches (Figure G).

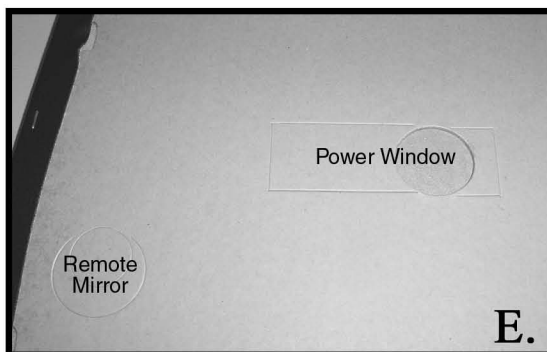

1967 Pontiac GTO/LeMans Door Panel Shown

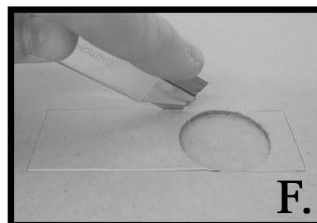

Cut along the prescored area and remove knockout



Panel after prescored areas removed