


**BMR** SUSPENSION  
**STB020 Installation Instructions**

**Tools required:**

Ratchet  
13mm socket  
14mm socket  
14mm wrench

1. Using the 13mm socket, remove the 6 strut tower bolts as shown in **IMAGE 1**.
2. Install STB020 using supplied hardware, placing provided spacers under the STB020 at each bolt as shown in **IMAGE 2**.
3. Tighten all 13mm mounting bolts to 35 ft/lbs.
4. Tighten two 14mm nuts until brace is secure.

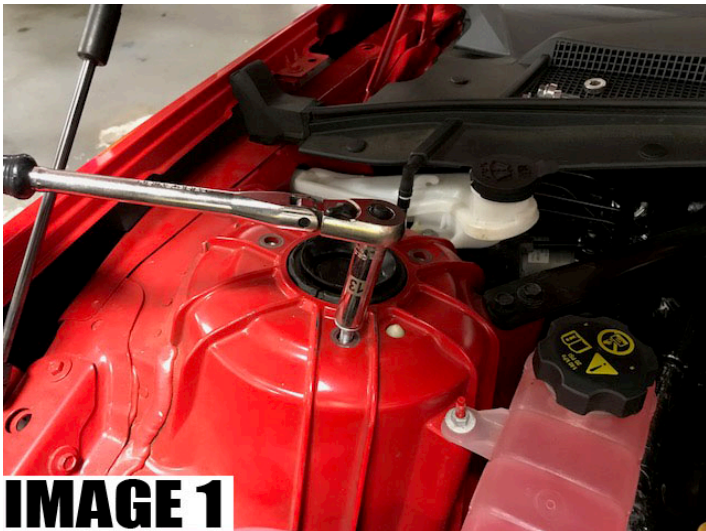

**WWW.BMRSUSPENSION.COM**

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.*