



# **BULLY DOG**

**#1 IN PERFORMANCE**

## **INSTALLATION MANUAL**



Vehicle Application	Part #
Ford 6.0L '03-'07	31302
Dodge 5.9L '03-'07	32303
GM 6.6L '01-'07 with speaker	33303
GM 6.6L '01-'07 without speaker	33302





## **TROUBLESHOOTING:**

If you have questions during the installation of this product, please visit [www.bullydog.com/Product\\_Updates.php](http://www.bullydog.com/Product_Updates.php). The latest version of these instructions can be found at the same location. Please review the Troubleshooting section on page 9 before calling technical support to cover most common issues. Technical support is available by calling 866-bullydog (866-285-5936).

### *Introduction*


These Custom A-Pillar Pods allow for the cleanest fit and finish installation of the Bully Dog Performance Management Tool (PMT). They were designed to offer the most seamless option for mounting the PMT while still maintaining a convenient location. These installation instructions illustrate how to properly install the Custom A-Pillar Pod for the trucks listed below. These instructions cover the following installation steps: removal of stock A-pillar (when applicable), and the installation of the Custom A-Pillar Pod.

## **TABLE OF CONTENTS**

<b>CUSTOM A-PILLAR POD MOUNT ASSEMBLY DIAGRAM .....</b>	<b>PG 2</b>
<b>FORD 6.0L '03-'07 .....</b>	<b>PG 3-4</b>
<b>DODGE 5.9L '03-'07 .....</b>	<b>PG 5-6</b>
<b>GM 6.6L '01-'07 .....</b>	<b>PG 7-8</b>
<b>FAQ.....</b>	<b>PG 9</b>
<b>WARRANTY/DISCLAIMER.....</b>	<b>PG 10</b>

The diagram below shows the general assembly of the PMT Cradle to the Custom A-Pillar Pod. For complete instructions see your PMT instruction manual included with your PMT.

## Custom A-Pillar Pod Mount Assembly Diagram

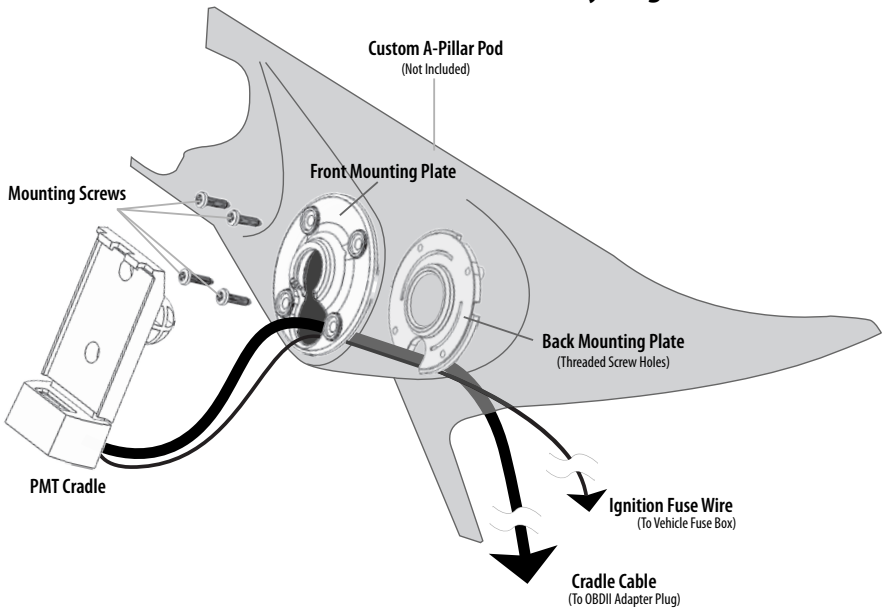

## PMT PILLAR POD FOR '03-'07 FORD POWER STROKE 6.0L


**Note: The pillar comes in black, it can be painted to match any color by purchasing OEM paint color at any auto paint store.**

### PREPARATION OF STOCK A-PILLAR

1. Remove the two caps on the grab handle on the driver's side of the cab. Under the caps are four bolts which must be removed using an 8mm socket.
2. Pull the weather stripping out from around the stock A-pillar so that the stock A-pillar can be pulled down without interference.
3. Pull down the entire stock A-pillar to gain access to the two screws that still hold the grab handle onto the pillar. To pull the A-pillar down use a flat head screw driver to undo the clips that hold the stock A-pillar onto the stock A-pillar frame.
4. Once pulled down locate the two screws on the inside of the A-pillar (near the clips) that hold the grab handle to the A-pillar. Remove the two screws using a Phillips head screw driver and the grab handle will separate from the stock A-pillar.
5. Push the Stock A-pillar back into its stock location, securing it with the stock clips.

**Note: Do not replace the grab handle or weather stripping until called for in the installation of the custom A-pillar is installed.**

**TOOLS NEEDED: Phillips Screwdriver, Flat Head Screwdriver, 10mm socket, socket wrench.**

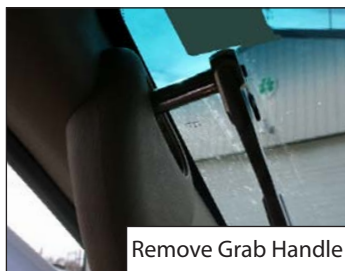

## INSTALLING THE CUSTOM A-PILLAR POD

1. Prepare the PMT cradle, and Custom A-Pillar Mount in the Custom A-Pillar Pod before installing it on the vehicle.



Snap in Place



Position Correctly

2. Slide the custom A-pillar mount on to the stock A-pillar, route the Cradle Cable and Power Wire down through the side of the dash to the under part of the dash.
3. Snap the custom A-pillar pod into place and position it over the stock A-pillar to fit to the shape of the stock A-pillar.
4. Replace the grab handle, secure it using the stock 8mm bolts.
5. Replace the side panel and the weather stripping and the job is complete.



System Installed

## CUSTOM PMT A-PILLAR POD FOR '03-'07 DODGE CUMMINS 5.9L

*Note: The pillar comes in tan, and shouldn't require painting to match the interior color.*




### PREPARATION OF STOCK A-PILLAR

1. Remove the 10mm bolt that holds the stock pillar in place. It is located about half way down the stock A-Pillar behind a small oval cover piece .

2. Pull the weather stripping out from around the stock A-pillar so that the stock A-pillar can be pulled down without interference.

3. Remove the dash panel on the driver's side of the vehicle.

**TOOLS NEEDED:** Phillips Screwdriver,  
10mm socket, socket wrench.

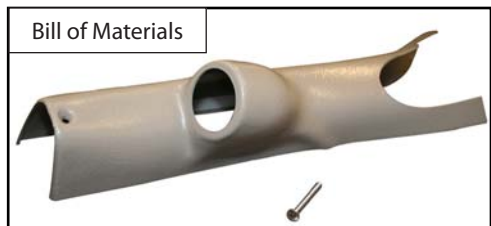

## CUSTOM PMT A-PILLAR POD FOR '03-'07 DODGE CUMMINS 5.9L

### INSTALLING THE CUSTOM A-PILLAR POD

1. Prepare the PMT cradle, and Custom A-Pillar Mount in the Custom A-Pillar Pod before installing it on the vehicle.
2. Before putting the Custom A-Pillar Pod in place over the stock A-Pillar Pod. Remove the cover to the adhesive tape on the inside of the Custom A-Pillar Mount.
3. Slide the custom A-pillar mount on to the stock A-pillar, route the Cradle Cable and Power Wire down through the side of the dash to the under part of the dash.
4. Slide the Custom A-Pillar Mount down along the stock pillar until the pillar system screw hole matches up to the stock screw hole. Use the Bully Dog Phillips screw to secure the system. Also press on the adhesive tape to ensure a firm connection.
5. Replace the side panel and the weather stripping and the job is complete.





## CUSTOM PMT PILLAR POD FOR GM '01-'07 6.6L

*Note: The pillar comes in black, it can be painted to match any color by purchasing OEM paint color at any auto paint store.*

Pull Back Weather-stripping



Remove Dash Panel



Line up A-Pillars & push into place



### PREPARATION OF STOCK A-PILLAR

1. Pull the weather stripping out from around the stock A-pillar so that the stock A-pillar can be pulled down without interference.
2. Remove the dash panel on the driver's side of the vehicle.

### INSTALLING THE CUSTOM A-PILLAR POD

1. Prepare the PMT cradle, and Custom A-Pillar Mount in the Custom A-Pillar Pod before installing it on the vehicle.
2. Remove the covers from the adhesive tape that is on the back side of the PMT Pod.
3. Slide the Custom A-Pillar over the stock A-Pillar until they are lined up. If installing Pod with speaker, make sure that the speaker hole goes over the A-Pillar speaker. Put pressure against the tape areas to ensure a good connection between the Custom and stock A-Pillars.
4. Route the Cradle Cable and Power Wire down through the side of the dash to the under part of the dash.

**TOOLS NEEDED: Drill (Optional), 13/64" Drill Bit (Optional).**

Bill of Materials





## CUSTOM PMT PILLAR POD FOR GM '01-'07 6.6L



### OPTIONAL INSTALLATION STEP (FOR PERMANENT INSTALLATION)

5. Drill one hole with a 13/64" drill bit on the top part of the PMT Pillar Pod underneath the weather stripping facing the outside of the driver's side window. Place a plastic rivet in the hole to ensure a good fit and finish. Additional holes may be drilled if needed.

6. Replace the weather stripping and the dash panel and the job is complete.

Complete System installed



## TROUBLESHOOTING/FAQ

CONDITION	POSSIBLE SOURCES	ACTION
How long is needed for the paint to dry when painting the Pillar Pod.	Installation	10-15 minutes of drying is generally the the time required for the paint to dry.
Does the stock grab handle get replaced by the A-Pillar PMT Pod on the Dodge and the Ford?	Installation	No, the PMT pods on the Dodge and Ford fit underneath the grab handle. The GM does not have a stock grab handle.

## WARRANTY & DISCLAIMER

### REMEMBER, THIS IS A PERFORMANCE PRODUCT, USE AT YOUR OWN RISK.

*This product is not intended to be used to break the law.*

Do not use this product until you have carefully read the following agreement. This agreement sets forth the terms and conditions for the use of this product. The installation of this product indicates that the buyer has read and understands this agreement and accepts the terms and conditions. Never exceed recommended vehicle or tire top speed ratings.

### DISCLAIMER OF LIABILITY

Bully Dog Technologies, LLC. Its distributors, jobbers, and dealers (hereafter Seller) shall be in no way responsible for the product's proper use and service. THE BUYER HERBY WAIVES ALL LIABILITY CLAIMS.

The Buyer acknowledges that he is not relying on the Sellers skill or judgment to select or furnish goods suitable for any particular purpose and that there are no liabilities which extend beyond the description on the face hereof, and the Buyers hereby waives all remedies or liabilities expressed or implied, arising by law or otherwise, (including without any obligation of the Seller with respect fitness, merchantability and consequential damages) or whether or not occasioned by the Seller's negligence.

The Seller disclaims any warranty and expressly disclaims any liability for personal injury or damages. The Buyer acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and the Buyer agrees to indemnify the Seller and to hold the Seller harmless from any claim related to the item of the equipment purchased. Under no circumstances will the Seller be liable for any damages or expenses by reason of use or sale of any such equipment.

The Seller assumes no liability regarding the improper installation or misapplication of its products. It is the installer's responsibility to check for proper installation and if in doubt contact the manufacturer.

The Buyer is solely responsible for all warranty issues from the manufacturer.

### LIMITATION OF WARRANTY

BULLY DOG TECHNOLOGIES, LLC. (Hereafter "Seller") gives Limited Warranty as to description, quality, merchantability, and fitness for any particular purpose, productiveness, or any other matter of Seller's product sold herewith. The Seller shall be in no way responsible for the products proper use and service and the Buyer hereby waives all rights other than those expressly written herein. This warranty shall not be extended, altered or varied except be a written instrument signed by Seller and Buyer.

The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the products kit. All products that are in question of Warranty must be returned prepaid to the Seller and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by BULLY DOG TECHNOLOGIES, LLC.

Under no circumstances will the Seller be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product or any other contingent expenses.

Under no circumstances will the Seller be liable for any damage or expenses incurred by reason of the use or sale of any such equipment.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT: THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.

Bully Dog Technologies, LLC is a team built on integrity that is dedicated to leading the vehicle performance industry with an uncompromising code of ethics demonstrated in the soundness of its employees, excellent customer service and superior products.

# ***UNLEASH THE POWER*** **WITH BULLY DOG PERFORMANCE PRODUCTS**

**Fluid Dampner**



**Intake Systems**



**Rapid Flow Fuel Reformulator**



**Exhaust Systems**



***See More at: [bullydog.com](http://bullydog.com)***

***Doc.# BD40011 v1.0.5***

For a full listing of Diagnostic Trouble Codes go to: [www.bullydog.com/DTC.php](http://www.bullydog.com/DTC.php)



***BULLY DOG***

**For Free Technical Support**

**Call: 866-bullydog (866-285-5936)**