

INSTALLATION PREPARATION

TOOLS NEEDED FOR INSTALLATION:

The majority of these tools will be needed to install your Burco Redi Cuts® or Redi-Set-Go™ mirror replacement.

- PUTTY KNIFE
- FLAT HEAD SCREWDRIVER
- SCISSORS
- TOWEL
- SILICONE OR URETHANE
- RUBBING ALCOHOL
- RUBBER MALLET
- GLASS CLEANER

STEPS FOR SAFETY:

Please follow safety steps prior to installation.

- **SAFETY GLASSES**
Safety glasses are needed to protect eyes against flying glass or debris.
- **CUT-RESISTANT GLOVES**
Cut-resistant gloves must be worn when handling broken glass.
- **LONG SLEEVES**
A long-sleeved shirt is recommended.
- **PROPER VENTILATION**
When working with adhesives and cleaners, proper ventilation is recommended.

EASIEST!


INSTALLATION A

-OR-

INSTALLATION B

REDI CUTS

INSTALL A
FIT OVER

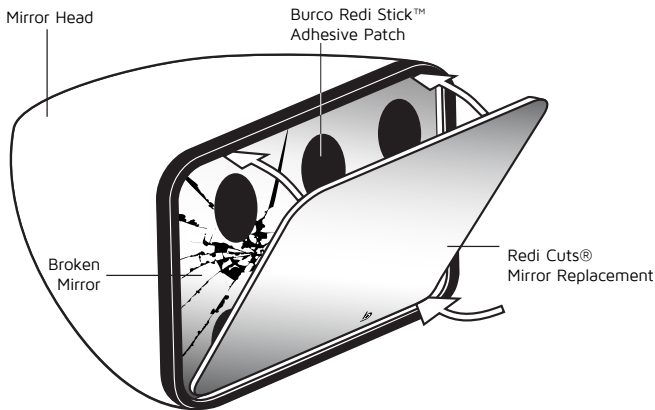

Install your Redi Cuts® over your existing broken mirror.

To use this method, the broken mirror must be present and should remain in the mirror housing. Only remove loose or protruding pieces with a putty knife or screwdriver.

STEP 1: CLEAN

For proper adhesion, ensure both mirror surfaces are free of dirt or debris

STEP 2: ALIGN

Dry fit (test fit) mirror replacement by placing over existing broken mirror to check proper fit. Be sure to align signal icons, if applicable.

STEP 3: APPLY ADHESIVE

Apply Burco Redi Stick™ adhesive patches to the broken mirror or mirror replacement.

Use care not to cover any signal icons, if applicable.

TIP: Install in a warm/dry environment.

TIP: In addition to adhesive patches, you may supplement silicone or urethane.

STEP 4: INSTALL REDI CUTS®


Align and press mirror replacement directly to your broken mirror with firm yet gentle pressure. Make sure to align signal icons, if applicable.

STEP 5: CLEAN UP

Clean your installed Redi Cuts® mirror replacement with glass cleaner.

REDI CUTS

INSTALL B
DROP FIT

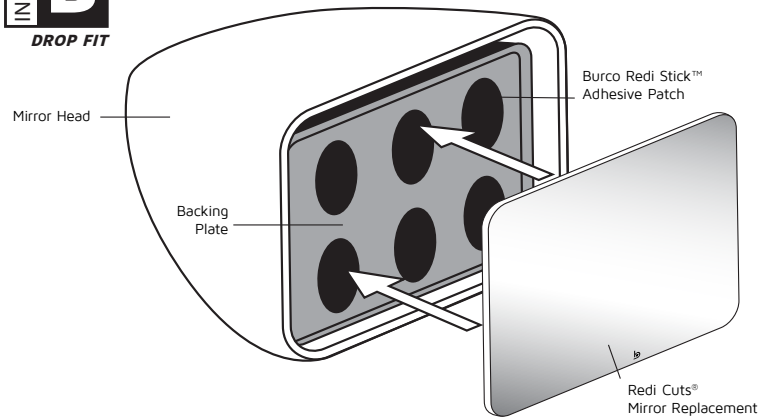

Remove broken glass to install your Redi Cuts®

STEP 1: REMOVE ALL BROKEN GLASS

Remove all existing broken glass and adhesive from the mirror's plastic frame and backing plate with a putty knife.

STEP 2: CLEAN & TEST FIT

Thoroughly clean backing plate with rubbing alcohol. Clean mirror with glass cleaner. Test fit your Redi Cuts® before proceeding to the next step.

STEP 3: APPLY ADHESIVE

Apply Burco Redi Stick™ adhesive patches to the backing plate or mirror replacement, if applicable.

TIP: Install in a warm/dry environment.

TIP: In addition to adhesive patches, you may supplement silicone or urethane.

STEP 4: INSTALL REDI CUTS®

Align and press mirror replacement to the backing plate with firm yet gentle pressure.

STEP 5: CLEAN UP

Clean your installed Redi Cuts® mirror replacement with glass cleaner.