

## INSTALLATION PREPARATION

### TOOLS NEEDED FOR INSTALLATION:

The majority of these tools will be needed to install your Burco Redi Cuts® or Redi-Set-Go™ mirror replacement.

- PUTTY KNIFE
- FLAT HEAD SCREWDRIVER
- SCISSORS
- TOWEL
- SILICONE OR URETHANE
- RUBBING ALCOHOL
- RUBBER MALLET
- GLASS CLEANER


### STEPS FOR SAFETY:

**Please follow safety steps prior to installation.**

- **SAFETY GLASSES**  
Safety glasses are needed to protect eyes against flying glass or debris.
- **CUT-RESISTANT GLOVES**  
Cut-resistant gloves must be worn when handling broken glass.
- **LONG SLEEVES**  
A long-sleeved shirt is recommended.
- **PROPER VENTILATION**  
When working with adhesives and cleaners, proper ventilation is recommended.

## INSTALLATION ILLUSTRATION

### REDI CUTS

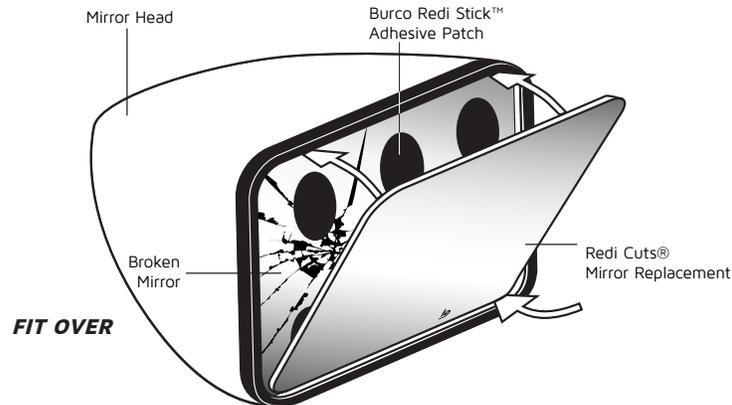

## STEP-BY-STEP INSTRUCTIONS

### Install your Redi Cuts® over your existing broken mirror.

To use this method, the broken mirror must be present and should remain in the mirror housing. Only remove loose or protruding pieces with a putty knife or screwdriver.

#### STEP 1: CLEAN

For proper adhesion, ensure both mirror surfaces are free of dirt or debris

#### STEP 2: ALIGN

Dry fit (test fit) mirror replacement by placing over existing broken mirror to check proper fit.

Be sure to align signal icons, if applicable.

#### STEP 3: APPLY ADHESIVE

Apply Burco Redi Stick™ adhesive patches to the broken mirror or mirror replacement.

Use care not to cover any signal icons, if applicable.

**TIP:** Install in a warm/dry environment.

**TIP:** In addition to adhesive patches, you may supplement silicone or urethane.

#### STEP 4: INSTALL REDI CUTS®

Align and press mirror replacement directly to your broken mirror with firm yet gentle pressure.

Make sure to align signal icons, if applicable.