



INSTALLATION INSTRUCTIONS

Floor & Tunnel Shield II

KIT CONTENTS:

#050501	2 ft x 21" (3.5 sq ft)
#050502	4 ft x 21" (7.0 sq ft)
#050503	4 ft x 42" (14.0 sq ft)
#050503-16	10" X 10" (.83 sq ft)

TOOLS:

Scissors or snips, Cardboard/Poster board to use as a template

NOTES:

It is not required to clean the area where the Floor & Tunnel II is being installed. However, the cleaner the area the stronger the bond will be. DEI Cool Tape (010408) can be used around edges for a finished look.

SURFACE PREP:

Vacuum installation area to remove all loose debris. Then clean with isopropyl alcohol, soapy water, or a wax/grease remover. Allow sufficient time to dry before installation of Boom Mat products.



INSTRUCTIONS:


1. Although Floor & Tunnel Shield II will stick to almost anything, we recommend removing dirt, grease, oil, wax, etc. to improve adhesion.

2. Making a template will aid proper and professional installations.



3. Trim Floor & Tunnel Shield II to desired size using a snips or scissors.

4. Remove the backing to expose the adhesive and carefully apply to clean and dry desired area.

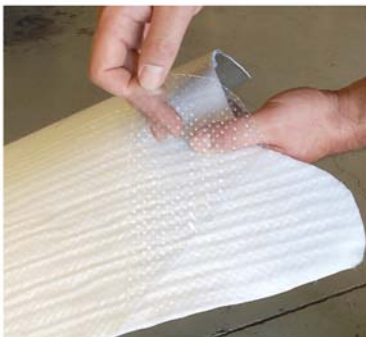

5. After Floor & Tunnel Shield II is set in proper location, apply pressure to ensure a strong bond with the installation surface.

www.DesignEngineering.com