


# HID XENON

## INSTALLATION DIAGRAM

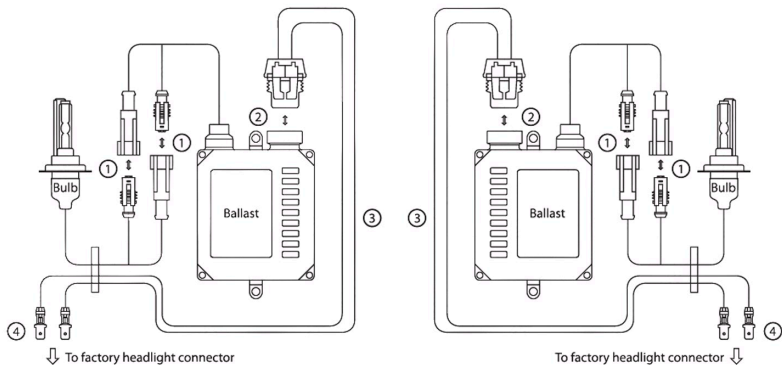

1. DISCONNECT THE VEHICLE'S BATTERY NEGATIVE TERMINAL
2. REMOVE THE OEM HALOGEN BULB FROM THE BULB SOCKET
3. INSTALL THE XENON BULB IN PLACE OF THE HALOGEN BULB
4. MOUNT THE XENON BALLAST WITH SUPPLIED BRACKETS
5. CONNECT EACH OF THE CORRESPONDING WIRE JUNCTIONS
6. IF NECESSARY, DRILL A HOLE IN THE BACK CAP FOR THE GROMMET
7. CONNECT BATTERY AND TEST SYSTEM, INSTALL HARNESS IF NECESSARY

- 1 = BULB WIRE
- 2 = BALLAST CONNECTION
- 3 = HARNESS TO FACTORY
- 4 = FACTORY CONNECTOR