


Hellwig PRODUCTS

559-734-7451 800-367-5480 TechSupport@HellwigProducts.com

INSTALLATION INSTRUCTIONS

Thank you for purchasing a quality Hellwig Product

PLEASE READ INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION.

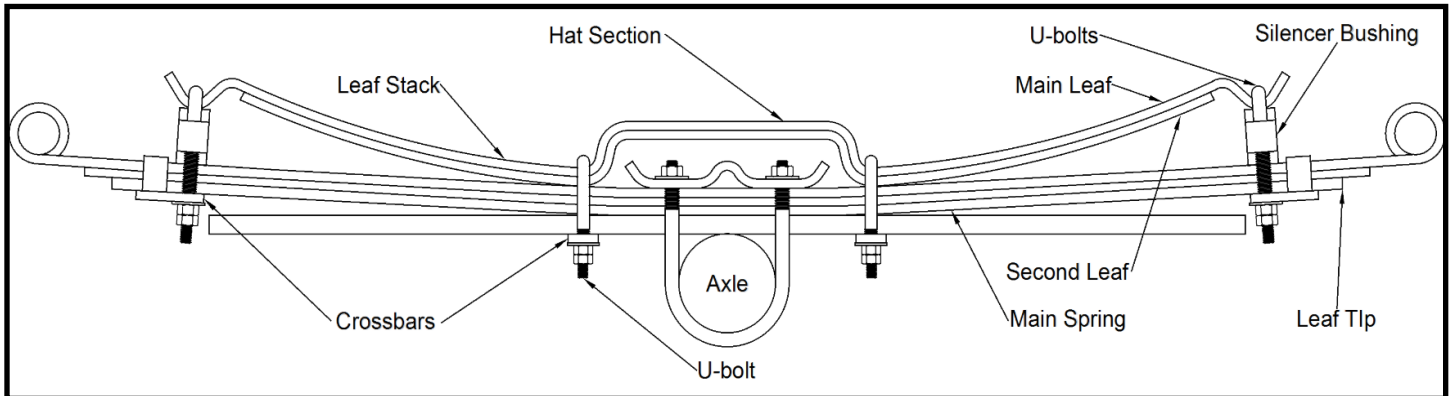

SAFETY: PARK YOUR VEHICLE ON A FLAT LEVEL SURFACE, SET THE PARKING BRAKE, AND CHOCK THE FRONT TIRES.

IMPORTANT NOTES:

1. **IF YOUR VEHICLE IS EQUIPPED WITH A BRAKE FLUID PROPORTIONING VALVE ON THE REAR AXLE READ INSERT (R-362)**
2. **YOUR SPRING MAY HAVE A SMALL HOLE IN THE END. THIS IS FOR OUR MANUFACTURING PROCESS AND WILL NOT BE USED.**
3. **IF YOUR VEHICLE IS EQUIPPED WITH A FACTORY CONTACT OVERLOAD IT MUST BE REMOVED BEFORE INSTALLING THE NEW HELPER SPRINGS**
4. **HELLWIG HELPER SPRINGS ARE DESIGNED TO INCREASE THE “LEVEL LOAD” CARRYING CAPACITY OF YOUR VEHICLE. NEVER LOAD THE VEHICLE THAT THIS UNIT IS INSTALLED ON BEYOND THE MANUFACTURER’S MAXIMUM GROSS VEHICLE WEIGHT RATING.**

TOOLS REQUIRED:

- 3/4” wrench & deep socket
- 7/8” wrench & deep socket
- Ratchet & Socket extension (optional)
- Torque wrench

STEPS

1. Lay out the spring leaves into two (2) sets. Each will consist of a main leaf with U-bolt cups and a second leaf without cups. Lay the leaves so that the long ends are all in the same direction. Stack the leaves so that the main leaf is on top. The long end of the spring stack must be installed toward the rear of the vehicle and the short end toward the front.
2. Place the spring stack on top of the main spring with the long end toward the rear of the vehicle.
3. Place the long U-bolts in the cups at the ends of the spring with the silencer bushing between the main spring and the helper spring as shown in the diagram. Loosely install the large crossbars with rectangular cutout using provided washers & nuts. The rectangular cutout should sit around the OEM leaf retainers.

Hellwig PRODUCTS

559-734-7451 800-367-5480 TechSupport@HellwigProducts.com

4. Check position of spring stack. It may be necessary to move the spring stack fore or aft for best alignment.
5. Place the shorter U-bolts on either side of the hat section of the leaf stack as shown in the diagram. The U-bolts should be fastened as close to the hat section as possible. These U-bolts may also be installed with the legs pointing up and crossbars on top of spring to provide additional clearance if required. Install the straight crossbars with provided washers and nuts to connect to the main spring. Torque the nuts to 65 ft-lb and double nut.
6. Adjust the U-bolts at the end to desired preload. The minimum tension adjustment is having enough tension on the end U-bolts so that they do not loosen or rattle and move when the vehicle is driven over rough or bumpy surfaces. Maximum adjustment is when the leaf cups have been deflected two (2) inches from their free state. **DO NOT EXCEED THE MAXIMUM ADJUSTMENT OF 2 INCHES.**
7. When adjustment is complete, double nut to lock in adjustment.
8. Check your installation for clearance on all undercarriage components; wires, fuel, brake, and air conditioning lines. Test drive the vehicle and recheck your installation, adjust as needed. Recheck on a monthly basis thereafter.

TORQUE TABLE:

BOLT SIZE: 3/8" = 20-30 ft. lbs. – 7/16" = 35-45 ft. lbs. – 1/2" = 50-70 ft. lbs. – 9/16" = 70-90 ft. lbs

ATTENTION INSTALLER: BE SURE THAT THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMPORTANT NOTE CARDS AND THE WARRANTY FORM

Maintenance and Inspection:

Your Hellwig Suspension Product is built to last. However, as with all vehicle systems, it requires routine inspection. Inspect your Hellwig installation looking for secure hardware and tight fitting brackets and bushings. If you do not perform this inspection, have your professional mechanic inspect as described.

Thank you for purchasing a quality Hellwig Product.

Hellwig Products Company, located in Visalia, California was founded in 1946 with solutions for load control of loaded passenger cars. The family operated company produces components for trucks, RVs, muscle cars and military vehicles. Hellwig is ISO9001 certified and is proud to develop, test and manufacture products in the USA.