
13340 / 78225 / 757340

02-05 KIA SEDONA VAN

9/10/2012

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3500 LBS. TRAILER WEIGHT & 350 LBS. TONGUE WEIGHT. GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 5000 LBS. TRAILER WEIGHT & 500 LBS. TONGUE WEIGHT

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

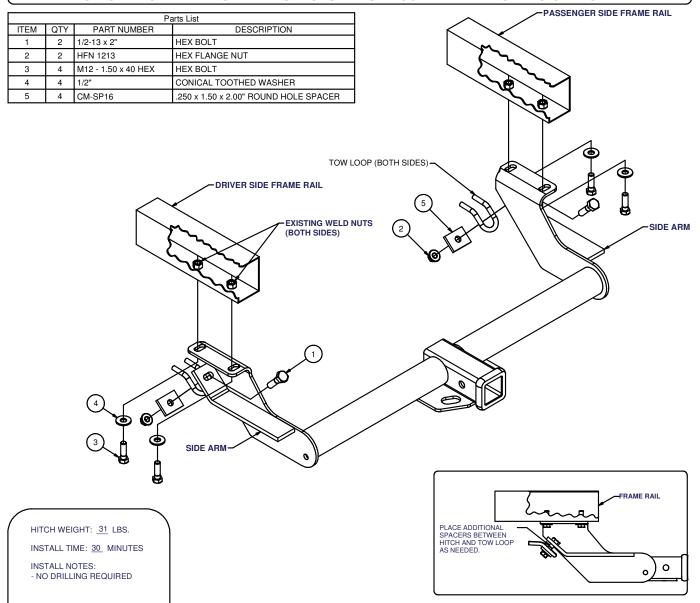

INSTALLATION STEPS

- 1. Remove four 12mm bolts securing the bumper brackets inside frame rail. Do not move bumper. Position hitch on bottom of frame rails with side arms on top of vehicle tow loops.
- 2. Fasten hitch to frame using 12mm bolts in locations where bolts were removed in step 1.
- 3. Fasten side arms to tow loop using 1/2" bolts and spacer plates as shown. Use additional spacers as needed.
- 4. Torque 12mm fasteners to 83 lb.-ft. and 1/2" fasteners to 110 lb.-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.