

# 55336

ACURA CL SERIES  
ACURA INTEGRA  
ACURA MDX  
ACURA RL SERIES  
ACURA TL SERIES  
HONDA ACCORD

HONDA CR-V  
HONDA ELEMENT  
HONDA ODYSSEY  
HONDA PILOT  
HONDA PRELUDE  
ISUZU OASIS

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.







### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

11/19/08

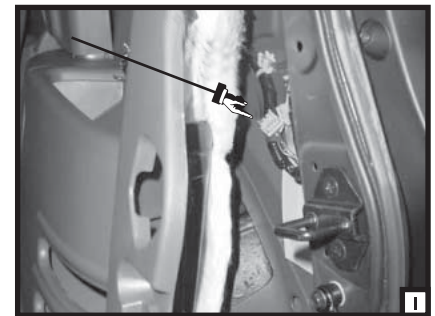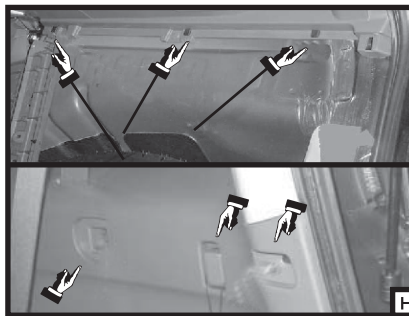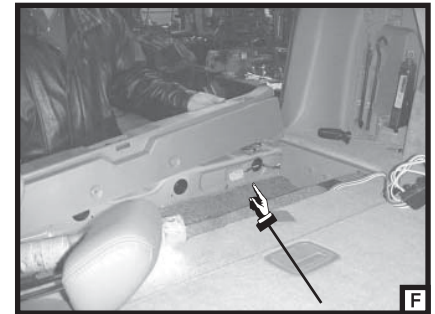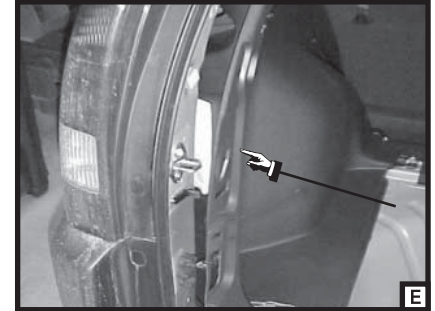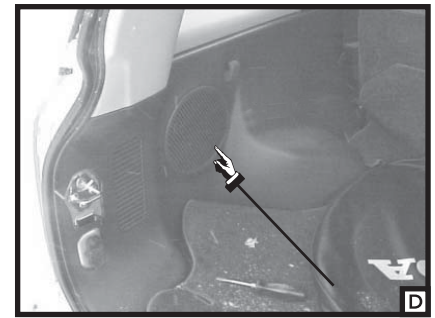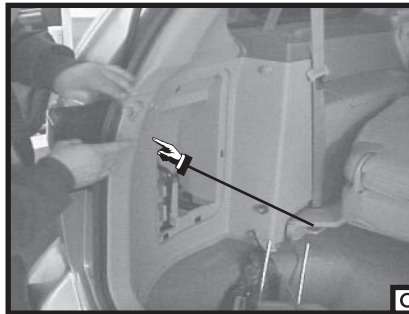

## English

A. Locate the vehicles taillight wiring harness behind the rear bumper. The harness will have connectors similar to those on the T-connector harness and can be found in the following positions:

Passenger Cars: **A**

1. Open the trunk and remove the plastic screw that secures the trunk liner on the passengers side of the trunk. Peel back the trunk liner to expose the vehicles harness.

1996-1999 Isuzu Oasis

1995-1998 Honda Odyssey: **B**

1. Remove the rear access panel located inside the van directly behind the driver's side taillight to expose the vehicle wiring harness.

1999-2004 Honda Odyssey: **C**

1. Open rear tailgate and remove driver's side cargo bracket screw.  
2. Carefully pull back trim panel to expose vehicle's wiring harness.

## Español

## Français

## English

## Español

## Français

### 1997-2001 Honda CR-V: [D]

1. Remove the rear driver's side speaker and cover. The speaker will be held in place with three screws. The vehicle connector will be secured to the speaker wires.

### 2002-2006 Honda CR-V: [E]

1. Open the rear tailgate and remove the cargo door on the floor. Remove the storage container from the vehicle floor and set aside.  
2. Remove the rear threshold and driver's side cargo bracket screw. Remove the cargo screw on the driver's side trim panel. Remove the cargo bracket by unscrewing bolt from vehicle floor.  
3. Carefully pry trim panel away from vehicle body. The harness will be taped to wires near the vehicle floor.

### Acura MDX: [F]

1. Open rear tailgate and remove the cargo door on the floor. Remove head rests from storage location. Locate and remove two clips inside the storage area on threshold. Carefully pry the threshold to remove it. The connector will be located inside cargo area, on the driver's side attached to the threshold plate. Remove harness from protective cap.

### Honda Pilot: [G]

1. Open rear tailgate and carefully pry the threshold to remove it. The connector will be located on the driver's side under the threshold plate.

### Honda Element: [H] [I]

1. Open rear tailgate and remove the cargo door on the floor. Remove the screws holding the spring loaded hinge cover and carefully set cover aside.

2. Carefully remove three plastic clips that hold the passenger side trim panel to the floor.

3. Remove the five screws that hold the passenger's side trim panel in place. Remove cargo net bracket and carefully pull back trim panel being careful not to break any tabs or clips.

B. Locate the vehicle harness connectors. Untape the vehicle connectors, taking care not to damage the locking tabs. Inspect the connector for dirt and debris and clean if necessary.

C. Press the T-connector ends into the vehicle harness connectors until the lock into place. Take care not to damage the locking tabs.

D. Secure the converter black box using a the double-sided tape provided.

E. Honda CRV only: Route the T-connectors 4-flat trailer plug out under the trim panel along the carpet edge.

F. Confirm correct operation with a test light or by using a trailer.

G. Return and loosened or removed trim panels or other vehicle parts to their original positions, taking care not to pinch or damage any wires.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.