

55344

FORD ESCORT FORD F-150
FORD ECONOLINE FORD LINCOLN AVIATOR
FORD EXCURSION
FORD EXPLORER
MERCURY TRACER
FORD FOCUS
FORD RANGER
MERCURY MOUNTAINEER
LINCOLN NAVIGATOR

WIRING LOCATION GUIDE
GUÍA DE UBICACIÓN DEL CABLEADO
IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

7/9/08

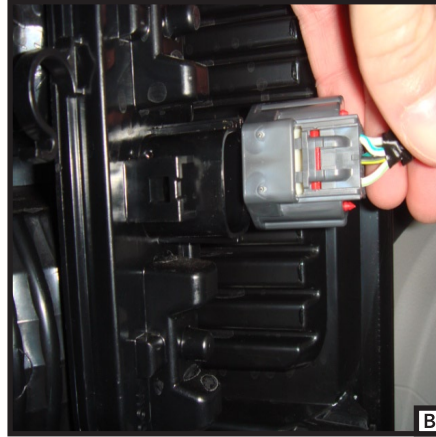

English

1. Remove both taillight assemblies and locate the vehicle's wiring harness. [A]
There will be connection points on each side of the vehicle matching the ends of the T-connector adapter. [B]

2. **Vans/Expedition/Navigator**
Partially remove the rear interior plastic trim panels on the left (driver's) side, and open the vehicle's jack storage compartment to expose the openings to the taillight assemblies. Remove the threshold cover plate between the rear doors. [C]

Escort/Tracer

Partially remove the trunk lining to expose the grommets accessing the taillights. Remove & slit the grommet to allow wires to pass into taillight openings. [D]

F-150 Pickups (Flare side only)

From underneath the vehicle, locate the access hole into the taillight openings. There will be an access hole on each side of the vehicle.

3. From the passenger side, route the T-connector end containing the green wire out from inside the vehicle through the taillight opening.

4. Disconnect the vehicle's center black wiring harness connector from the taillight assembly, being careful not to damage the locking tabs. Plug the T-connector connector containing the green wire between the separated halves.

Español

Français

5. Route the yellow wire across the vehicle under the threshold cover removed in step 2. Route the T-connector ends containing the yellow wire out from inside the vehicle through the taillight opening. Repeat step 4 using the connector containing the yellow wire.

6. Tuck the yellow wire under the threshold panel and secure. Reinstall the plastic trim panel, jack storage panel grommets and taillights.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

