


# 55562

DODGE MAGNUM

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS

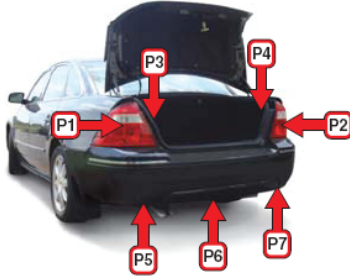

### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

3/10/09

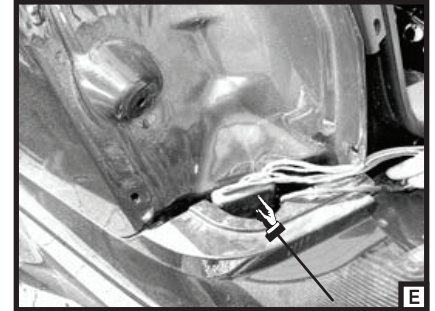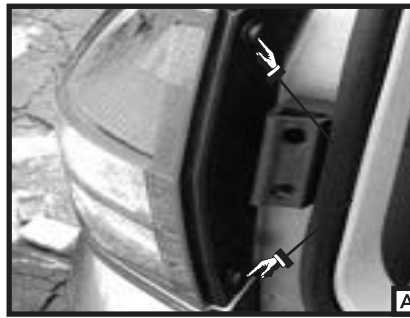

## English

1. Open the tailgate and remove the two plastic fasteners on each taillight assembly.[A] Inside vehicle remove plastic cover in rear of both taillight assemblies.[B] Under the cover pull out insulation liner to access the plastic wing nut holding the taillight assembly in place.[C] Remove plastic wing nut and pull out taillight assembly.

2. Starting on the driver's side separate the vehicles wiring harness connectors.[D] Insert the T-connector end with the yellow wire in-between the separated connectors.

3. Route the T-connector end with green wire and the 4-Flat wire down through the opening under the driver's side taillight.[E] Under the vehicle, route the green wire across the backside of the bumper and up through the opening on the passenger's side. Repeat step 2 using the green wire on the passenger's side.

4. On the drivers sider locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Route the black power wire from the battery as shown on the CME-PCL-INS sheet included.

6. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

7. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

**WARNING!**  
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



55562