

56069

VOLVO S40

English

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

5/2/2011

1. Open the trunk and remove the floor covering (A). Remove the rear scuff panel by removing two plastic fasteners (B) and pulling up (C). On both sides of the trunk pull back on the felt trunk liner to reveal the vehicle's taillight wiring harness connectors (D). The connectors will be similar to those on the T-Connector harness.

2. On the driver's side remove the green and gray connectors from the taillight housing as shown (E). Take care not to damage the locking tabs. Insert the T-Connector end with the brown wire between the separated gray connectors. Insert the T-Connector end with yellow and red wires between the separated green connectors.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white ground wire using ring terminal and screw provided.

4. Adhere the black converter box to the body panel inside the trunk behind the vehicle's felt trunk liner using the double-sided tape provided.

5. Route the T-Connector end with the green wire out from behind the felt trunk liner across to the passenger side behind the removed rear scuff panel. Repeat Step 2 on the passenger side using the T-Connector end with the green wire and green housings.



6. Route the 4-flat wire out from behind the felt trunk liner to the center of the vehicle.


7. Secure any loose wires with the cable ties provided.

8. Reinstall all items removed during install.

9. When in use, route the 4-flat out of the trunk. When not in use, roll up and store in a convenient out of the way location in the trunk.

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

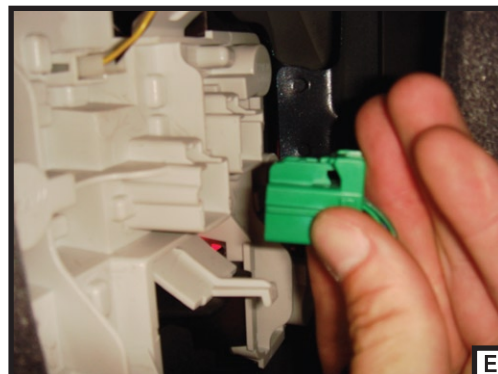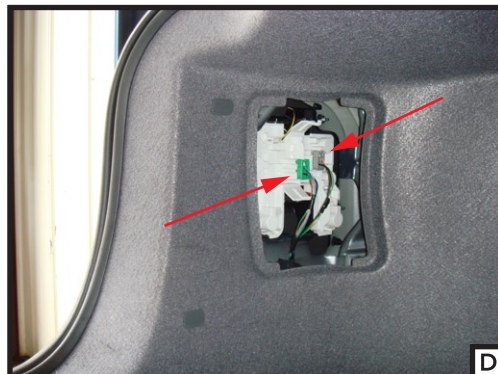

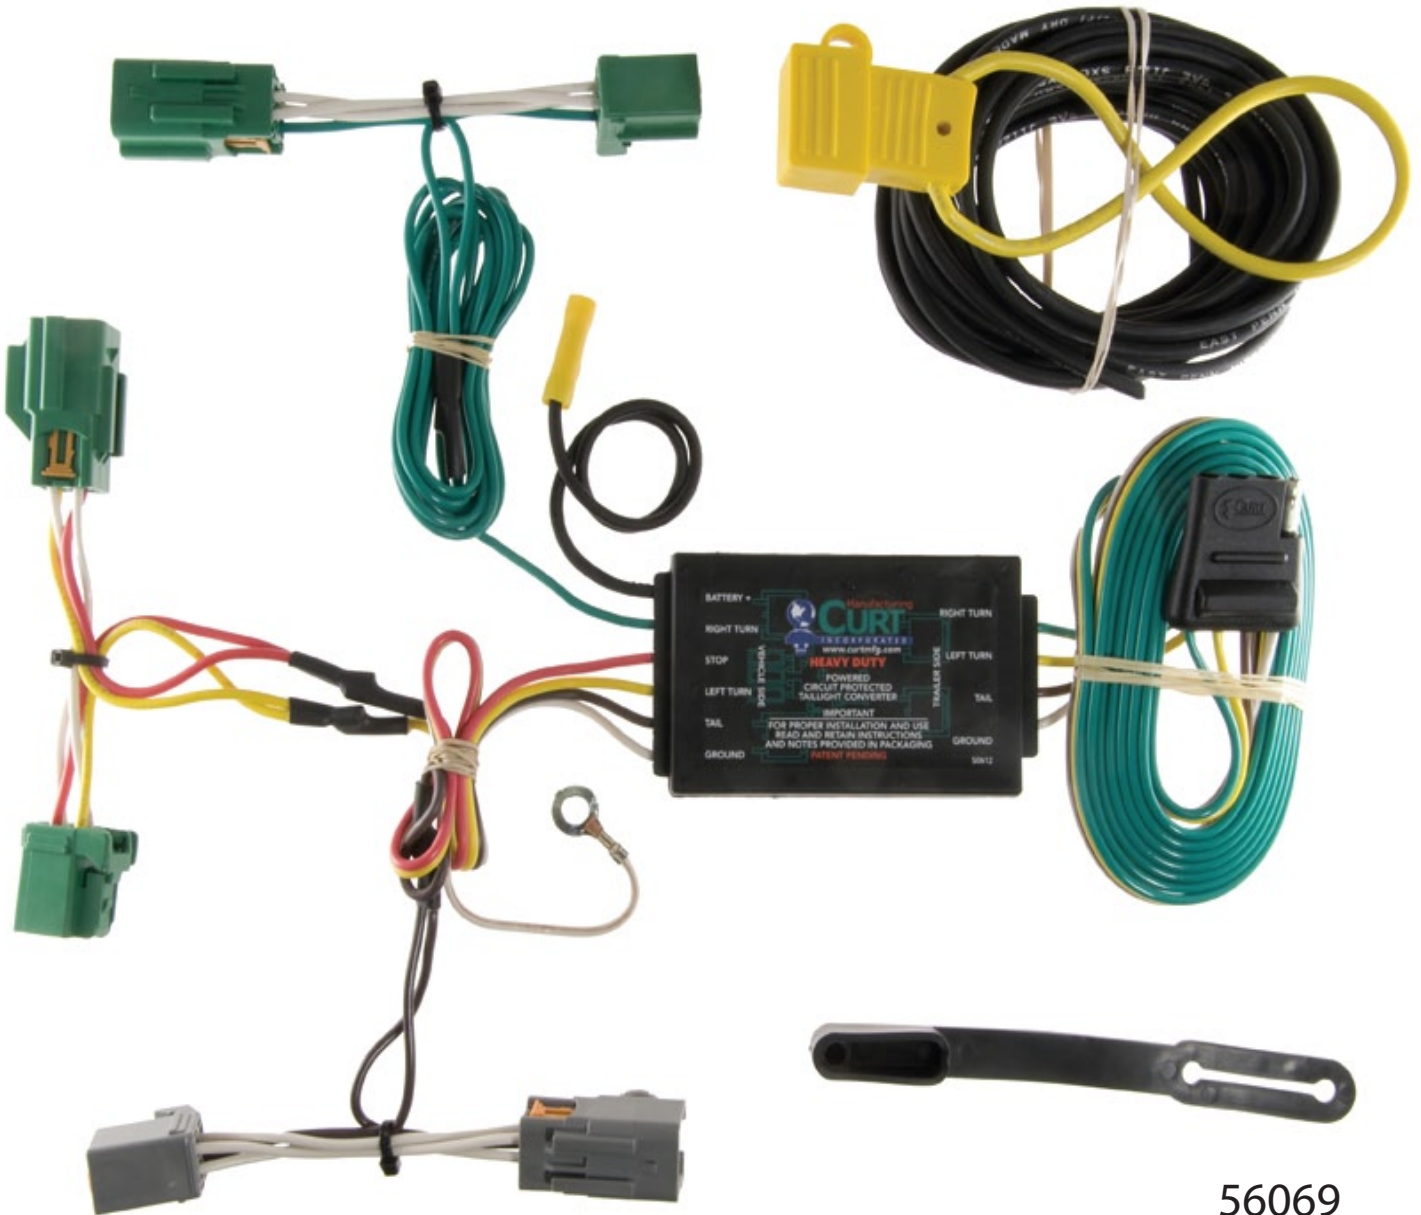

56069