



INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

Make	Model
Volvo	V70

CUSTOM WIRING HARNESS

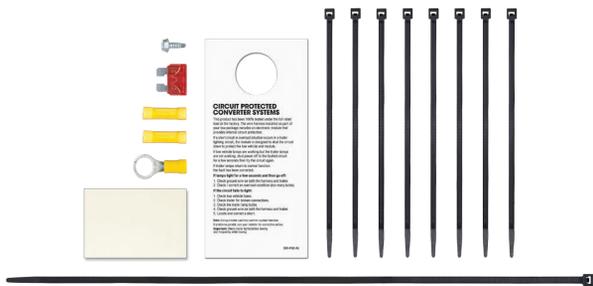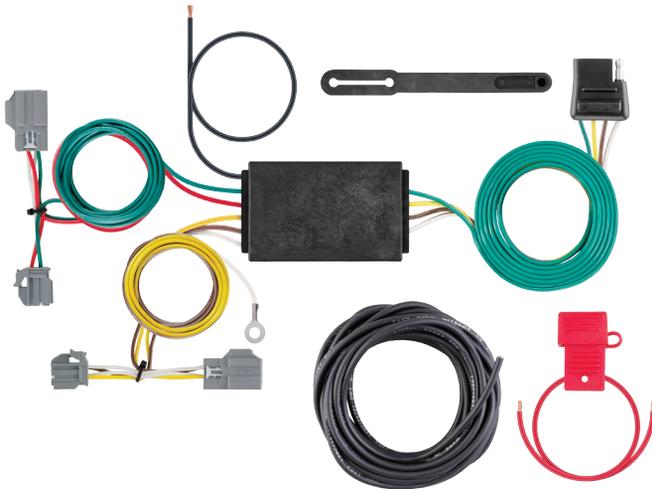

WIRING LOCATION GUIDE

PASSENGER CARS (P)

Representative vehicle shown below

P1 - Behind driver side taillight housing, outside of trunk

P2 - Behind passenger side taillight housing, outside of trunk



NOTICE

All steps must be followed to ensure the wiring harness will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

⚠ WARNING

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side

Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Open the vehicle trunk. Remove floor coverings and storage trays (A).

Step 2

On the driver side remove the access panel. Pull the foam from the opening to locate the vehicle taillight wiring harness connector. The connectors will be similar to those on the custom wiring harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs (B,C).

Step 3

Insert the custom wiring harness end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

Step 4

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint.

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

Step 5

Route the custom wiring harness end with the green wire out from under the trim panels and across to the passenger side. Repeat step 2-3 on the passenger side using the custom wiring harness end with the green wire (D).

Step 6

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape. Secure any loose parts of the custom wiring harness with the cable ties provided.

Step 7

Route the black power wire from the vehicle battery as shown on the included CME-PCL-INS sheet.

Step 8

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

Step 9

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.

