
INSTALLATION INSTRUCTIONS PART# 4926(B-C-PS) 07-13 Jeep Wrangler JK (2 Dr)

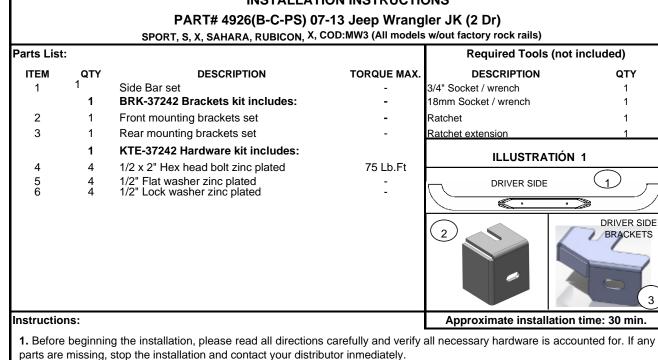

2. Locate the body mountings. See image 1.

3. Loosen the bolts using the 18 mm socket and ratchet. Note: Do not remove the bolt completely, just loosen enough to slide the brackets. See image 2 & 3.

4. Place the brackets sliding into the body mounting. Repeat for the opposite side. Leave loose.

