


PART #552 - 553 1955-57 Door Weatherstrip

Instruction Sheet Master



Revised 5/2018

1. Clean the surface of the rubber that is going to be glued to the car with 3M General Purpose Adhesive cleaner, or with lacquer thinner.
2. Clean the painted surface of the door where the weatherstrip is going to be applied with 3M General Purpose Adhesive Cleaner, or with soap and water.
3. Using a hammer and a round cylindrical object (i.e. wood dowel or brass drift), lightly tap the plastic clip into the existing holes. Pushing the plastic clip into a bar of soap will help.
4. Carefully lift the weatherstrip between the clips and apply a medium bead of 3M Weatherstrip Adhesive, part #036. On all Sedan and Station Wagons start in the middle bottom of the door and continue around. On Hardtops, Convertibles, and Nomads cut off the moulded ends from your original weatherstrip, start at the end of the moulded end and work around the door to the other end. If your original moulded ends are not of use, see Weatherstrip part #914 for 2dr Hardtop and Convertible, part #12264 and #12265 for 4dr Hardtop, and part #2091 for Nomad.
5. Keep the doors open for a minimum of 4 hours to let adhesive cure. For best results, we recommend that you leave the doors open overnight.

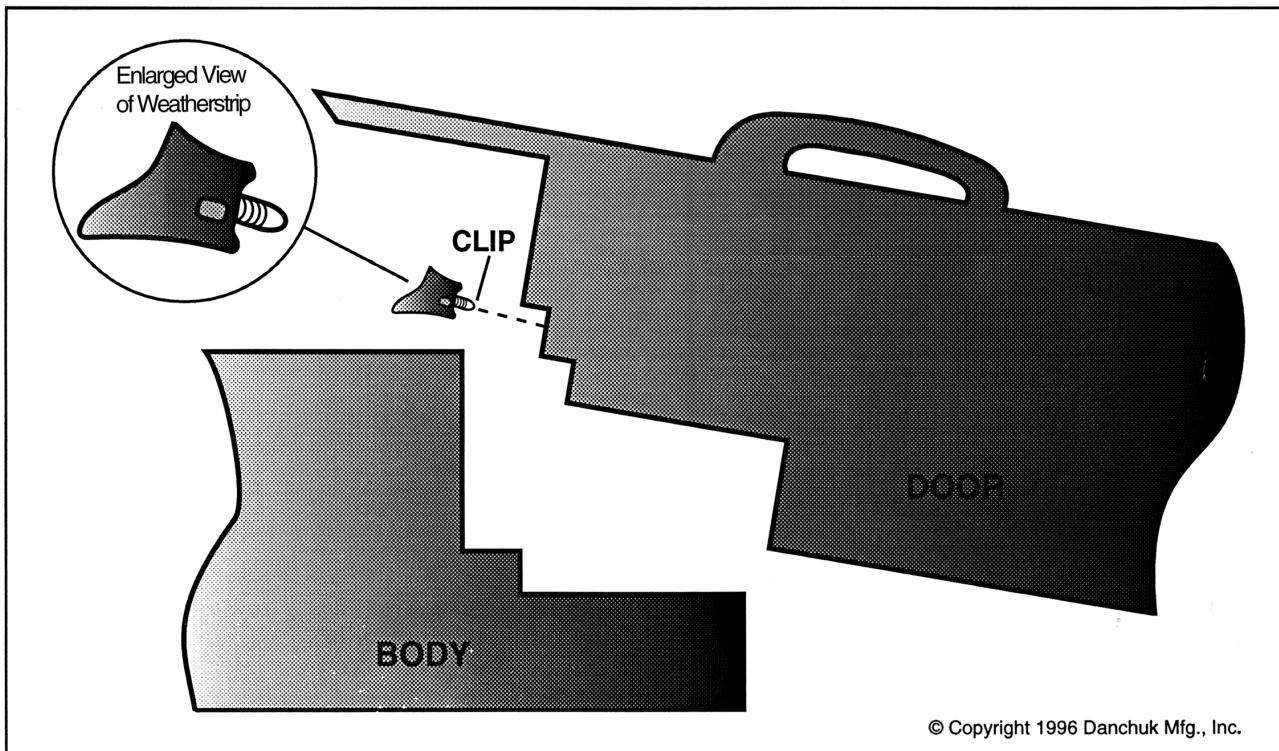

Danchuk would like to thank you for purchasing this quality reproduction part. You, the consumer, are the best source of opinions, comments and suggestions. Should you have any comments or recommendations regarding these parts or instructions, please feel free to call us.