
## - Instruction Sheet Master Revised 12/2017

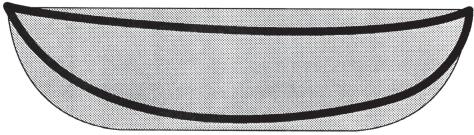


Follow the steps below to Install the seal around glass.

**Step 1**Slip the window seal onto the corner of the window.



Step 2
Work the remaining seal toward the center on both top and bottom of the window.

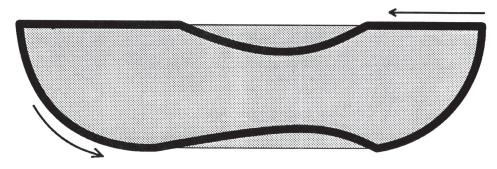

NOTE: Our window seal is just like the Original Chevrolet seal.

IF IT'S NOT HANDLED WITH CARE THE SEAL MAY TEAR.

## Step 3


Refer to your **Shop Manual** for removal and installation instructions in Section 1. Check the condition of your window moulding clips. **Order Danchuk Part #247 - Window Moulding Clips.** One set is required. Unlike the Front Windshield Seal where the moulding along the top and side insert into the rubber seal, these clips go on the body **before seal is installed.**Shop Manual:

Moulding Clips and

1955 - 522 1956 Sup. - 523 1957 - 524 Moulding Clips and Rear Corner Mouldings: 247 - Moulding Clips (1 set) 161 - 2DR Hardtop (pair)

161 - 2DR Hardtop (pair) 162 - All Sedan Models (pair)

## **Rear Glass Hardtop and Sedan**



Apply Sealant at 1 and 2 as Shown

