


## Directional Signal Exploded View

## TECH MANUAL

### Installation Instructions:

1. If steering wheel has been refinished make sure center area (see shaded area in diagram) of Steering Wheel is not painted, this will cause the horns not to function.
2. Insert the Nylon Bushing and Spring Contact into hole in steering wheel #12314 (paintable) or #12316 (black).
3. Insert the Concaved Metal Spring into place. The spring edges will rest against next to the raw metal center area of steering wheel.
4. Place the Plastic Spacer on top of Cocaved Spring.
5. Place the Horn Ring #1399 (210) #252 (Belair Models) against Plastic Spacer.
6. Insert the Plastic Ring with three pedestals through the holes on the Horn Ring, Plastic Spacer and Cocaved Spring. Install the Three Screws through the ring and snug them down. (do not over tighten this could crack the plastic ring)

### 1955 - 1956 EXPLODED VIEW HORN KITS 210 & Belair

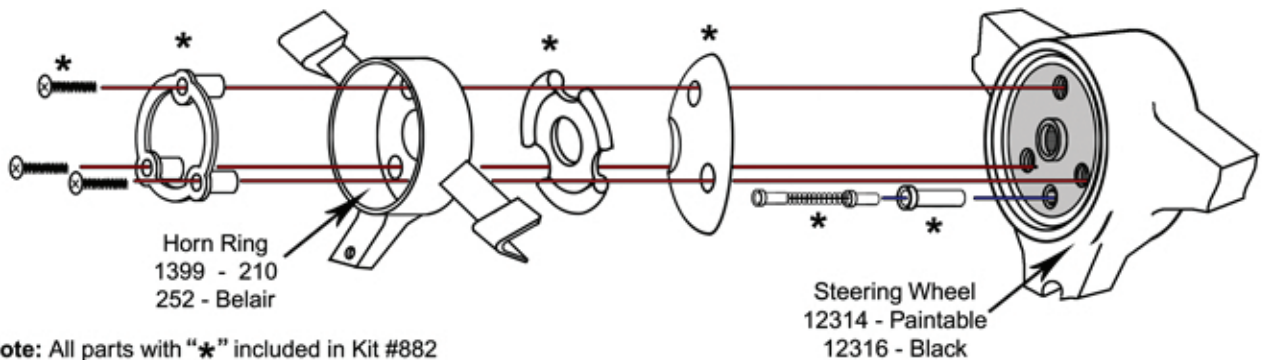

### 1955 - 1956 Exploded View Directional Signal

