



INSTALLATION INSTRUCTIONS

Armorlite™ Drain Plug Sets

Vehicle Application
Jeep Wrangler JK




INSTALLATION

1



Open top of plug assembly. Ensure that Armorlite flooring is aligned with drain holes in floor.

2

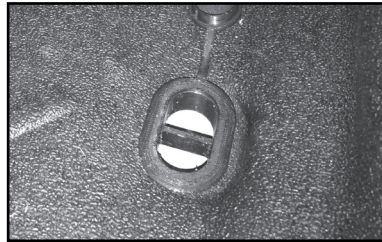

Place Armorlite plug into the Armorlite floor and into the floor of the vehicle until outer edge of the plug is fully seated into the Armorlite surface.

3



Place Armorlite tethered cap into the Armorlite plug until outer edge of the cap is fully seated on the outer plug rim.

TOOLS (OPTIONAL)

Not Included



Flat blade screwdriver



Pliers


OPERATION

1




To drain liquid from the Armorlite flooring surface, open the cap by pulling up on the tab opposite of the cap tether and pivoting cap up and out, if required.

2

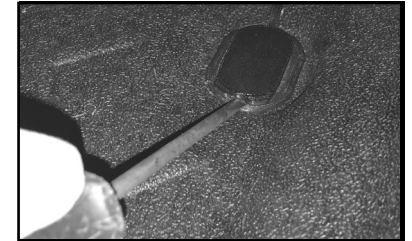

If the cap cannot be opened by hand, a flat blade screwdriver can be used. Insert the screwdriver under the tab opposite of the tether and twist to raise the cap.

3

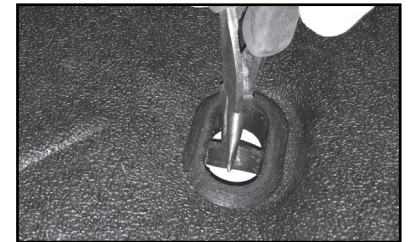

The plug can be removed by using pliers. Grasp and twist the crossover bar of the Armorlite plug and pull up for easy removal.

4

Clean any dirt or debris from plug and drain area prior to reinstalling drain plugs.



CAUTION

READ BEFORE INSTALLING

- Armorlite drain plugs are designed only to work with Armorlite flooring.
- Armorlite drain plugs should not be used as replacements for the factory drain plugs if Armorlite flooring is not installed.
- Install Armorlite drain plugs in the proper locations as noted in the instructions.
- Original factory drain plugs WILL NOT FIT PROPERLY into Armorlite flooring.
- Armorlite drain plugs are engineered and designed to fit the vehicle make and model you purchased. DO NOT INSTALL in any other vehicle make or model.
- If your vehicle is serviced, check the fit of the Armorlite drain plugs to ensure they remain securely installed.

VISIT

www.GoArmorlite.com/installation
FOR DETAILED
INSTRUCTIONAL VIDEO.

NEED SUPPORT?

Visit www.GoArmorlite.com/support
View full warranty at www.GoArmorlite.com/warranty