




Mopar[®]

PARTS

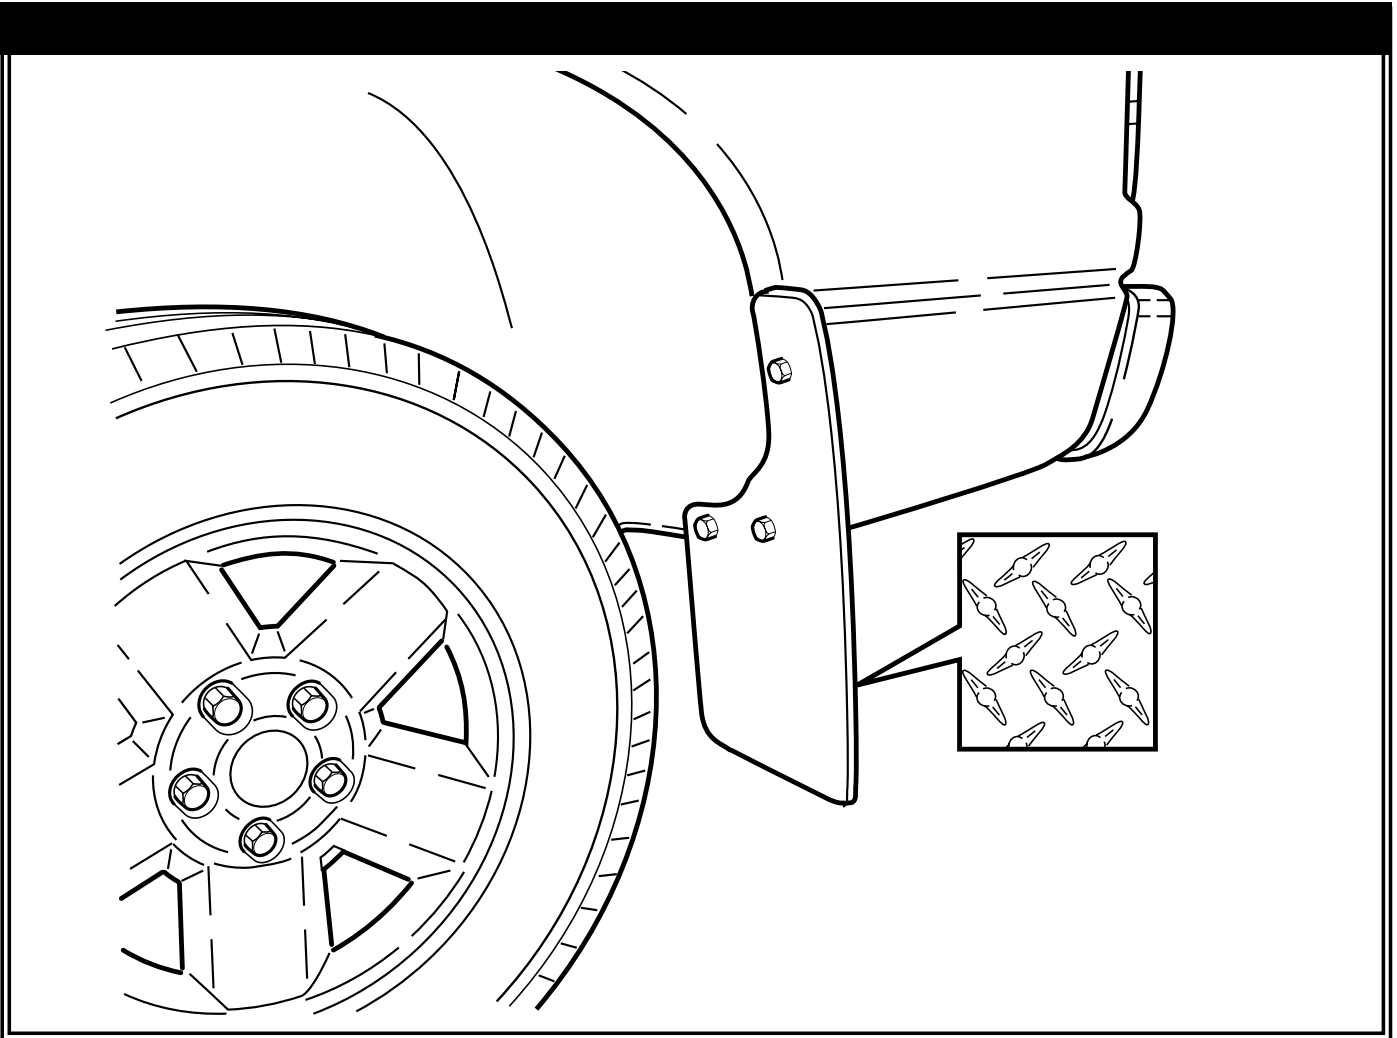

GB

INSTALLATION INSTRUCTION REAR BRIGHT TREAD SPLASH GUARDS

E

INSTRUCCIONES DE MONTAJE GUARDABARROS TRASEROS LUMINOSOS

F


NOTICE DE MONTAGE BAVETTES GARDE-BOUE ARRIÈRE, ALU RECUIT BRILLANT, MOTIF PNEU

Subject to alteration without notice
Reservadas modificaciones técnicas
Sous réserve de modifications techniques


Expert Fitment Required
Montaje sólo por el concesionario
Montage par spécialiste nécessaire

06-14-2001 K6858528


© DAIMLERCHRYSLER

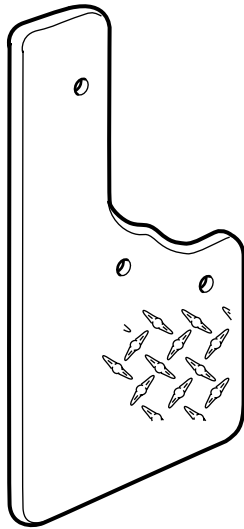


A L

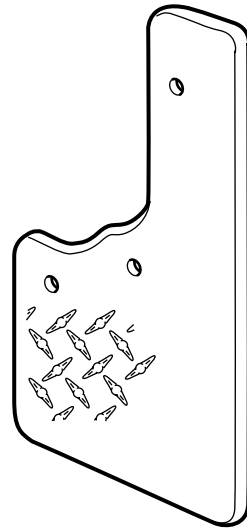


B R

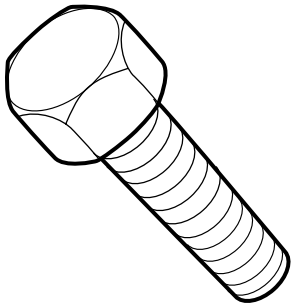

C 6x

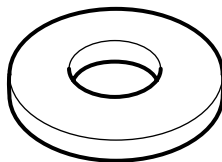


D 6x

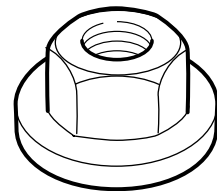

E 6x




T25



10mm




10mm

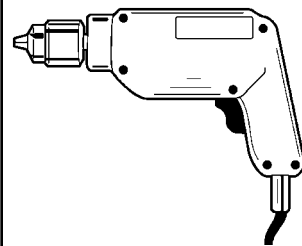


1/4"




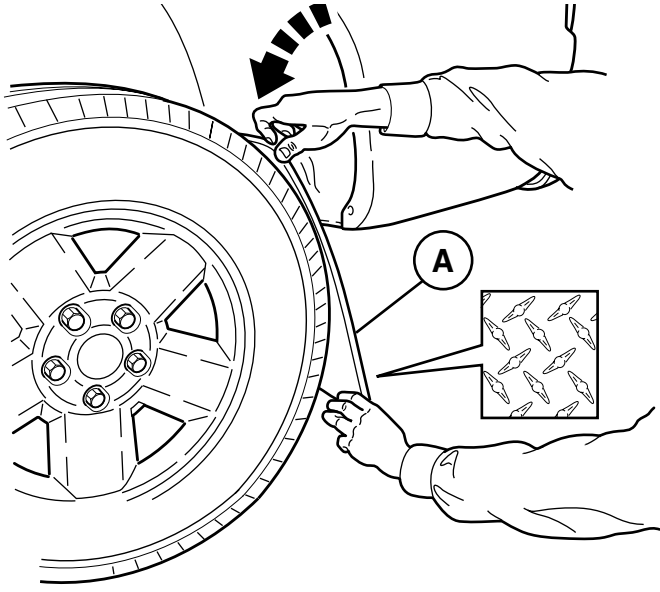

L/R

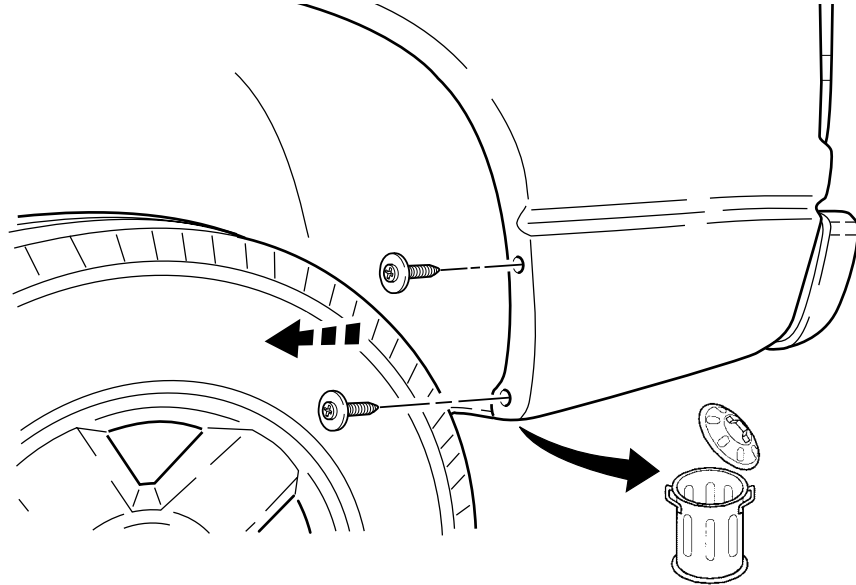

L/R

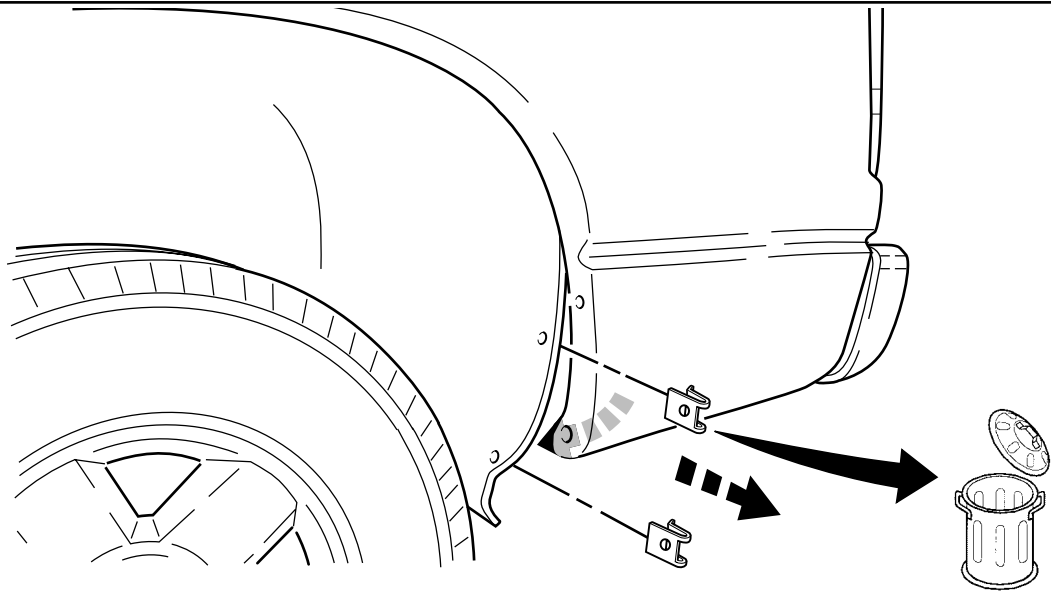

L/R

