




# Mopar<sup>®</sup>

**PARTS**

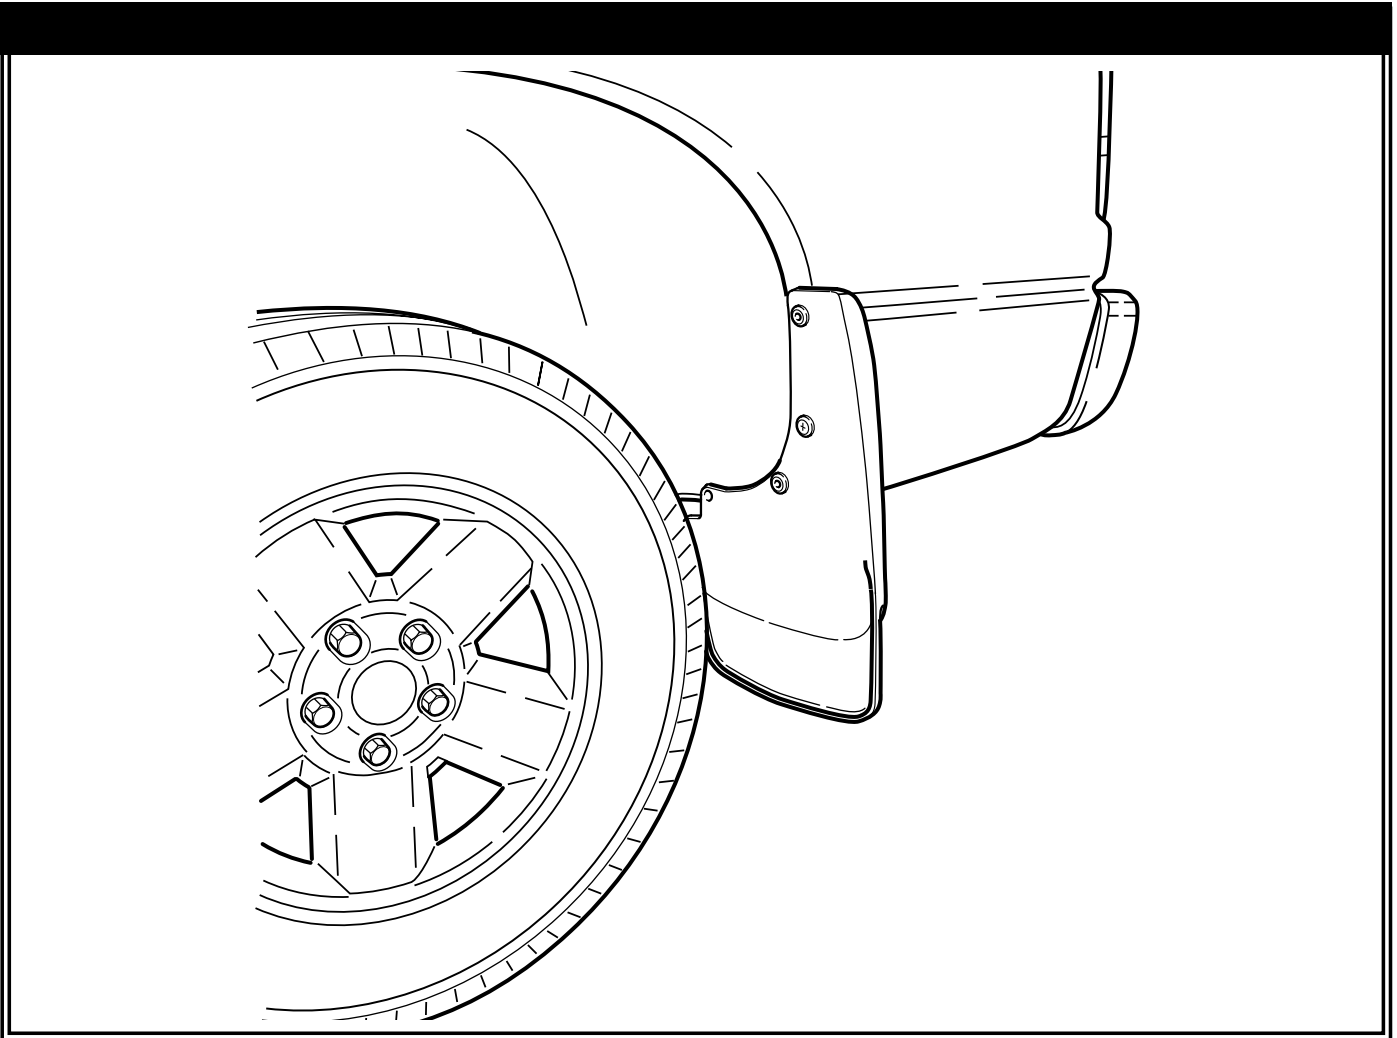

**GB**

INSTALLATION INSTRUCTION    REAR MOLDED SPLASH GUARDS

**E**

INSTRUCCIONES DE MONTAJE    GUARDABARROS TRASEROS MOLDEADOS

**F**


NOTICE DE MONTAGE    BAVETTES GARDE-BOUE MOULÉES ARRIÈRE

Subject to alteration without notice  
Reservadas modificaciones técnicas  
Sous réserve de modifications techniques


Expert Fitment Required  
Montaje sólo por el concesionario  
Montage par spécialiste nécessaire

06-13-2001    K6858541


© DAIMLERCHRYSLER

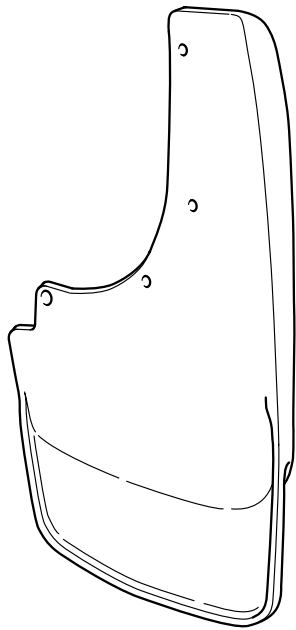


**A**

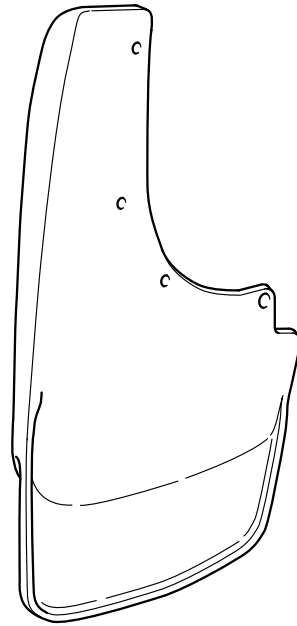

**D**

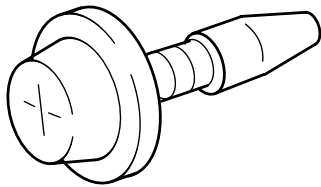


**B** 2x

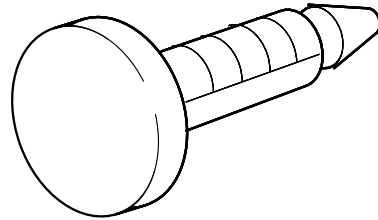


**C** 2x





T25

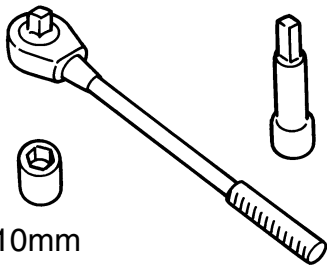

10mm

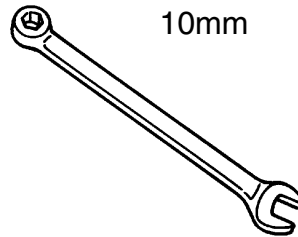

10mm

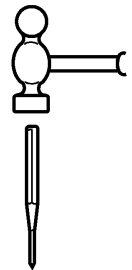

3/32 " (2.5mm)



1/4" (6.3mm)

