

*Congratulations on your purchase of a quality Dee Zee product. Dee Zee is recognized as having the highest quality running boards and accessories on the market today. We have earned this reputation by offering our customers a product they can be proud to place on their vehicles. Dee Zee meets all the criteria of manufacturing a custom-fit product which guarantees it to be the easiest product to install.*

Instructions: Please take the time to read all of the installation instructions carefully before beginning this installation.

#### **TWO YEAR WARRANTY FOR CHROME STEEL AND BLACK STEEL PRODUCTS**

Dee Zee Manufacturing, Inc. guarantees the original purchaser of Dee Zee products a five year warranty against manufacturing defects in materials, workmanship, and finish under normal use. **Warranty does not include shipping damage, product misuse, improper installation, road hazards, impairments from accidents, product modifications or product neglect, and or scratches during the life of the product. This warranty does not include rust incurred / and or corrosion to the installation brackets over the life of the product.** This five year warranty applies only to new products and is limited to the repair or replacement of Dee Zee products. Warranty does not include costs of removal, installation, labor, inconvenience or consequential damages. Original purchaser must return defective merchandise, along with the purchase receipt, to the original place of purchase.

#### **FINISH PROTECTION AND CLEANING INSTRUCTIONS**

Dee Zee products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and open it to corrosion. The use of a black automotive type touch up paint is recommended to cover up any rock chips that would be incurred during everyday use to help in the prevention of corrosion.

#### **LIFETIME WARRANTY FOR CHROME STAINLESS STEEL PRODUCTS**

Dee Zee Manufacturing, Inc. guarantees the original purchaser of Dee Zee products a lifetime warranty against manufacturing defects, materials, workmanship, and finish under normal use. **Warranty does not include shipping damage, product misuse, improper installation, road hazards, impairments from accidents, product modifications or product neglect, and or scratches during the life of the product. This lifetime warranty does not include rust incurred / and or corrosion to the installation brackets over the life of the product.** This lifetime warranty applies only to new products and is limited to the repair or replacement of Dee Zee products. Warranty does not include costs of removal, installation, labor, inconvenience or consequential damages. Original purchaser must return defective merchandise, along with the purchase receipt, to the original place of purchase.

#### **FINISH PROTECTION AND CLEANING INSTRUCTIONS**

Dee Zee products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

*If you should incur any problems with the installation of this product, please call us at  
**1-800-779-8222.***

*So that we may better serve you when you call, please have the Part Number, Bar Code  
Number or Upc Code from the labels on the outside of the box.*

# Dee Zee Nerfstep Installation Instructions


DZ 371232 (Chrome) / DZ 371231 (Black)  
(2002 – Current) Dodge Ram Quad Cab Pickup

## Parts List:


QTY:1 - Right Nerfstep  
QTY:1 - Left Nerfstep  
QTY:2 - Front Main Bracket  
QTY:2 - Rear Main Bracket  
QTY:2 - Front Auxiliary Bracket  
QTY:2 - Rear Auxiliary Bracket  
QTY:4 - Bolt Plates  
QTY:1 - Bolt Kit

## Installation Instructions:


- 1 - Read and understand instructions completely before beginning this installation. **Note: This is a non-drill application.**
- 2 - Locate and remove 4 rubber plugs at the front and rear of the vehicle on the inside of the vehicle rocker panel.

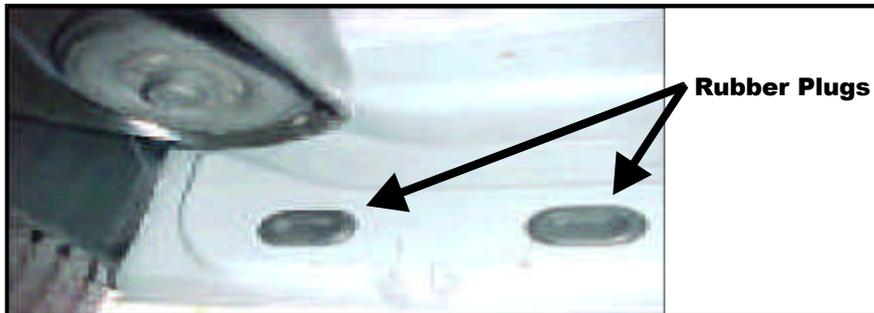


- 3 - Place the rubber washers onto the the 4 bolt plates and carefully insert them into the oval openings in the vehicle rocker panel. The rubber washers will hold the bolt plates in place while the front and rear main brackets are attached. Place the front and rear main brackets up to the bolt plates, making sure that the long end of the main brackets is to the top as shown in the picture. Secure the front and rear main brackets to the bolt plates using 3/8" flat washers, 3/8" lock washers, and 3/8" hex nuts.

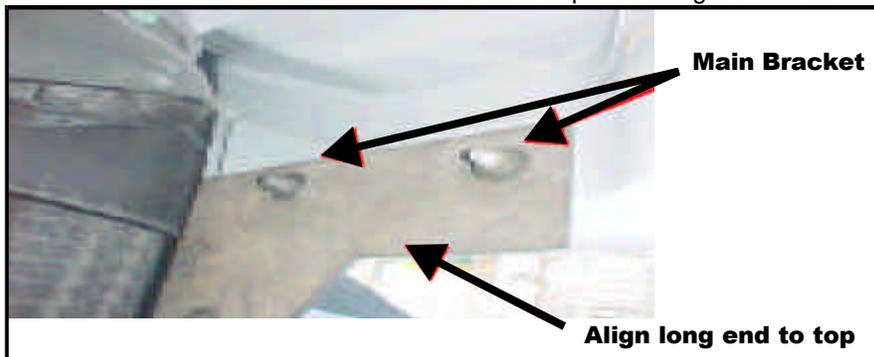

- 4 - Locate and remove the front body mount bolt from the vehicle. Place the front auxiliary bracket onto the body mount bolt and then replace the body mount bolt into the vehicle. Note: Do not tighten at this time. Repeat this process for the rear auxiliary bracket.

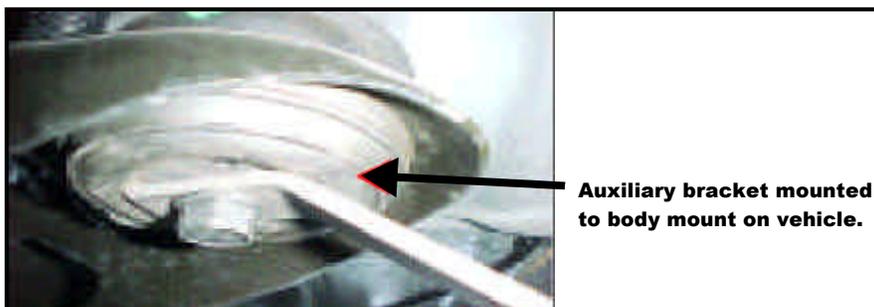

5 - Place the nerfstep up to the front and rear main brackets. Align the front main bracket, front auxiliary bracket, and the front of the nerfstep and then secure them together using a 1/2 x 2" hex head bolt, 1/2" lock washer, and 1/2" flat washer. Repeat this process for the rear of the nerfstep.

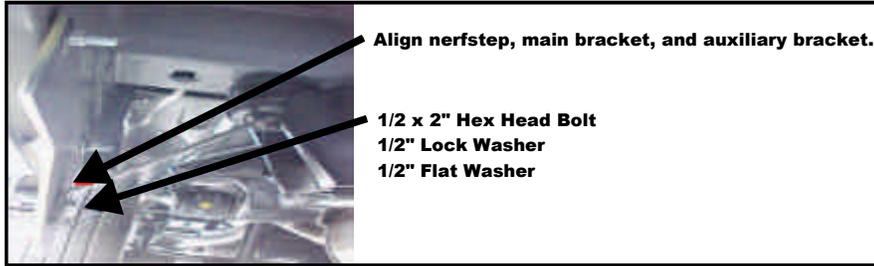

6 - Make any final adjustments to the alignment of the nerfstep and then tighten all of the fasteners until snug.

