





A-Body Mounting Instructions P4286868 & P4876658AB Kits

Figure A
Rear view

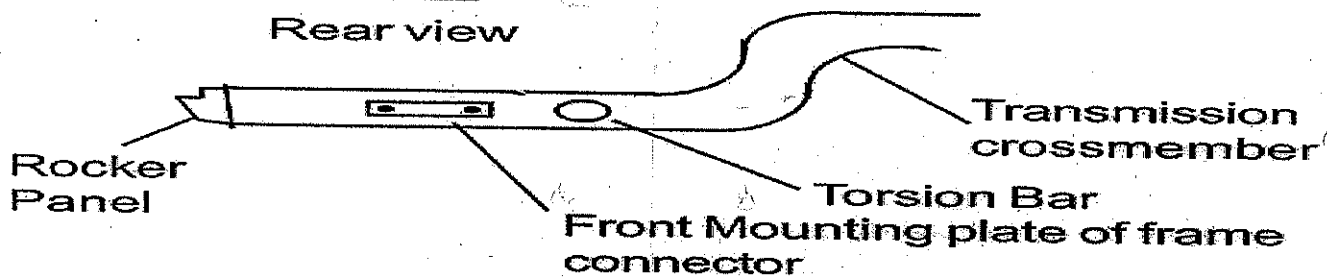

- Jack up car and set stands under rear axle.
- Clean undercoating and sand to bare metal if welding is desired.
- Set Connector at front crossmember and rear framerail. Align front plate as shown in Figure A.
- Mark holes, remove connector and drill.
- After drilling, mount connector and install bolts. **Do Not Tighten Completely!**

Side view

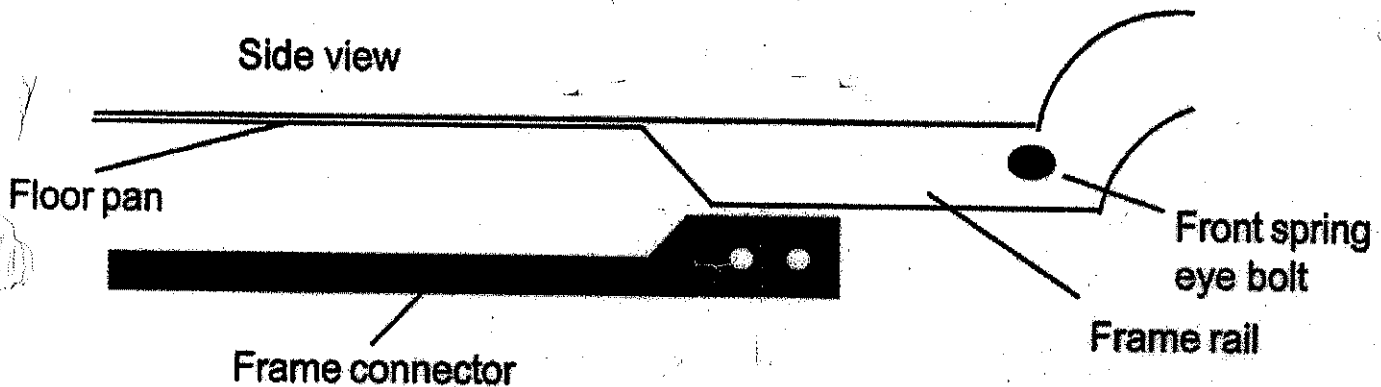

- Fit rear of connector in place.
- Mark holes, remove connector and drill holes.
- Install bolts supplied in kit.
- Tighten front and rear bolts.