



MOPAR®

B-Body Mounting instructions

P4286869

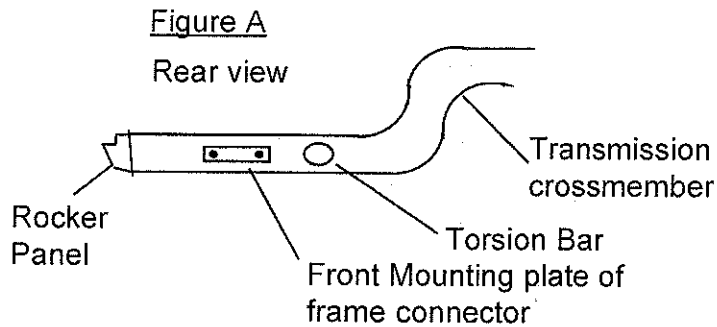

- Jack up car and set stands under rear axle.
 - Clean undercoating and sand to bare metal if welding is desired.
 - Set connector at front crossmember and rear framerail. Align front plate as shown in figure A.
 - Mark holes, remove connector and drill.
 - After drilling mount connector and install bolts.
- DO NOT TIGHTEN COMPLETELY!**

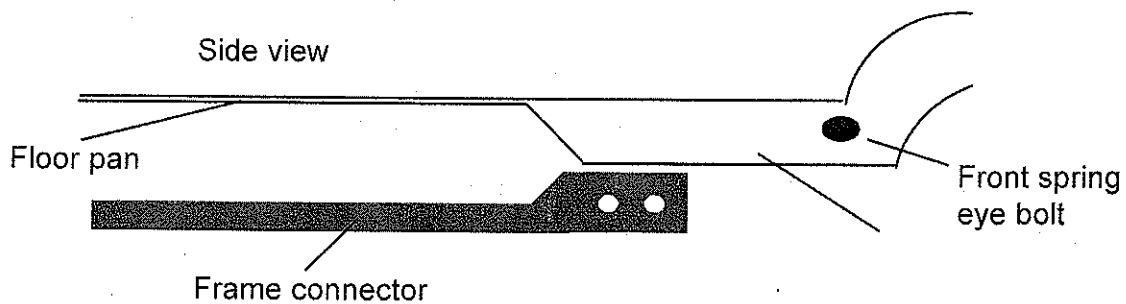

- Fit rear of connector in place.
- Mark holes, remove and drill
- Install bolts supplied and tighten front and rear.