

# Installation Instructions

## Pocket Look Fender Flare

Chevy Silverado 14-18

FF1021

**Important: Please read instructions entirely before installing this product.**

Hardware Included	QTY
Extrusion	30ft
U CLIP .6mm	12
Large CLIP .9mm	4
Screws 12g	4

Hardware Included	QTY
Alcohol Towelette	4
Abrasive resistant tape	4
Washers	4
E CLIP .6mm	2

Bolt Kit Included	QTY
Extruded Plastic Nuts	42

Ensure that both left and right hand Fender Flares suit the profile of the vehicle. Note the areas where the Fender Flares come in contact with the vehicle. NOTE: Before fitting Fender Flares remove any moldings, strips or existing flares from the wheel arch. If there is a body side molding, mark where the molding is to be cut, alternatively the Fender Flare can be cut to go around the molding. Be sure to allow enough room for the extrusion. **No drilling of vehicle is required for Bolt-On Look Fender Flares. This is a non-drill product.**



**STEP 1:** Attach the extruded plastic bolts. Peel back white tape liner from the bottom side of the extruded plastic bolt and press until it snaps into place. Ensure inside of Fender Flares where the rubber seal is attached is clean, using the alcohol wipes provided. Wipe away any residue with a dry clean cloth.




**STEP 2:** Attach the included rubber seal to the Fender Flares. Peel back 2" of the adhesive backing and position on the Fender Flare. Attach the seal to the Fender Flare, peeling back a few inches at a time. Ensure pressure is used to secure rubber seal to Fender Flare edge. Attach rubber seal along all areas the Fender Flare will make contact with the vehicle body.

# Installation Instructions

## Pocket Look Fender Flare

Chevy Silverado 14-18

FF1021

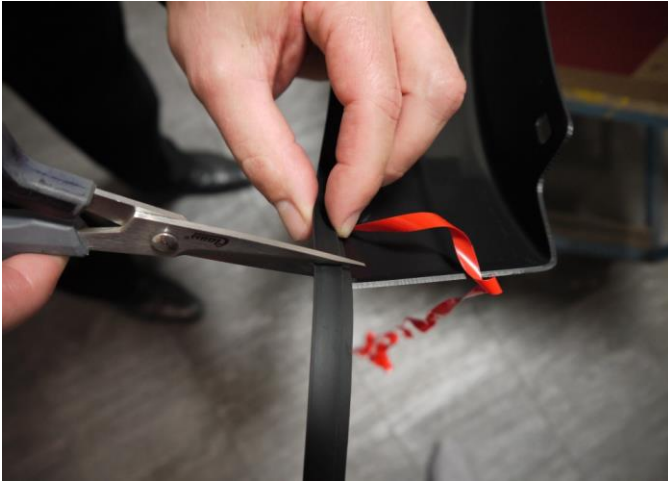

**STEP 3:** Trim any excess rubber seal and discard.



**STEP 4:** Clean the body areas where the Fender Flares will make contact. Ensure fenders are dry prior to install. Turn tires outward for Fender Flare installation.



**STEP 5:** Place Fender Flare on the vehicle into the position of best fit. Note where the slots in Fender Flare at positions **A** and **B** align with the existing screws in the vehicle wheel arch. Remove Fender Flare. Remove the existing vehicle screws in location **A** and **B** using #15 Torx head screwdriver. Maintain screws for re-install.



**STEP 6:** Using #15 Torx head screwdriver remove upper screw from the front factory mudguard. Maintain screws for re-install.

# Installation Instructions

## Pocket Look Fender Flare

Chevy Silverado 14-18

FF1021



**STEP 7:** Apply clear tape to the inside edge of the fender wheel arch in front of positions **A** and **B** (step 5) over mastic sealant. Install the large brackets in positions **A** and **B** (step 5) aligning the slot in the bracket with the vacant holes from the factory screws in the vehicle wheel arch. Ensure clips are positioned over the clear tape. Re-install the factory screws in location **A** and **B** using a #15 Torx head screwdriver.



**STEP 8:** Place Fender Flare on the vehicle into the position of best fit so the slots in position **A** and **B** are over the holes in the front end of large clips. Ensure bottom rear slot in Fender Flare is located over the vacate hole in the factory mudguard. Apply upward tension on Fender Flare to the vehicle fender when installing the screws and washers provided into the clips in position **A** and **B** using a Philips head screwdriver.



**STEP 9:** Re-install factory screw in the mudguard using #15 Torx head screwdriver through the slot in the Fender Flare.



**STEP 10:** To secure the front slot in the Fender Flare to the body, take the black metal clip and slide it over the Fender Flare and the inner wheel arch lip. Position the clip so that the barb in the clip locates in the slot of the Fender Flare. Ensure all fixing points are tight and secure and that the rubber seal is flush neatly against the vehicle body.



# Installation Instructions

## Pocket Look Fender Flare

Chevy Silverado 14-18

FF1021

### REAR FENDER FLARE INSTALLATION



**STEP 11:** Attach the extruded plastic bolts. Peel back white tape liner from the bottom side of the extruded plastic bolt and press until it snaps into place. Ensure inside of Fender Flares where the rubber seal is attached is clean, using the alcohol wipes provided. Wipe away any residue with a dry clean cloth.



**STEP 12:** Attach the included rubber seal to the Fender Flares. Peel back 2" of the adhesive backing and position on the Fender Flare. Attach the seal to the Fender Flare, peeling back a few inches at a time. Ensure pressure is used to secure rubber seal to Fender Flare edge. Attach rubber seal along all areas the Fender Flare will make contact with the vehicle body. Trim excess rubber seal.



**STEP 13:** Attach rubber seal to the bottom front corner of Fender Flares. Peel back 1" of the adhesive backing and position on the Fender Flare. Attach the seal to the Fender Flare, ensure pressure is used to secure rubber seal to Fender Flare edge. Trim excess rubber seal and discard.



**STEP 14:** Clean the body areas where the Fender Flares will make contact. Ensure fenders are dry prior to install.

# Installation Instructions

## Pocket Look Fender Flare

Chevy Silverado 14-18

FF1021



**STEP 15:** Using #15 Torx head screwdriver remove upper screw from the rear factory mudguard. Maintain screws for re-install.



**STEP 16:** To secure the Fender Flare to the body, apply upward tension on Fender Flare to the vehicle fender when installing the black metal clips. Slide the clips over the Fender Flare and the inner wheel arch lip in the five locations shown. Position the clip so that the barb in the clip locates in the slot of the Fender Flare.



**STEP 17:** Slide the top edge of rear front mudguard cut out behind the factory mudguard. Install the E shape clip so that the clip slides over the inner sheet metal lip and is in line with the slot in the underside of Fender Flare. To secure the clip to Fender Flare apply inward tension on Fender Flare to the vehicle fender when installing the E clip, position the clip so that the barb in the clip locates in the slot of the Fender Flare.



**STEP 18:** Using #15 Torx head screwdriver re-install the upper screw from the rear factory mudguard through the slot in the Fender Flare. Ensure all fixing points are tight and secure and that the rubber seal is flush neatly against the vehicle body.