

# Installation Instructions for Set #3-4149


Read these instructions carefully before installing mounts.  
Spray all nuts to be removed with your favorite rust buster.

Remove rear bumper. Remove top mounting brackets for radiator. Move radiator slightly to the side to remove bolt for position #1. Loosen all positions. Now remove the bolts on ONE SIDE ONLY! When jacking the body, use a long enough 2x4 or 4x4 for maximum support. Never put the jack directly on body panels. Remove old body mounts, now install new Energy Suspension body mounts and associated parts using the below diagram as a guide.

When disassembling, take special note of the quantity and positions of any shims that may have been inserted for body alignment. **NOTE:** When installing Position #1, be sure to remove one of the OEM washers between the body and frame and place it under the frame as shown below.

\*Dotted lines below are to define where the frame perch resides.

Tighten all bolts to factory specs.

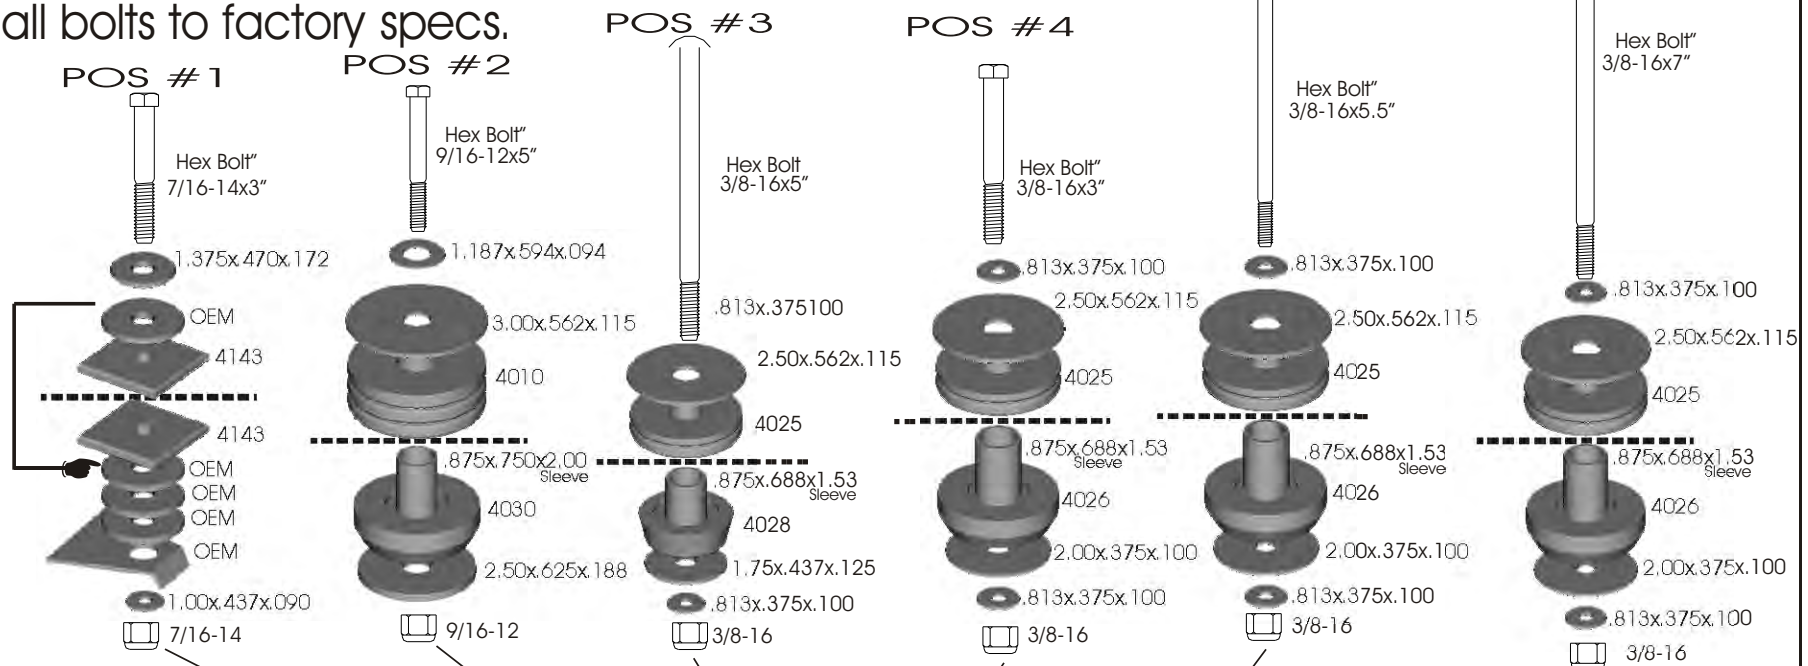

17332  
7-17-02 NJT

**FRONT**

© 2002 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.