

Set # 5-1106

ENERGY
SUSPENSION®

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673


Instructions

Remove engine mounts from vehicle and clean thoroughly. Apply heat to the rubber inserts and remove all old rubber and inner sleeve from inside the metal shells. Be sure all rubber is removed!


Install new polyurethane engine mount inserts as shown in photos. Install new inner metal sleeves being sure that polyurethane inserts remain fully pressed in.

Install engine mounts back into vehicle being sure to check hood clearance before closing hood.

Retorque to factory specs.

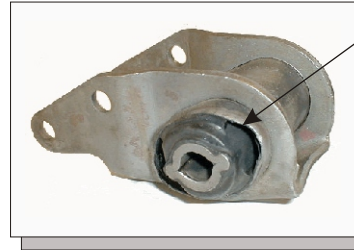


Remove rubber and metal sleeve from inside the metal shell.

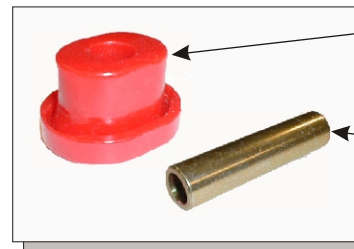

Polyurethane engine mount insert.

Inner metal sleeve.

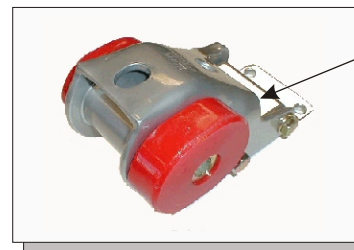

Complete engine mount assembly.

©2001 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

Set # 5-1106

ENERGY
SUSPENSION®

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673


Instructions

Remove engine mounts from vehicle and clean thoroughly. Apply heat to the rubber inserts and remove all old rubber and inner sleeve from inside the metal shells. Be sure all rubber is removed!


Install new polyurethane engine mount inserts as shown in photos. Install new inner metal sleeves being sure that polyurethane inserts remain fully pressed in.

Install engine mounts back into vehicle being sure to check hood clearance before closing hood.

Retorque to factory specs.

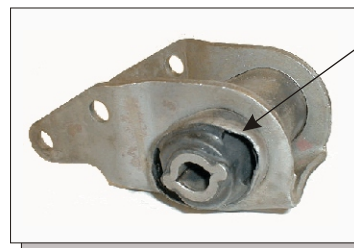


Remove rubber and metal sleeve from inside the metal shell.

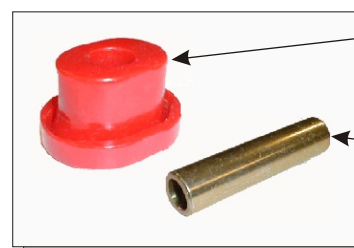

Polyurethane engine mount insert.

Inner metal sleeve.

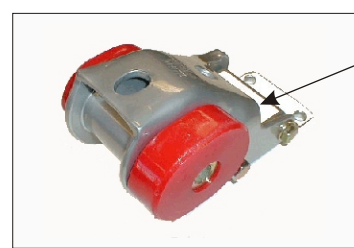

Complete engine mount assembly.

©2001 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

INST. #17351
12-03-01 JL

INST. #17351
12-03-01 JL