

Installation Instructions **5.5151**  
**2000-JAN/01 Mitsubishi Eclipse**

**ENERGY**  
**SUSPENSION**   
1131 VIA CALLEJON, SAN CLEMENTE, CA

*It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's Polyurethane.*

***The installation of this sway bar bushing set will require the removal of both left and right lower control arms.***




*Loosen and remove the forward pivot bolt on the lower control arm.*

*Loosen and remove the two vertical bolts that attach the rear bushing pivot assembly. Do this on both left and right control arms.*

*Loosen and remove the two bolts that attach the sway bar bushing retaining plate. Do this on both sides and lower bar out of position.*

*Remove old bushing.*

*Clean thoroughly the bushing surface and apply a liberal amount of the supplied grease. Install bushing onto bar and install in reverse order of removal.*

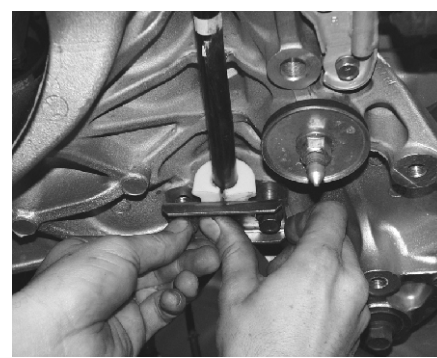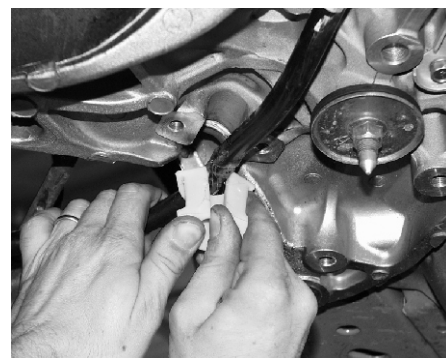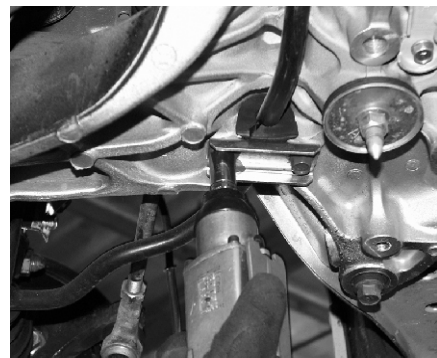

© 2005 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.

**17378**

082702PS  
Updated 15/FEB/05 BRH