

302/351W Intake Manifold INSTRUCTION SHEET

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS

Please contact the Tech Line for the most current instruction information (800) 367-3788


!!! PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION!!!

Recommended Intake Gasket:

Due to various changes in Ford cylinder heads, not all intake gaskets will work with this manifold. Be sure that you have the right intake manifold to cylinder head gasket. We recommend the M-9424-A50 intake gasket. Use of other gaskets may result in water leaks. This gasket will fit most 351W heads.

Install all 12 bolts and torque to 10 ft./lbs. Follow torque sequence shown below. Then, using same torque sequence, tighten all 12 bolts to 18 ft./lbs.

MANIFOLD BOLT TORQUE SEQUENCE

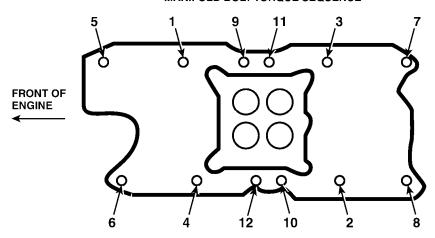

Tech Line (800) 367-3788

Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356