



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-CS03-AM-(ALL COLORS)

Tools Required

None

Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the hood. Remove the headlight retainer stake by sliding it out towards the grille.



2) Unseat the headlight and disconnect the headlight wiring harnesses.



3) Remove the headlight. Squeeze the tab indicated to loosen the lower lens assembly.




4) Unseat the lower lens assembly and disconnect the DRL socket and turn signal socket, then remove the lower lens and set it aside.



5) Reinstall the DRL socket and turn signal socket into the SPYDER lower lens assembly, then seat the lower lens assembly.



6) Reconnect the OEM headlight harness to the SPYDER upper lens Projector headlight assembly. Seat the SPYDER upper headlight lens.

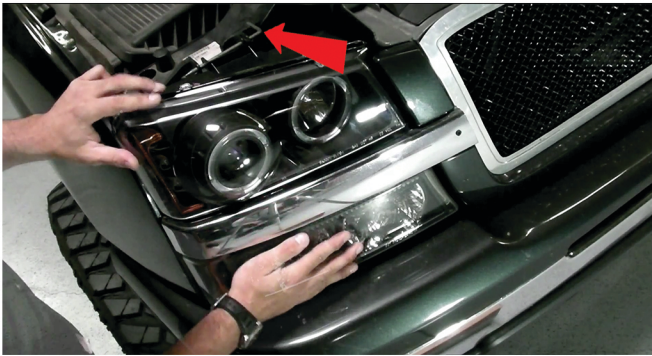

7) Reinstall the headlight retainer stake to secure the upper headlight lens assembly.



8) Close the hood and enjoy your SPYDER headlights.



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
http://www.youtube.com/watch?v=K815_S0KyaU

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.