

**54121/ 51121**  
2014 Chevrolet  
Silverado 1500



**54121/ 51121**  
2014 Chevrolet  
Silverado 1500


## 2014 Chevrolet Silverado 1500 Upper Class Grille 2pc Replacement

**TOOLS REQUIRED:**

10mm Wrench or Socket  
Flat Head Screwdriver  
Ratchet & Extensions

**PARTS LIST**


(1) Upper Class Upper Grille  
(1) Upper Class Lower Grille

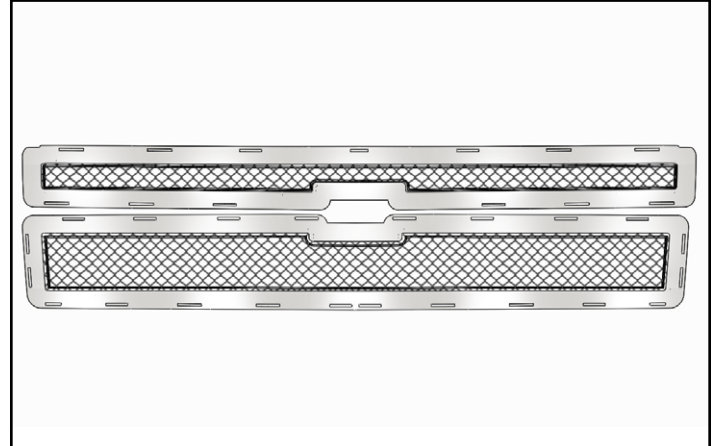

**PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION.** Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at [tech@trexbillet.com](mailto:tech@trexbillet.com) to verify fitment or assist with tech questions. All other inquires can be directed to [info@trexbillet.com](mailto:info@trexbillet.com). In the event you do not have internet access please call 1-800-287-5900.


### **Step 1**

Open hood and remove the 12 plastic push clips securing the plastic radiator shroud to the radiator core. Carefully use a flat head screwdriver to release the clip up, you can now remove the clips. Once all clips have been removed the plastic radiator shroud can be removed. (Fig 1)

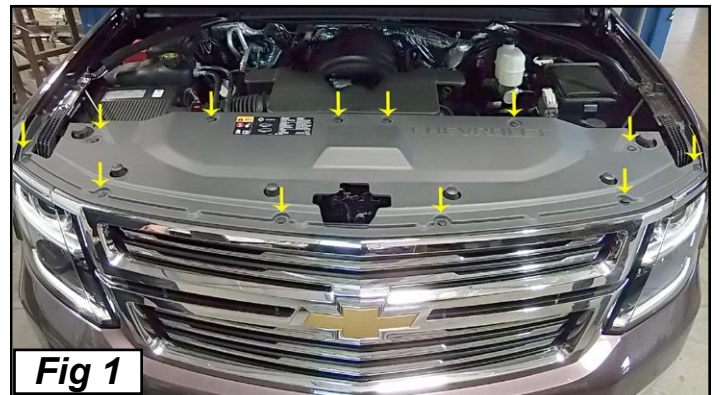

### **Step 2**

Remove the four 10mm upper bolts securing the factory grille shell to the radiator support. (Fig 2)

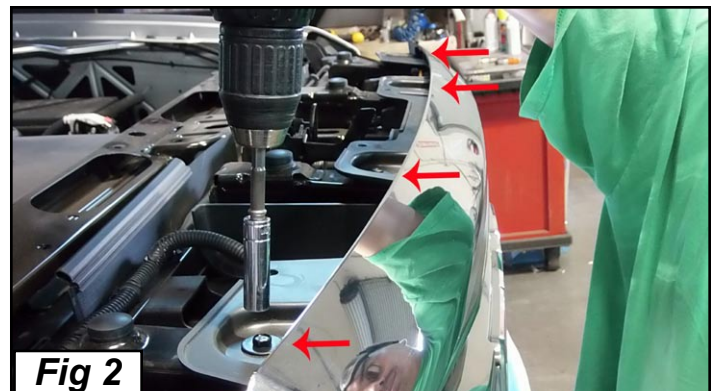

# 54121/ 51121

2014 Chevrolet  
Silverado 1500



# 54121/ 51121

2014 Chevrolet  
Silverado 1500

### Step 3

Remove the four 10mm upper bolts securing the lower section of the factory grille assembly. Two are located in the middle and once bolt on each opposite corner. (Fig 3)



### Step 4

Remove the two 7mm bolts securing the lower section of the factory grille assembly to the front fender. Two are located in the middle and once bolt on each opposite corner. Repeat on opposite side. (Fig 4)



### Step 5

The front grille assembly can now be removed from the vehicle. With the help of an assistant on the opposite side gently tilt the grille assembly up while pulling away from the vehicle at the same time. The assembly is held in place by compression clips. You can now carefully place the grille face side down for the installation of you T-REX Grille (Fig 5)



### Step 6

With your grille laying face down remove the rubber intake seal by removing the fourteen 7mm bolts. (Fig 6)



# 54121/ 51121

2014 Chevrolet  
Silverado 1500



# 54121/ 51121

2014 Chevrolet  
Silverado 1500

## Step 7

Remove the factory upper and lower grille inserts by using your flat head screwdriver to depress the tabs securing the inner grille too the grille assembly. Work your way around the entire grille assembly and remove the inner grille. (Fig 7)



## Step 8

Install the upper and lower grille replacements into the factory grille. The grilles slide over the factory grille tabs securing the grille in place. (Fig 8)



## Step 9

Your installation is now complete. Reattach the rubber intake seal and grille assembly back to the vehicle in reverse order of removal. Make sure you reconnect all disconnected wiring harness and reattach all clips and screws. (Fig 9)

