

54125
2011-12 CHEVY
CRUZE



54125
2011-12 CHEVY
CRUZE

2011-12 Chevy Cruze

Upper Class Mesh Grille

Install time: 30 Mins.

TOOLS REQUIRED:

1/16 Drillbit
Screwdriver
Torx Bit #127

PARTS LIST:



(2) Mesh Grilles
(11) #8 1" 1/4 Torx Flat Screws
(11) #8 Flatnuts (OPTIONAL)

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS
BEFORE ATTEMPTING INSTALLATION.

Step 1

- Place the Mesh Grille onto the Factory Grille. (Fig. 1)
- With the 1/16 Drillbit. Drill through the opening holes on the Mesh Grille. (Fig. 2)
- Thread with provided #8 Screws. (Fig. 3)

INSTALLATION COMPLETE
If Screws seem loose use page 2

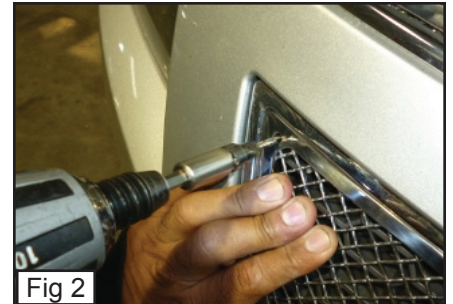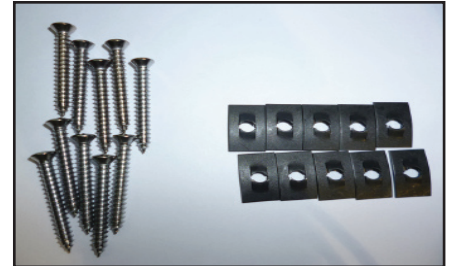

2011-12 Chevy Cruze
Upper Class Mesh Grille

OPTIONAL (installed with Flatnuts)

Step 1

- Remove 4 Clips and Two Bolts along the top of the Factory Grille. (Fig. 1)
- Remove 4 Screws Behind the Factory Grille. (Fig. 2)
- Remove 4 Screws along the Top Underside of the Factory Grille Shell. (Fig. 3)
- Remove 4 Clips that are next to the 4 screws you removed earlier behind the Factory Grille. (Fig. 4)
- Remove Top Grille. (Fig. 5)
- Place the #8 Flatnuts from behind the Grille to Thread the #8 Screws on the Mesh Grille. (Fig. 6)

INSTALLATION COMPLETE

