

2010-2012 HYUNDAI EQUUS

Upper Class Mesh Insert

Install time: 45 Mins.

TOOLS REQUIRED:

Plastic Prybar
Screwdriver
Socket Wrench

PARTS LIST:

(1) Mesh Grille (3) 6/32 Flatwashers
(4) #10 1" Screws
(4) Christmas Tree Clips
(4) U-Nuts
(3) 6/32 Nylon Lock Nuts

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS
BEFORE ATTEMPTING INSTALLATION.

Step 1

- Remove 8 Clips to Remove Plastic Cover. (Push the middle of the Clip) (Fig. 1)

Step 2

- Remove 4 Clips along the Plastic Grille Shell. (Fig. 2)

Step 3

- Remove (1) 10mm Bolt on each side on the Grille Shell. (Fig. 3)

Step 4




- From behind the Grille, On each corner Remove (1) Screw, there will also be another screw below and 4 more Screws along the bottom of the Grille Shell, Remove all of these. (Fig. 4 & 5)

Step 5

- Remove the Factory Grille. (Fig. 6)

Step 6

- Place a U-Nut on the (4) Tabs that you removed Screws from Fig. 2. (Fig. 7 & 8)

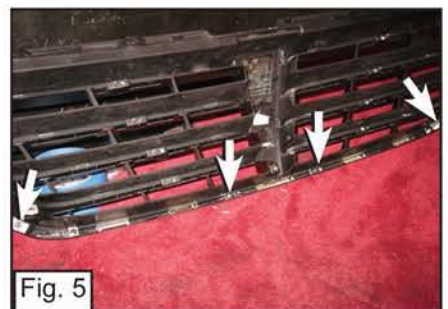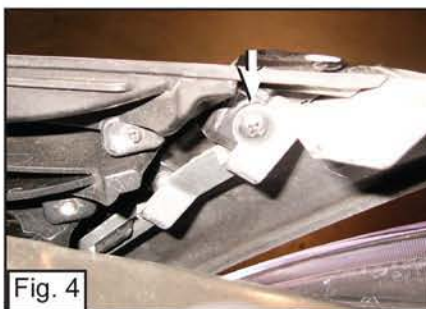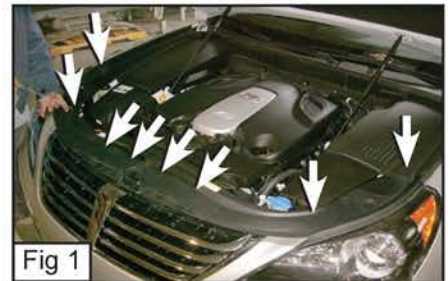

2010-2012 HYUNDAI EQUUS

Upper Class Mesh Insert

CAMERA INSTALLATION

- Remove the Camera from the Factory Grille and Place it on the Mesh Grille. Place provided Flatwashers and thread with 6/32 Nylon Lock Nuts.

On the Factory Grille, also remove the Black Plastic Cover that's on the front of the Factory Grille and place it onto the Mesh Grille.

Step 7 GRILLE INSTALLATION

- Place the Mesh Grille on the Factory Grille Opening (Fig. 9)

Step 8

- Insert the Christmas Tree Clips along the bottom Brackets of the Mesh Grille. (Fig. 10)

Step 9

- Thread a #10 Screw through the Bracket along the top of the Mesh Grille. (Fig. 11)
Re-Assemble Plastic Cover.



Fig 9



Fig10



Fig 11

Installation Complete