

T-REX

Billet Grilles

55758

2009 NISSAN
MAXIMA
BUMPER INSERT

55758

2009 NISSAN
MAXIMA
BUMPER INSERT

2009 NISSAN MAXIMA **BUMPER INSERT**

Tools Required:

Phillips Screwdriver
8mm Wrench


Hardware / Parts Included:

1	Mesh Insert	2	2.5" J Hooks
4	6/32 Nylon Lock Nuts		
2	1" J Hooks		

Read and understand instructions before attempting installation

Step 1

Open the hood and remove the factory plastic radiator cover. Remove the factory air intake plate on the driver side of the vehicle. Now remove the factory grille shell; release the molded clips along the perimeter of the grille.

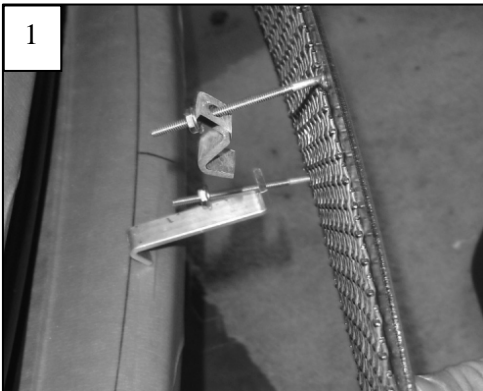

Step 2

Start to thread the shorter J hooks onto the top studs. Start to thread the longer J hooks onto the lower studs (1). Center the grille in place. Wrap the hooks around plastic bars in the openings. Use a 8mm wrench to tighten the hardware. Re-install the factory upper grille onto the vehicle.

Thank you for purchasing a T-Rex Billet Grille. 7/24/08