

55767
10-12 NISSAN
ALTIMA SEDAN



55767
10-12 NISSAN
ALTIMA SEDAN

10-12 NISSAN ALTIMA SEDAN

Upper Class Mesh Bumper

TOOLS REQUIRED:

Socket and Ratchet Set
Flathead/Phillips Screwdrivers

PARTS LIST

(1) 1/2" L-Bracket
(2) 1-1/2" J-Hooks
(3) 6/32" Nylon Lock Nuts
(1) Mesh Bumper



PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Step 1 Factory Grille Removal

Remove the six plastic pop clips on the top of the radiator cover with a flat screwdriver (Fig 1). Unlatch two latches on the top corners of the factory grille, they hold the grille to the bumper cover (Fig 2). Pull the top of the factory grille forward and reach behind the factory grille. There are six plastic latches holding the factory grille to the bumper cover along the bottom edge of the factory grille. Use your hands and a flat screwdriver if necessary to unlatch these six latches. The factory grille should now be loose and you can fully remove it (Fig 3). If you purchased a bumper mesh grille install it at this time.

Step 2 Mesh Grille Installation

Take the mesh bumper grille and insert it into the factory bumper opening from the front of the vehicle (Fig 4). Reach down through the upper grille opening where the factory grille was removed from and place the one 1/2" L-Bracket over the middle threaded stud on the backside of the mesh grille and latch it over the center plastic bar in the factory grille, install a 6/32 nylon lock nut on top and tighten (Fig 5). Take the two 1-1/2" J-hooks and place them on the two side threaded studs on the backside of the mesh grille and latch them around the plastic bars and place the nylon lock nuts on top and tighten (Fig 6). Reinstall the factory main grille and radiator cover. Installation complete.



Fig 1



Fig 2

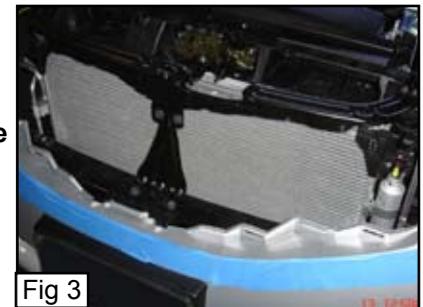


Fig 3

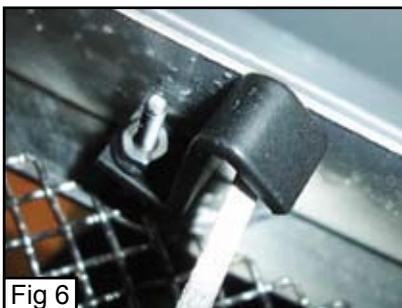


Fig 6



Fig 5



Fig 4