



55782

2008 NISSAN

Armada

55782

2008 NISSAN

Armada

NISSAN ARMADA
UPPER CLASS SERIES MESH BUMPER

Tools Required:

Small Slotted Screwdriver
8mm Socket


Part List:

- 1 Upper Class Grille
- 4 6-32 Nylon Lock Nuts
- 2 1/2" L- brackets
- 2 2" J- Hooks

Read and understand instructions before attempting installation

Step 1

Remove the factory grille from the truck. Use a small slotted screwdriver to un-clip the plastic clips. There are two on each end, four along the top and three along the bottom. Now remove the grille.

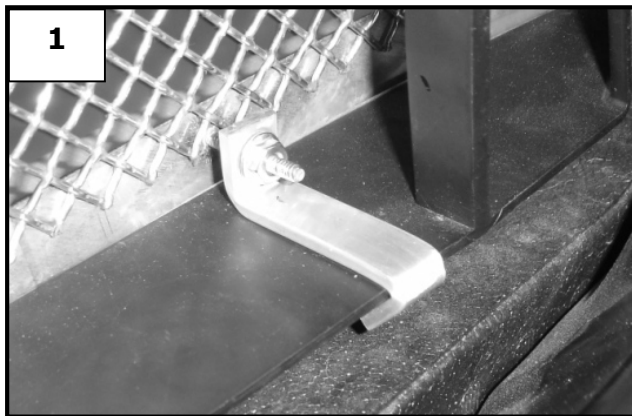

Step 2

Center the lower grille into opening. Reaching behind the bumper; secure the top of the grille with the provided L- Brackets and nylon lock nuts. Secure the lower portion of the grille using the provided J- hooks and nylon lock nuts **(1)**.

Thank you for purchasing a T-Rex Billet Grille.

8/14/07