

51186
54186, 56186
2012 CADILLAC
SRX



51186
54186, 56186
2012 CADILLAC
SRX

2012 Cadillac SRX

Upper Class Grille w/ winged OE Logo Plate

TOOLS REQUIRED:
 Socket & Ratchet Set
 Screwdriver Set
 Double Sided Tape

PARTS LIST
 (1) Main Grille (2) Zip Ties
 (1) Top Plate
 (1) Logo Plate
 (6) Christmas Tree Clips
 (10) 6/32 Nylon Lock Nuts
 (4) 6/32 Washers



FACTORY GRILLE REMOVAL

- Remove 6 Clips along the Top of the Factory Grille. (Fig. 1)
- Lift the Plastic Flap and move it out the way. (Fig. 2)
- Remove 11 Bolts (3 on each side and 3 in the center). (Fig. 3)
- Unclip the Hose that is on the Drivers Side. (Fig. 4)
- Remove a Clip on each side of the Factory Grille Shell. (Fig. 5)
- Remove the Top Plate (Lift the Grille Upwards to remove the Plate). (Fig. 6)
- There will be a Clip on the Side Behind the Factory Grille, Unclip it. (Fig. 7)
- Unclip Clips from around the Factory Grille. (Push Grille Forward to unclip Carefully). (Fig. 8)

NOTE There will be a Hose depending on your Vehicle Make that will run along the Bottom of the Factory Grille, Unclip to move Hose. Use the Zip Ties to tie the Hose to the Metal Rods in front of the Radiator. (Fig. 8A)

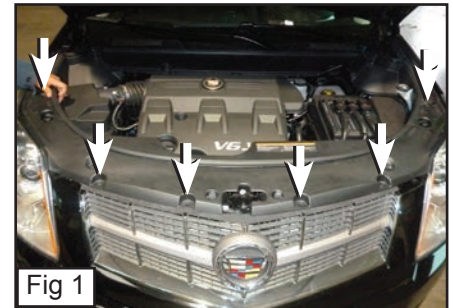


Fig 1

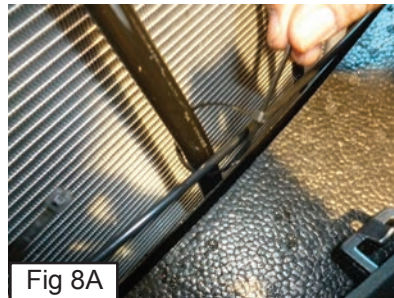


Fig 8A

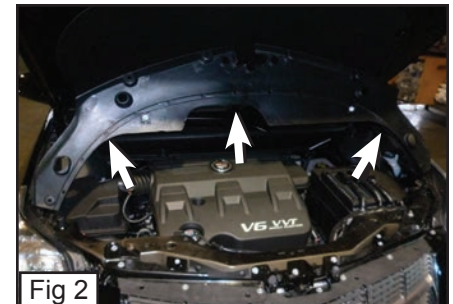


Fig 2

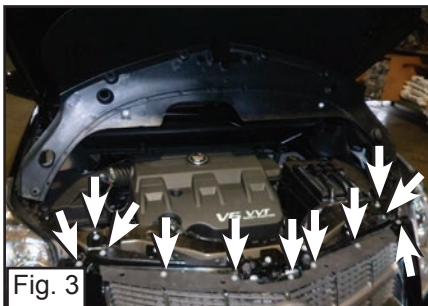


Fig. 3



Fig 4



Fig 5

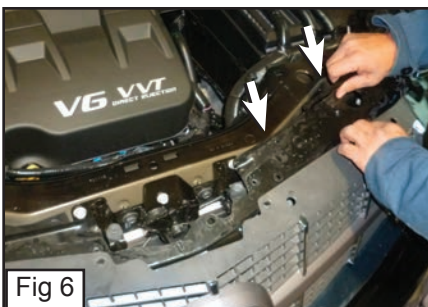


Fig 6



Fig 7



Fig 8

**51186
54186, 56186
2012 CADILLAC
SRX**



**51186
54186, 56186
2012 CADILLAC
SRX**

2012 Cadillac SRX

Upper Class Grille w/ winged OE Logo Plate

GRILLE INSTALL

- With a Fishing Line or anything Thin, Remove the Badge from the Grille Carefully. (Fig. 9)
- Break off the Tabs that are on the Badge. (Fig. 10)
- Place the Logo Plate on the Mesh Grille, From Behind the Grille, Place the 6/32 Washers and 6/32 Nylon Lock Nuts on the Threaded Studs. (Fig. 11)
- Place Double Sided Tape on the Cadillac Badges and Stick them onto the Logo Plate. (Fig. 12)
- Place the Top Plate on the Mesh Grille and Thread 6/32 Nylon Lock Nuts. (Fig. 13)
- Place the Mesh Grille onto the Factory Grille Shell. (Fig. 14)
- Place Christmas Tree Clips on the Brackets along the Bottom of the Mesh Grille. (Fig. 15)
- Re-insert the Factory Top Plate underneath the Top Plate on the Mesh Grille shown in Fig. 6 (Fig. 16)
- Re-Install the Factory Bolts on the Top Plate. (Fig. 17)

INSTALLATION COMPLETE

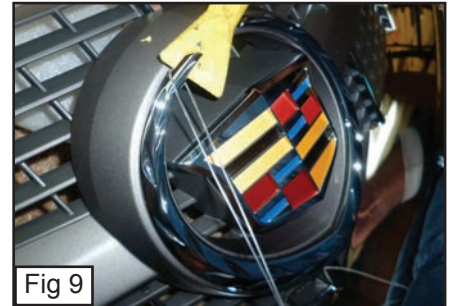


Fig 9

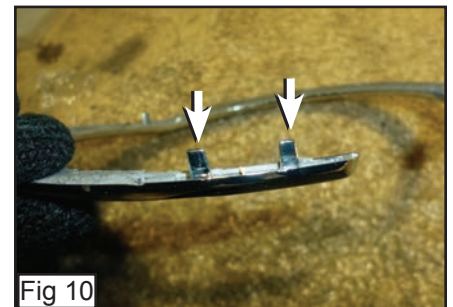


Fig 10



Fig 13



Fig 14



Fig 17



Fig.11

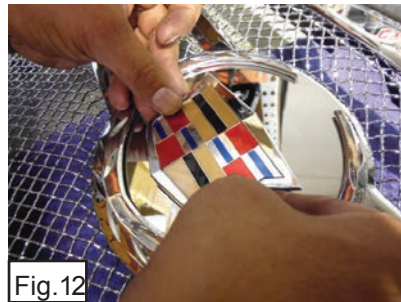


Fig.12



Fig 15



Fig 16